

# Gastro-Line Kühlschränke

## Betriebsanleitung





## 1.

### Allgemeine Information

|                                                      |   |
|------------------------------------------------------|---|
| Wichtige Sicherheitsvorschriften .....               | 4 |
| Aufstellen .....                                     | 4 |
| Anschließen .....                                    | 5 |
| Einschalten .....                                    | 5 |
| Wechseln des Türanschlages .....                     | 6 |
| Temperaturregelung .....                             | 8 |
| Abtauen .....                                        | 9 |
| Reinigung und Optimierung der Energieeffizienz ..... | 9 |
| Wartung und Kundendienst .....                       | 9 |
| Entsorgung .....                                     | 9 |

## 2.

### Thermostat Carel ijF

|                                      |    |
|--------------------------------------|----|
| Technische Bedienungsanleitung ..... | 11 |
|--------------------------------------|----|

# WICHTIGE SICHERHEITSVORSCHRIFTEN

1. Vor Inbetriebnahme des Gerätes machen Sie sich bitte mit der Gebrauchsanweisung insbesondere der Sicherheitsvorschriften vertraut.
2. Bei Zuwiderhandlung gegen diese oder fahrlässigem Gebrauch übernimmt der Anwender des Produktes die Haftung für eventuell dadurch entstehende Sach- sowie Personenschäden.
3. Im Falle einer Störung kontaktieren Sie bitte daher umgehend Ihren Fachhändler.
4. Platzieren Sie den Schrank an einem trockenen Standort.
5. Der Schrank darf nicht in der Nähe von Hitzeabstrahlenden Geräten platziert werden. Vermeiden Sie Standorte mit direktem Sonnenlicht.
6. Bitte denken Sie daran, dass alle elektrischen Geräte gefährlich sein können.
7. Bewahren Sie keine explosiven Stoffe wie z.B. chemische Verdünnungsmittel und Benzin in diesem Gerät auf.
8. Wir erklären, dass kein Asbest noch CFC im Aufbau verwendet worden ist.
9. Das Öl im Kompressor enthält nicht PWB.



Der Kühlschrank enthält das energieeffiziente und nicht ozonabbauende Kältemittel R600a/R290. Weil R600a/R290 ein sehr brennbares Gas ist, muss unbedingt darauf geachtet werden, dass der Kühlschrank im Transport und bei der Installation nicht beschädigt wird. Wenn der Kühlschrank doch beschädigt wird, darf kein offenes Feuer in der Nähe vom Schrank verwendet werden. In dem Fall darf der Schrank auch nicht Strom zugeschlossen werden. Sorgen Sie außerdem für eine gute Entlüftung vom Raum. Bei Zweifel kontaktieren Sie bitte sofort Ihren Lieferanten.

## Wichtig!

Der Boden dieses Kühlgeräts ist für hermetisch verschlossene Behälter bestimmt, die verarbeitete Lebensmittel enthalten (EN 16825).

## AUFSTELLUNG

Der Schrank wird auf einer Holzpalette für sicheren Transport geliefert. Entfernen Sie diese und stellen Sie den Schrank in einer geraden/waagrechten Position auf.

# ANSCHLIEßEN

Das Gerät hat eine Spannung von 220-240 V/50 Hz.

Der Stecker muss geerdet sein (Schuko).

Sollten Sie das Kabel ersetzen müssen, benutzen Sie unbedingt ein entsprechendes geerdetes Kabel.

Bitte beachten Sie, dass der Anschluss lediglich durch einen erfahrenen Elektriker erfolgen darf.

Wenn der Kabel beschädigt ist sollte es bei entweder der Hersteller oder ein Service Vertreter ersetzt werden um Gefahr zu vermeiden.


## EINSCHALTEN

Es empfiehlt sich das Gerät vor Inbetriebnahme zu reinigen (Näheres unter „Reinigen“).

### Wichtig!

Wenn der Schrank liegend geliefert ist, warten Sie 2 Stunden vor Einschalten.


Bitte erinnern Sie die Transportsicherung auf dem Kompressor zu entfernen. Die ganze Stange entfernen wie auf Figure:

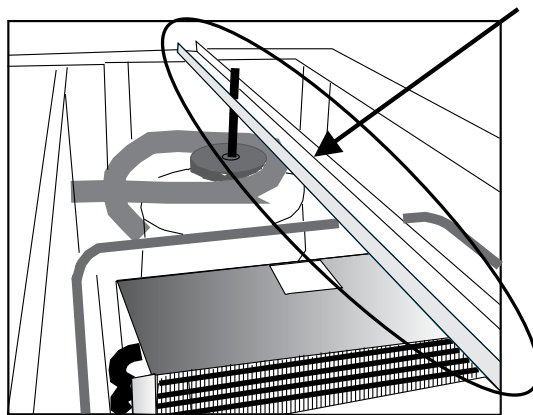


# WECHSELN DES TÜRANSCHLAGES

Wichtig! Die Tür muss geschlossen werden, wenn der Türanschlag gewechselt wird!


Öffnen Sie das Top um die in Fig. 1.2 markierte Schrauben zu entfernen.

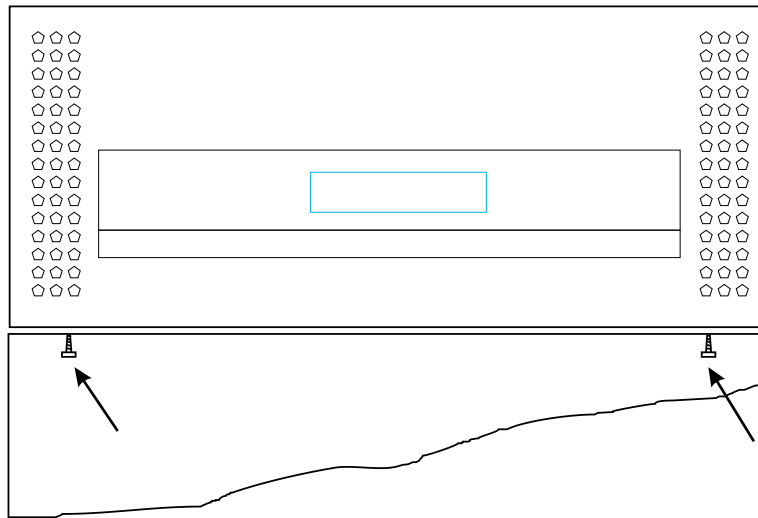


Entfernen Sie die Schlossschraube in der Türfeder, wie in Fig. 1.3 markiert. Danach lösen sie das Türscharnier und heben die Tür aus.

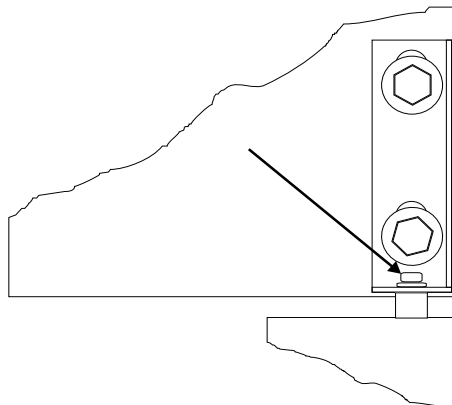


Legen Sie die Tür in der horizontaler Position und wechseln Sie die Türfeder und die Bodenbusche, siehe Fig. 1.4.

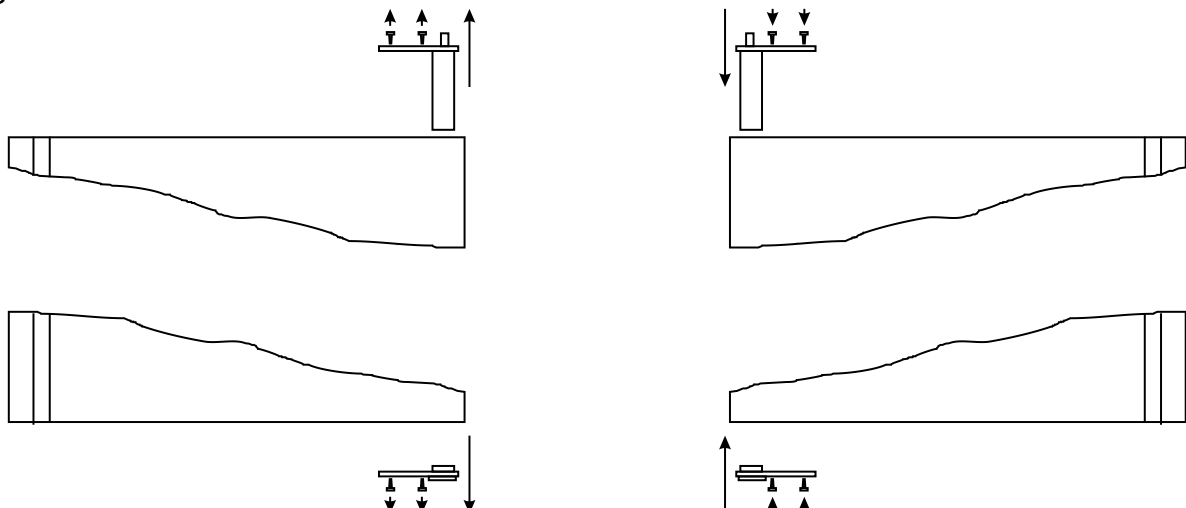


Um das Bodenscharnier zu wechseln muss man die vorne Stellschrauben/Rollen abmontieren und danach das Scharnier in der anderen Seite montieren, siehe Fig. 1.5.

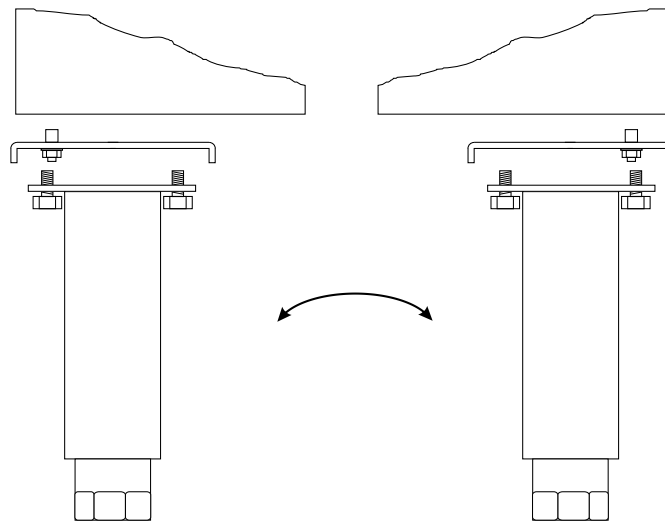

Lösen Sie das Obenscharnier in der neuen Scharnierseite und heben sie die Tür wieder auf das Bodenscharnier auf. Drücken Sie das Scharnier auf der Türfeder und festmachen. Setzen Sie die Schlossschraube ein (siehe Fig. 1.6).

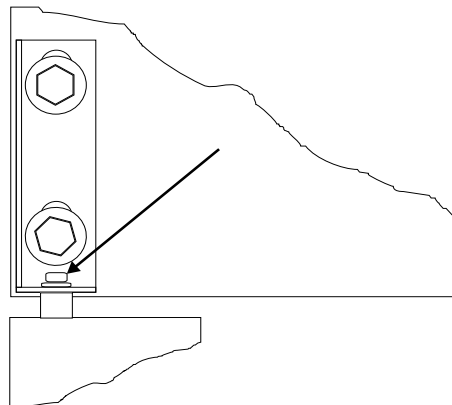

Das Top zumachen und mit Schrauben festmachen. Siehe Fig. 1.7.

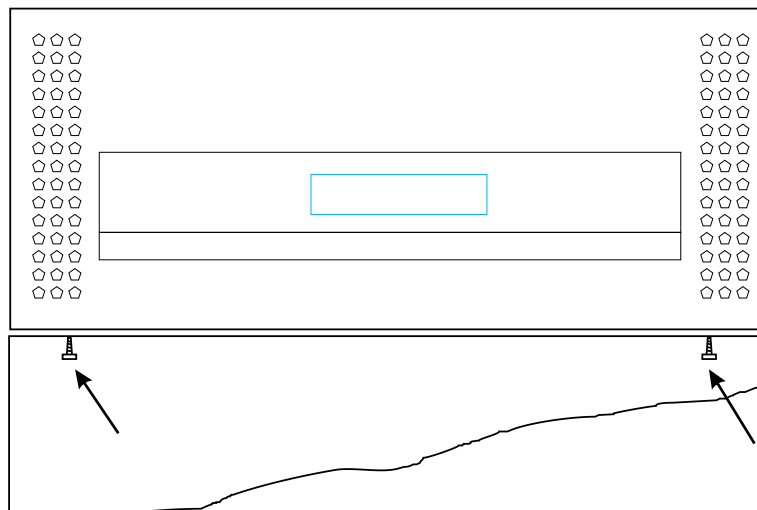

# TEMPERATURREGELUNG

Der Thermostat befindet sich in der oberen Blende.



Der Regler ist voreingestellt für den Schrank und normalerweise es ist nicht notwendig die Einstellung zu regulieren.

Bei Anschließen zeigt das Display die aktuelle Temperatur im Schrank.

## Neue Temperatur einstellen:

Drücken Sie die Taste PRG.

Display zeigt:



Drücken Sie die PRG-Taste 3 Sekunden lang.

Display zeigt:



Drücken Sie die SET-Taste.

Display zeigt die eingestellt Temperatur.



Mit den Auf-/Ab-Tasten ändern.

Durch Drücken der PRG-Taste wird der neue Wert gespeichert:



# ÄNDERUNG DER PARAMETER

Siehe Parameterübersicht vom Seite 11.

## ABTAUEN

Der Schrank wird in vorprogrammierten Intervallen automatisch abgetaut. Falls der Schrank mit häufigen Öffnungen von Tür oder häufige Auswechseln von Gefriergut äußerst belastet wird es ist vielleicht notwendig der Schrank manuell abzutauen.



Drücken Sie auf diesen Taster mehr als 3 Sekunden fängt die manuellen Abtauung statt, und dann zu normalen Betrieb zurückkehren.

Tauwasser zur Verdampfung wird in einen Behälter im Kompressorraum abgelassen.

## REINIGUNG UND OPTIMIERUNG DER ENERGIEEFFIZIENZ

Der Schrank auf Steckdose ausschalten.

In regelmäßigen Zwischenräumen den Schrank reinigen mit mildem Geschirrspülmittel innen und außen. Alles mit einem Tuch gut trocken.

Verwenden Sie keine säurehaltige Putz- und chemische Lösungsmittel, diese möchten Rostfraß auf die Oberflächen und Innenkühlsystem verursachen.

Kondensator und das übrige Kompressorraum mit Staubsauger reinigen und eine steife Bürste.

Achten Sie darauf, dass kein Wasser im Kompressorraum und in die elektrischen Teile kommt, das Kurzschluss verursachen kann.

## WARTUNG UND KUNDENDIENST

Das Kühlsystem ist ein hermetisches geschlossenes System und fordert kein Besichtigung nur Reinigung.

Bei Ausfall der Kühlung prüfen Sie ob der Netzstecker richtig in der Steckdose ist und die Sicherung der Steckdose in Ordnung ist.

Wenn keine Ursachen vorliegen und Sie die Störung nicht selbst beseitigen konnten, wenden Sie sich bitte an die Kundendienststelle. Teilen Sie die Typenbezeichnung und Seriennummer mit. Diese Informationen finden Sie auf den Typenschild in Schrank an der rechten Seite oben.

## ENTSORGUNG

Wenn der Schrank ausgedient hat, muss die Entsorgung durch eine anständig umweltmäßige Wiese vorgenommen werden. Beachten Sie die Vorschriften für Entsorgung. Es gibt z.B. Spezialforderungen und Bedingungen zu beachten.





# Gastro-Line Køleskabe

## Brugsvejledning





## 1.

### Brugsvejledning

|                                                               |   |
|---------------------------------------------------------------|---|
| Vigtige informationer og energi besparende anbefalinger ..... | 4 |
| Udpakning og opstilling .....                                 | 4 |
| EI-tilslutning .....                                          | 5 |
| Opstart .....                                                 | 5 |
| Vending af dør .....                                          | 6 |
| Termostaten .....                                             | 8 |
| Afrimning .....                                               | 9 |
| Vedligeholdelse .....                                         | 9 |
| Service .....                                                 | 9 |
| Bortskaffelse .....                                           | 9 |

## 2.

### Termostat Carel iJF

|                      |    |
|----------------------|----|
| Teknisk manual ..... | 11 |
|----------------------|----|

# VIGTIGE INFORMATIONER OG ENERGI BESPARENDE ANBEFALINGER

1. For at få det fulde udbytte af kølemøblet, bør De læse denne brugsvejledning igennem.
2. Det er brugers ansvar at anvende kølemøblet i henhold til instruktionerne.
3. Kontakt omgående forhandleren, såfremt der opstår fejl ved kølemøblet.
4. Kølemøblet bør anbringes i et tørt og tilstrækkeligt ventileret rum.
5. Kølemøblet bør ikke placeres i nærheden af varmekilder eller direkte sollys.
6. Varme drikke og madvarer bør køles ned inden de placeres i kølemøblet.
7. Væsker bør opbevares i tildækkede beholdere for ikke at få luftfugtigheden til at stige i kølemøblet og få køletiden til at forøges.
8. Åbne døre og skuffer så kortvarigt som muligt.
9. Kontrollere at døre og skuffer lukker tæt og rengør tætningslisterne jævnligt.
10. Bemærk at alle elektriske apparater kan medføre farer.
11. Opbevar ikke eksplosionsfarlige stoffer, f.eks. gas, benzin, æter og lignende.
12. Der er ikke brugt asbest eller CFC i konstruktionen.
13. Olien i kompressoren indeholder ikke PCB.



Kølemøblet indeholder det energirigtige og ikke ozonnedbrydende kølemiddel R600a/R290. Da R600a/R290 er en brandfarlig gasart, er det vigtigt, at kølekredsløbet ikke beskadiges under transport og ved installering.

Hvis kølekredsløbet alligevel beskadiges, skal du undgå at bruge åben ild i nærheden af køleskabet, ligesom der heller ikke må tilsluttes strøm til skabet. Sørg desuden for god udluftning i rummet. Er du i tvivl, skal du kontakte din leverandør.

## Vigtigt !

Bunden af dette kølemøbel er velegnet som opbevaringsareal af hermetisk lukkede beholdere med forarbejdede fødevarer (EN 16825).

## UDPAKNING OG OPSTILLING

Produktet leveres emballeret, undersøg denne for skader inden udpakning

# EL-TILSLUTNING

Kølemøblet er beregnet for tilslutning til 220-240 V/50 Hz. Tilslutningen skal ske ved en stikkontakt, der bør være let tilgængelig.

Dette kølemøbel skal ekstrabeskyttes ifølge stærkstrømsreglementet. Dette gælder også, selvom der er tale om udskiftning af et eksisterende kølemøbel, der ikke har været ekstrabeskyttet. I bygninger opført før 1. april 1975 er ekstrabeskyttelsen i orden, hvis der er installeret HFI-afbryder, som beskytter den stikkontakt kølemøblet skal tilsluttes.

I begge disse tilfælde skal der, hvis stikkontakten er for trebenet stikprop, benyttes en trebenet stikprop, og lederen med grøn/gul isolation skal tilsluttes jordklemmen (mærket ).

Hvis stikkontakten kun er for tobenet stikprop, benyttes en tobenet stikprop. Hvis brugeren selv monterer denne, skal lederen med grøn/gul isolation klippes af så tæt som muligt på det sted, hvor lederen går ind i stikproppen.

I alle andre tilfælde bør De lade en autoriseret el-installatør undersøge, hvordan De nemmest får ekstrabeskyttet kølemøblet. Hvis De ikke har ekstrabeskyttelse i bygningen i forvejen, anbefaler Elektricitetsrådet, at De lader el-installatøren opsætte en PFI- eller HPFI afbryder.


## OPSTART

Inden kølemøblet tages i brug, anbefales det at rengøre dette, se afsnit om vedligeholdelse.

### Vigtigt !

Hvis kølemøblet har ligget ned under transport, vent 2 timer før opstart.


Husk at fjerne transportsikring på kompressor, fjern hele stangen som vist i fig. 1.8.

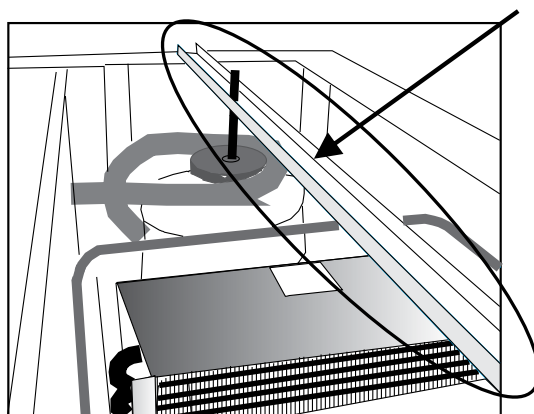


# VENDING AF DØR

HUSK dette skal foretages når døren er åben !


Åben toppen ved at fjerne markerede skruer i fig. 1.2.

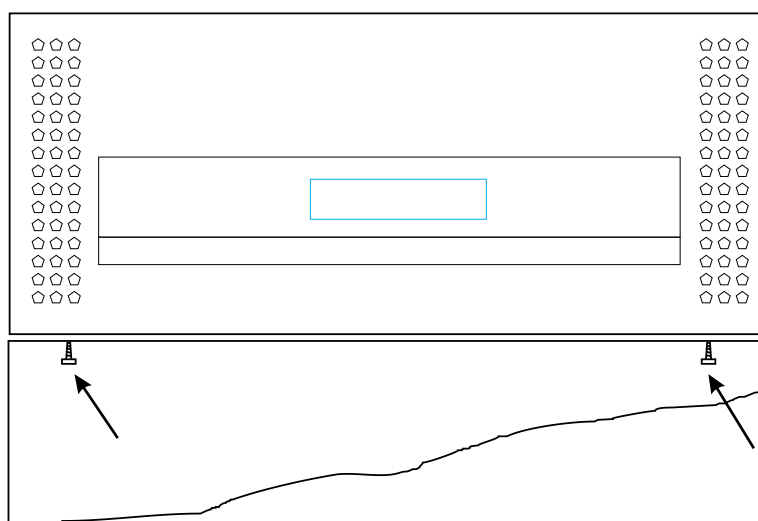


Fjern låseskrue i dørfjeder, markeret i fig. 1.3, hængslet løsnes og døren løftes af.

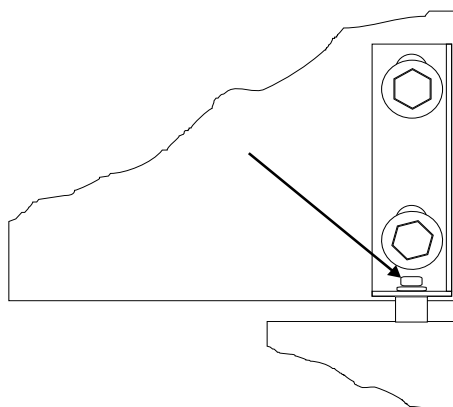


Døren ligges ned hvorefter dørfjederen og bund-bøsningen ombyttes, se fig. 1.4.

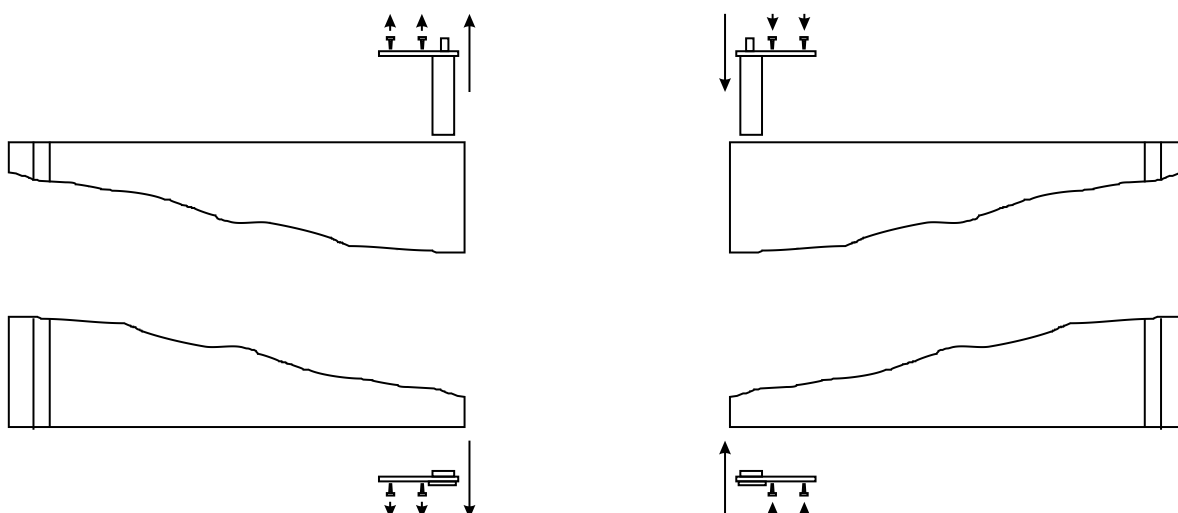


Bundhængsel flyttes ved at afmontere de forreste ben/hjul og derefter montere i modsatte side, se fig. 1.5.

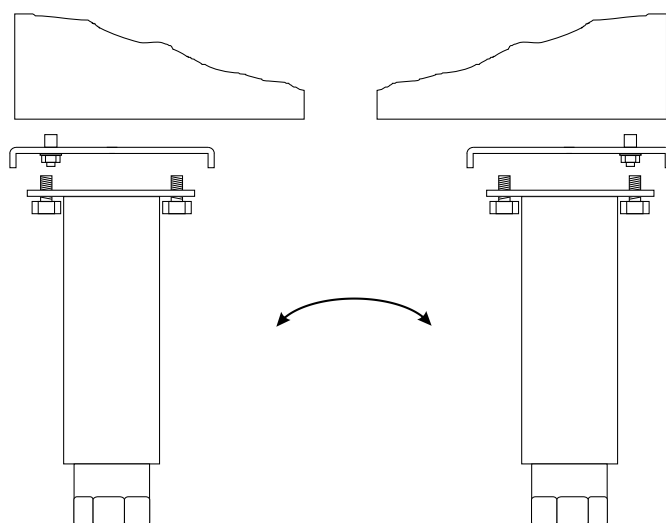

Tophængsel i ny hængselside løsnes og døren løftes på plads på bundhængsel. Hængsel trykkes ned på dørfjeder og fastgøres. Isæt låseskrue se fig. 1.6.

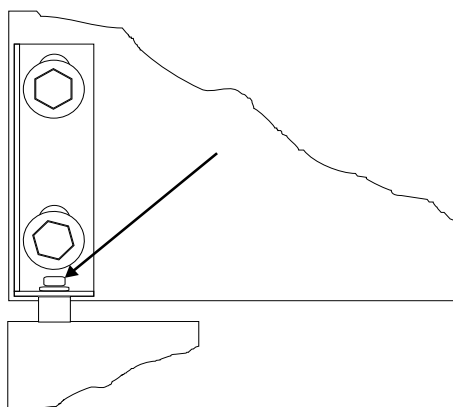

Luk og fastgør top med skruer se fig. 1.7.

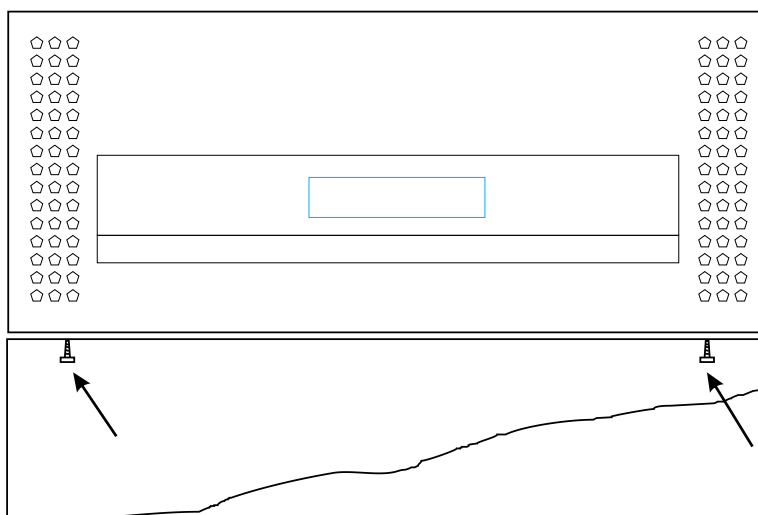

# TERMOSTATEN

Termostaten er placeret i top panelet



Termostaten er for-programmeret så kølemøblet er klar til brug. Hvis der skal justeres i indstillinger følg denne vejledning.

Når skabet tændes vil display vise den aktuelle temperatur i møblet.

## Indstil ny temperatur:

Tryk på Prg-tasten.



Display viser:



Tryk på Prg-tasten i mere end 3 sekunder.



Display viser:



Tryk på Set-tasten.



Display viser Set temperaturen:



Brug Pil-tasterne for at justere.



Tryk på Prg-tasten for at gemme den nye temperatur:



# ÆNDRING AF PARAMETRE

Se parameter oversigt og manualer fra side 11.

## AFRIMNING

Kølemøblet afrimer automatisk med forprogrammerede intervaller. Hvis møblet belastes ekstremt med hyppige åbninger af dør eller hyppig udskiftning af varer, kan det blive nødvendigt at udføre en manuel afrimning.



Tryk på denne tast i mere end 3 sec., dette vil starte en manuel afrimning og derefter vende tilbage til normal drift.

Tøvand ledes ud til fordampning i en beholder, der er placeret i kompressorrum.

## VEDLIGEHOLDELSE

Afbryd kølemøblet på stikkontakten.

Med passende mellemrum skal kølemøblet rengøres. Udvendig og indvendige rengøring foretages med svag sæbeopløsning og aftørres grundigt

Rengøringsmidler må IKKE indeholde klor, klorforbindelser eller andre aggressive midler, da de kan forårsage tæring på overflader og på det indvendige kølesystem.

Ventilationsristen holdes bedst rent ved hjælp af en støvsuger og en stiv børste.

## SERVICE

Kølesystemet er et hermetisk lukket system og kræver ikke tilsyn, kun renholdelse.

Ved svigt i kølevirkningen, undersøg om årsagen er afbrydelse i stikkontakt eller sikringsgruppe.

Kan grunden til svigt ikke findes, må De henvende Dem til Deres leverandør. Ved al henvendelse bedes De oplyse skabets typenavn og serienummer. Disse oplysninger findes på typenummerskiltet placeret indvendigt i højre side.

## BORTSKAFFELSE

Når det udtjente kølemøbel skal bortskaffes, skal det ske på en miljømæssig forsvarlig måde. Vær opmærksom på reglerne for bortskaffelse. Der kan være særlige krav og betingelser, der skal overholdes.





# Gastro-Line Mesas frías

## Manual del usuario





# SOMMARIO

## 1.

### Información general

|                                                               |   |
|---------------------------------------------------------------|---|
| Importantes instrucciones de seguridad .....                  | 4 |
| Desembalaje e instalación.....                                | 4 |
| Conexión eléctrica .....                                      | 5 |
| Puesta en marcha del aparato .....                            | 5 |
| Cambio de la puerta .....                                     | 6 |
| Termostato .....                                              | 8 |
| Descongelación. ....                                          | 9 |
| Mantenimiento y optimización de la eficiencia energética..... | 9 |
| Servicio técnico .....                                        | 9 |
| Como deshacerse del aparato .....                             | 9 |

## 2.

### Termostato Carel ijF

|                                         |    |
|-----------------------------------------|----|
| Manual técnico para el termostato ..... | 11 |
|-----------------------------------------|----|

# IMPORTANTES INSTRUCCIONES DE SEGURIDAD

1. Para obtener el uso completo y adecuado del aparato, recomendamos leer este manual de instrucciones.
2. Es responsabilidad del usuario el manejo adecuado del aparato, de acuerdo con las instrucciones dadas.
3. Contacte a su comerciante inmediatamente en caso de cualquier funcionamiento defectuoso.
4. Coloque el aparato en un lugar seco y ventilado.
5. Mantenga el aparato totalmente alejado de cualquier fuente de calor y no lo exponga a la luz directa del sol.
6. Tenga siempre presente que todo dispositivo eléctrico es una fuente potencial de peligro.
7. No almacene material inflamable tal como gas, gasolina, éter ó similares en el aparato.
8. No ha sido utilizado ningún asbesto ni CFC en la construcción.
9. El aceite en el compresor no contiene TCI.



¡SOLO PARA LOS MODELOS QUE INCORPOREN REFRIGERANTE R290/R600a!

Este electrodoméstico contiene un refrigerante inflamable. Por lo tanto, asegúrese de disponer de una buena ventilación a su alrededor. No utilice dispositivos mecánicos para descongelar el electrodoméstico, ya que podría causar fugas en el sistema de refrigeración. No utilice aparatos eléctricos en el interior del compartimento de almacenamiento refrigerado.

Deje cualquier reparación del electrodoméstico en manos de un técnico cualificado (EN 60335-2-89: 2010).

## Importante !

La base de este refrigerador está diseñada para recipientes herméticamente sellados que contienen alimentos procesados (EN 16825).

## DESEMBALAJE E INSTALACIÓN

El aparato se entrega embalado y en un palet, desembálelo. Las superficies exteriores están forradas con un plástico protector, quítelo antes de hacer la instalación.

# CONEXIÓN ELÉCTRICA

Este electrodoméstico está diseñado para su uso a 230 V/50 Hz. Debe enchufarse a una toma de corriente accesible.

Este electrodoméstico debe disponer de una protección adicional de acuerdo con las normativas sobre electricidad. Esto es aplicable también en el caso de que reemplace una unidad existente que no disponga de protección adicional.

Use siempre un enchufe de tres clavijas. El hilo con aislante verde/amarillo debe conectarse a tierra (con marca ).

En todos los demás casos, un electricista autorizado le informará sobre cómo obtener la protección adicional para el electrodoméstico. En caso de el edificio no disponga de protección adicional, las autoridades recomiendan que un electricista instale un interruptor PFI o HPFI (disyuntor).


## PUESTA EN MARCHA DEL APARATO

Antes de su uso, recomendamos que el aparato se limpie, vea la sección de mantenimiento y limpieza

### Importante !

Si el aparato ha sido colocado horizontalmente durante su transporte, espere, por favor, 2 horas antes de la puesta en marcha del aparato.


Recuerde quitar el dispositivo de seguridad de transporte en el compresor. Quite la barra entera, como se muestra en fig. 1.8.

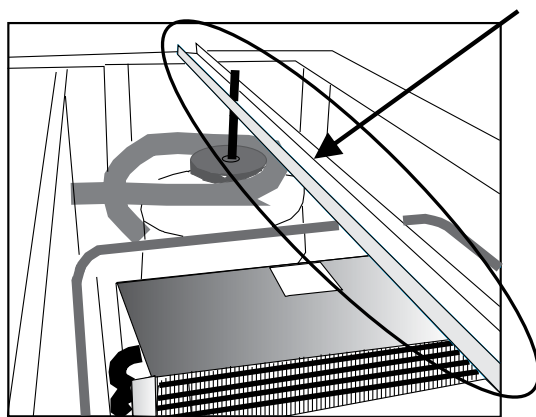


# CAMBIO DE LA PUERTA

Recuerde, que se debe hacer con la puerta abierta.


Abra la parte alta quitando los tornillos mostrados en Fig. 1,2.

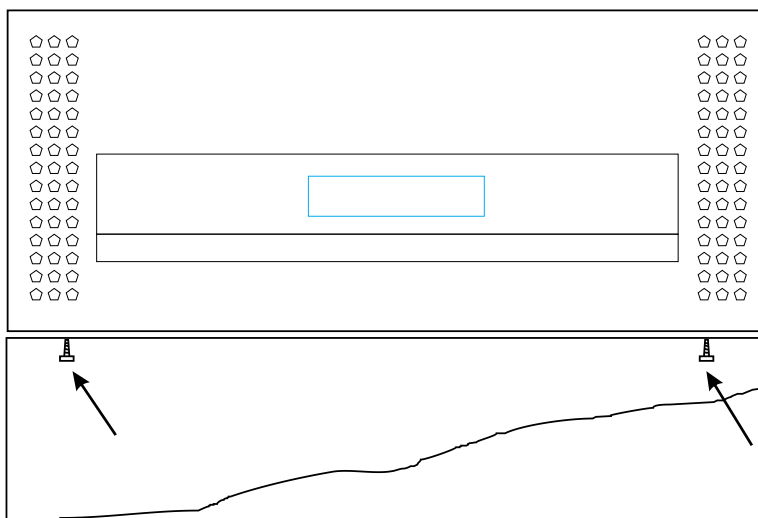


Quite la contratuerca del resorte de la puerta, como se muestra en Fig. 1,3. Afloje la bisagra y quite la puerta.

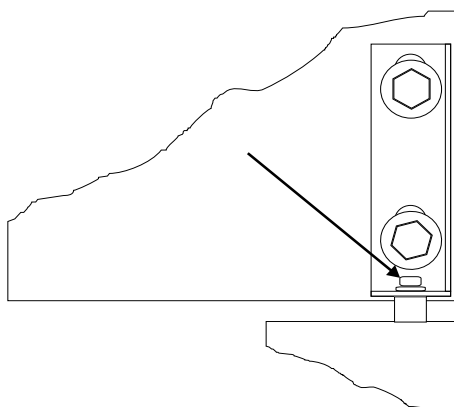


La puerta se coloca horizontalmente abajo, y después se pasa a invertir el resorte de la puerta y el casquillo/manguito del fondo, ver Fig. 1.4.

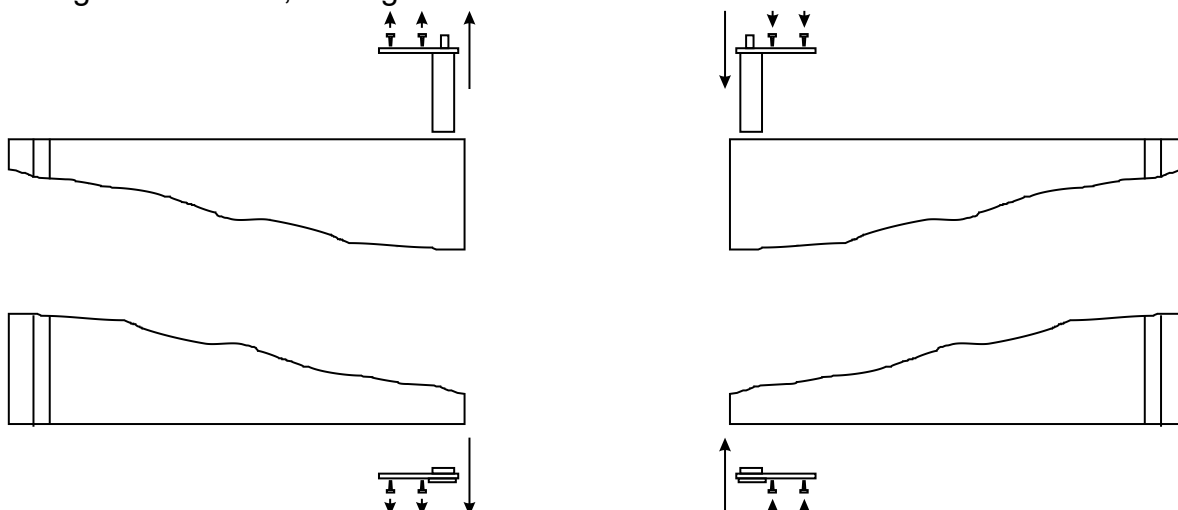


La bisagra inferior es invertida desmontando las patas/las ruedas delanteras, y después las monta en el otro lado del aparato, ver Fig. 1.5.

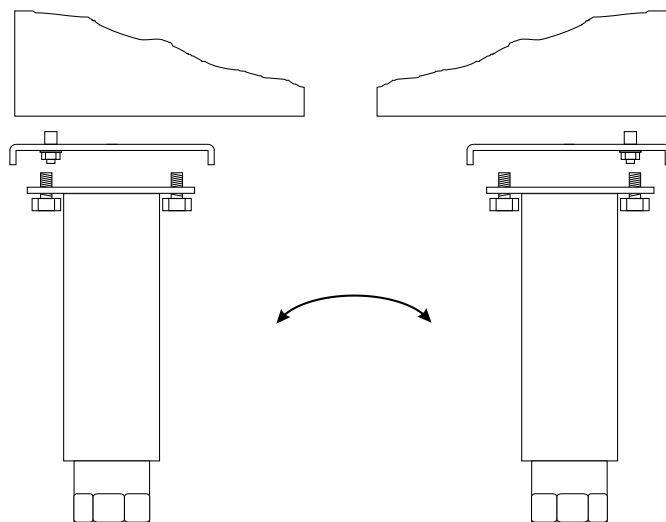

En el lado de la nueva visagra, afloje la visagra de arriba, y coloque la puerta en la visagra de abajo. La visagra se ajusta/aprieta en el resorte de la puerta para que se quede fija. Coloque la contrapuerca, como en Fig. 1.6

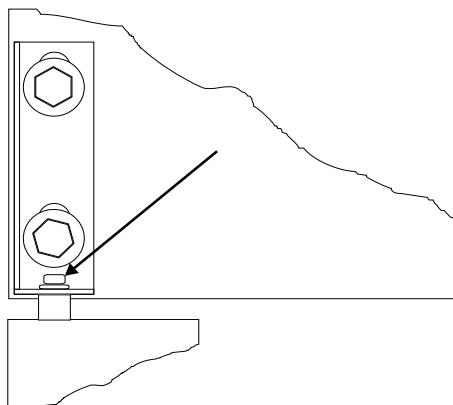

Cierre y fije la parte superior con los tornillos ver Fig. 1.7.

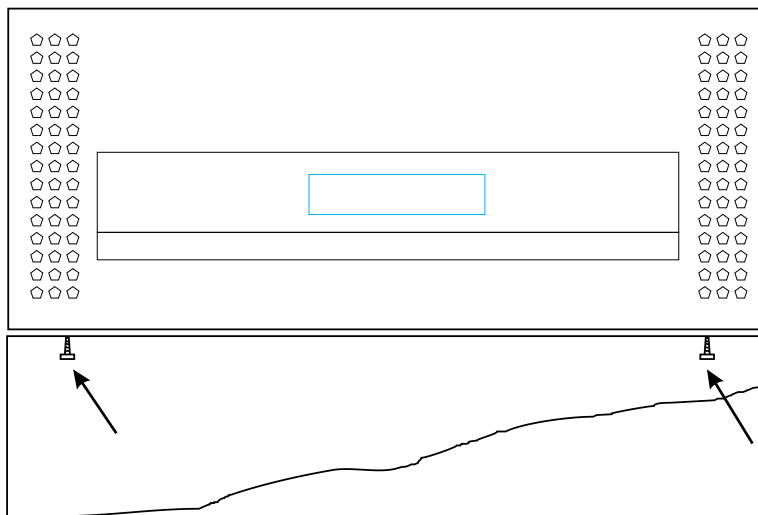

# TERMOSTATO

El termostato está colocado en el tablero de control.



El termostato ya está programado para este aparato. En la mayoría de los casos, no es necesario ajustar las posiciones.

Al encender el aparato, el display/pantalla mostrará la temperatura actual en el aparato.

## Cambio a nueva temperatura:

Presione la tecla Prg.

La pantalla mostrará:



Presione la tecla Prg durante más de 3 segundos.

La pantalla mostrará:



Presione la tecla Set.

La pantalla mostrará la temperatura establecida:



Utilice las teclas Arriba/Abajo para cambiar.

Utilice la tecla Prg para guardar la temperatura establecida:



# CAMBIO DE PARÁMETROS

Vea lista de parámetros en la página 11.

## DESCONGELACIÓN

El aparato descongela automáticamente con intervalos fijos programados. Si la puerta del aparato está abierta o el contenido del aparato se cambia con frecuencia, puede llegar a ser necesario descongelar el aparato manualmente.



Apriete esta tecla continuamente, más de 3 segundos, esto activará una descongelación manual, y después volverá a operar normalmente.

El agua de la descongelación circula para su evaporación a un contenedor, que está situado en el compartimento del compresor.

## MANTENIMIENTO Y OPTIMIZACIÓN DE LA EFICIENCIA ENERGÉTICA

Apague el aparato desde el enchufe.

El aparato debe ser limpiado periódicamente. Limpie las superficies externas e internas del aparato con una solución ligera de jabón, y seque bien. Las superficies externas pueden mantenerse limpias con un aceite especial para acero.

No utilice limpiadores que contienen cloro u otros productos agresivos, pues pueden dañar las superficies inoxidables del acero y el sistema interior de refrigeración.

Limpie el condensador y el compartimento del compresor con la ayuda de un aspirador y un cepillo duro.

No riegue con una manguera el compartimento del compresor, ya que el agua puede causar cortocircuitos y daño en las partes eléctricas.

## SERVICIO TÉCNICO

El sistema de refrigeración es un sistema herméticamente sellado, y no requiere supervisión, sólo limpieza.

Si el aparato falla en la refrigeración, verifique que la razón no sea un apagón, bien desde el enchufe o de los plomos.

Si no puede localizar la razón del fallo del aparato, contacte, por favor, a su suministrador.

Informe, por favor, del modelo y el número de serie del aparato. Usted puede encontrar esta información en la etiqueta que está colocada dentro del aparato arriba, a mano derecha.

## COMO DESHACERSE DEL APARATO

Cuando se tenga que deshacer del aparato, deberá hacerlo teniendo en cuenta las normas al respecto. Puede que haya unas exigencias y condiciones que se deban cumplir.





# Gastro-Line Comptoirs

## Mode d'emploi





## 1.

### Users manual

|                                                               |   |
|---------------------------------------------------------------|---|
| Informations générales .....                                  | 4 |
| Désassemblage et mise en place .....                          | 4 |
| Branchement électrique .....                                  | 5 |
| Démarrage.....                                                | 5 |
| Inversement de la porte.....                                  | 6 |
| Thermostat .....                                              | 8 |
| Dégivrage .....                                               | 9 |
| Maintenance et optimisation de l'efficacité énergétique ..... | 9 |
| Service .....                                                 | 9 |
| Élimination .....                                             | 9 |

## 2.

### Thermostat Carel ijF

|                                      |    |
|--------------------------------------|----|
| Manuel technique du thermostat ..... | 11 |
|--------------------------------------|----|

# INSTRUCTIONS IMPORTANTES

1. Avant d'utiliser votre armoire, nous vous recommandons de lire ce mode d'emploi dans son entier.
2. C'est la responsabilité de l'utilisateur de manier l'appareil selon les instructions données.
3. Contacter votre revendeur immédiatement en cas de défauts de fonctionnement de l'armoire.
4. L'armoire doit être placée dans un endroit sec et ventilé.
5. L'armoire ne doit pas être exposée aux rayons du soleil ou à tout autre source de chaleur.
6. N'oublier pas que tous les appareils électriques sont des sources de danger potentiel.
7. Ne conserver pas et n'utilisez pas des produits qui pourraient provoquer des explosions ou qui sont inflammables, tels que gaz, briquets, essence, éther etc. dans l'armoire.
8. Aucune asbeste ou CFC est utilisée dans la construction de l'armoire.
9. L'huile dans le compresseur ne contient pas de PCB.



## POUR LES ARMOIRES AVEC RÉFRIGÉRANT R290/R600a!

Ce refroidisseur contient un réfrigérant inflammable; assurez un endroit bien ventilé autour de l'armoire. N'utilisez pas des outils mécaniques pour le dégivrage; cela peut causer des fuites dans le système de refroidissement interne. N'utilisez pas des outils électrique à l'intérieur de l'armoire.

Chaque réparation de ce refroidisseur doit être effectué par un réparateur professionnel.  
(EN 60335-2-89: 2010)

## Important !

La base de ce réfrigérateur est conçue pour les récipients hermétiques contenant des aliments transformés (EN 16825).

# DÉSASSEMBLAGE ET MISE EN PLACE

L'armoire est livrée avec une palette en bois afin de l'assurer pendant le transport. Enlever la palette et placer l'armoire d'une position verticale. Les surfaces extérieures sont équipées d'un film pelable, qu'il faut enlever avant la mise en place.

Lors de la mise en place, l'armoire doit être de niveau, ce qui s'obtient aisément grâce aux pieds réglables. (Quelques armoires sont livrées avec roulettes au lieu de pieds réglables).

# BRANCHEMENT ÉLECTRIQUE

L'armoire doit être branchée par une prise d'un accès facile avec la tension de 230 V/50 Hz.

Les installations électriques doivent être effectués par un électricien spécialisé.


## DÉMARRAGE

Avant d'utiliser votre armoire, nous vous recommandons de la nettoyer, voir la section « entretien ».

### Important !

Si l'armoire a été transportée aux horizontal, il faut attendre 2 heures après l'installation pour démarrer l'appareil.


N'oublier pas d'enlever la protection du compresseur ; enlever le bâton entier (figure 1.8)..

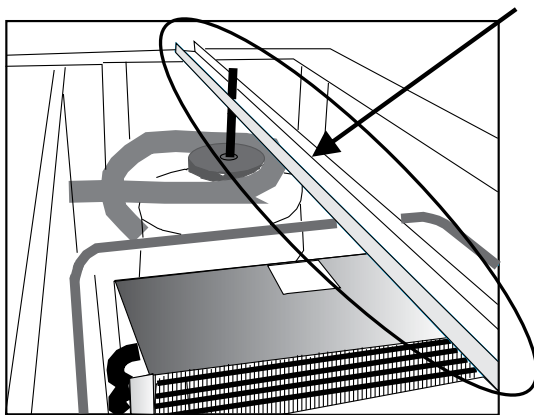


# INVERSEMENT DE LA PORTE

N'oublier pas de fermer la porte avant de l'inverser.


Ouvrir le dessus de l'armoire en demonstant les vis (figure 1.2).

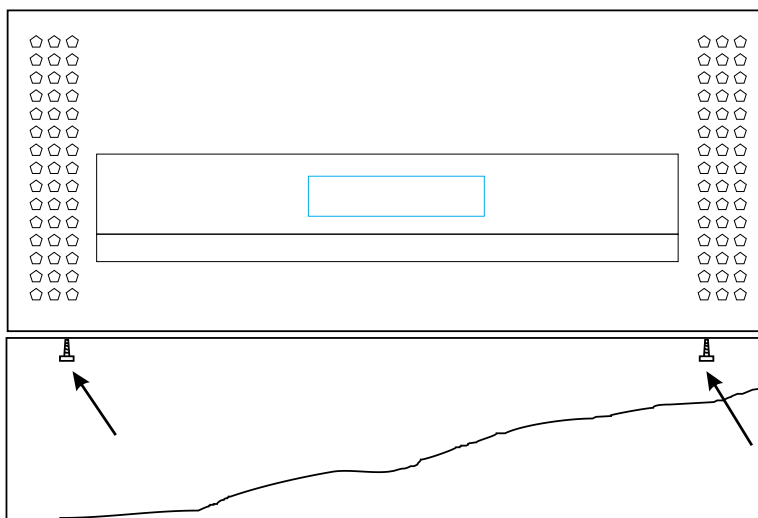


Demonter le vis de blocage dans le ressort de la porte (figure 1.3), la charnière s'est lâchée et vous pouvez demonter la porte.

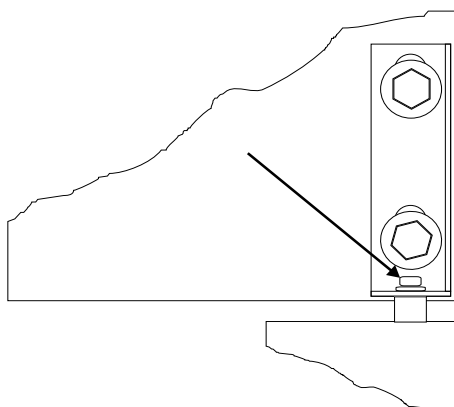


Mettre la porte aux horizontal. Échanger le ressort de la porte et la boîte de fond (figure 1.4).

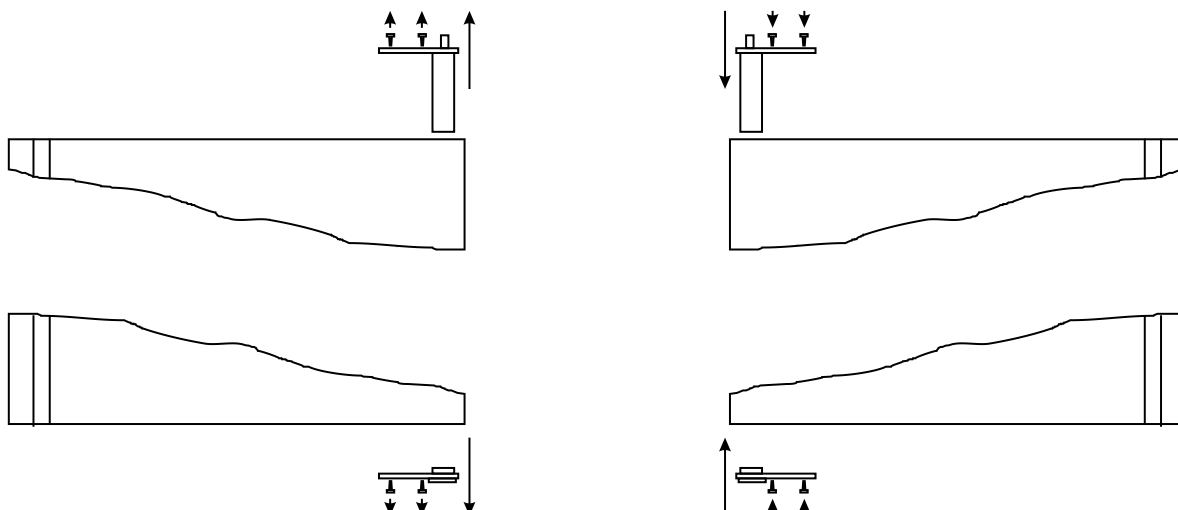


La charnière de fond est déplacée en demontant les pieds/roulettes de devant, et puis les monter au côté opposé (figure 1.5).

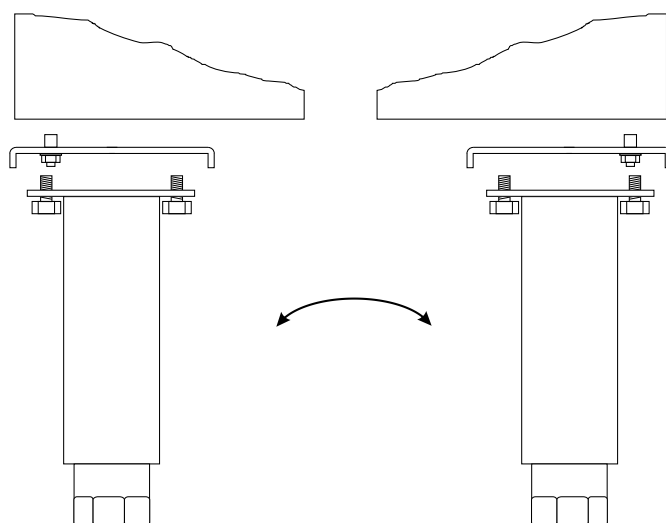

Lâcher la charnière dessus au nouveau côté charnière et monter la porte sur la charnière de fond. Presser la charnière sur le ressort de la porte et fixer-là. Monter le vis de blocage (figure 1.6)

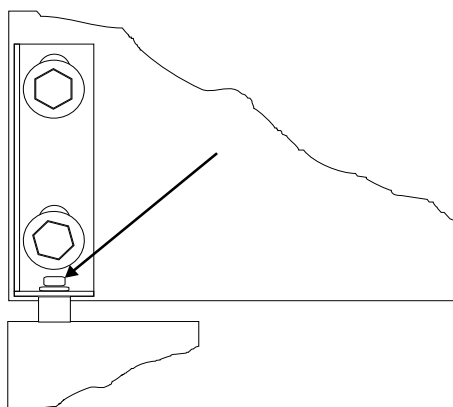

Fermer et fixer le dessus avec les vis (figure 1.7).

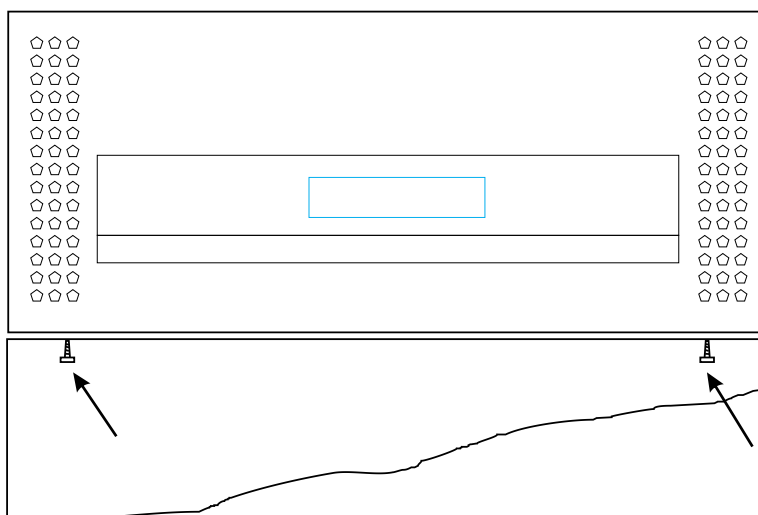

# THERMOSTAT

Le thermostat est placé dans le panneau de contrôle .



Il est préprogrammé pour l'armoire ; dans la plupart des cas il est donc inutile de le régler.

Quand l'armoire est allumée, l'afficheur va montrer la température actuelle à l'intérieur de l'armoire.

## Régler la nouvelle température:

Appuyez sur la touche Prg.

L'écran affichera :



Appuyez sur la touche Prg pendant plus de 3 secondes.

L'écran affichera :



Appuyez sur la touche Set.

L'écran affichera la température réglée :



Utilisez les touches Haut/Bas pour modifier.

Utilisez la touche Prg pour enregistrer la température réglée :



# CHANGEMENT DES PARAMÈTRES

Voir table des paramètres page 11.

## DÉGIVRAGE

L'armoire se dégivre automatiquement avec des intervalles programmés. Si l'armoire est exposée aux ouvertures de la porte ou remplacements des marchandises très fréquents, un dégivrage manuel peut être nécessaire.



Presser ce bouton pendant plus de 3 secondes ; cela va lancer un dégivrage manuel et après retourner au fonctionnement normal.

L'eau de dégivrage est évacuée et s'évapore dans un récipient placé dans le compartiment compresseur.

## ENTRETIEN

Débrancher l'armoire pendant le nettoyage.

Le nettoyage de l'intérieur et l'extérieur de l'armoire doit être effectué par intervalles convenables à l'aide d'un produit à vaisselle non parfumé. L'armoire doit être essuyée minutieusement après le nettoyage. L'extérieur peut être maintenu avec un produit (creme, huile) pour l'inox.

N'utiliser pas des produits à vaisselle chlorés ou d'autres produits aggrésifs, parce qu'ils pourraient causer la corrosion de l'acier inox et du système frigorifique interne.

## SERVICE

Le système frigorifique est étanche à l'air ; il n'est donc pas nécessaire de le surveiller, il suffit de le nettoyer.

Si l'armoire ne rafraîchit pas, vérifier que la fiche est bien enfoncée, que la fusible est intact et qu'il n'y a pas de coupure de courant.

Si vous ne pouvez pas trouver la cause du défaut, contacter votre revendeur. Informer la référence et le numéro de série de l'armoire, ce que vous pouvez trouver à l'intérieur de l'armoire sur l'étiquette placée en haut à droite.

## ÉLIMINATION

Quand l'armoire usée doit être éliminée, il doit se passer d'une manière qui ne compromet pas l'environnement. Veuillez prendre note des règles d'élimination et examiner s'il existe des demandes et conditions spécifiques qu'il faut respecter.





# Gastro-Line Banconi

## Manuale d'uso





# SOMMARIO

## 1.

### Informazioni generali

|                                                               |   |
|---------------------------------------------------------------|---|
| Importanti nozioni di sicurezza.....                          | 4 |
| Rimozione dell'imballaggio e installazione .....              | 4 |
| Collegamenti elettrici .....                                  | 5 |
| Inizializzazione dell'armadio .....                           | 5 |
| Capovolgimento delle porte .....                              | 6 |
| Termostato .....                                              | 8 |
| Sbrinamento .....                                             | 9 |
| Manutenzione e ottimizzazione dell'efficienza energetica..... | 9 |
| Assistenza .....                                              | 9 |
| Smaltimento .....                                             | 9 |

## 2.

### Termostat Carel iJF

|                                      |    |
|--------------------------------------|----|
| Manuel technique du thermostat ..... | 11 |
|--------------------------------------|----|

# ISTRUCCIONES DE SEGURIDAD IMPORTANTES

1. Para obtener el máximo rendimiento del armario, recomendamos la lectura de este manual de instrucciones.
2. Es responsabilidad del usuario utilizar el electrodoméstico de acuerdo con las instrucciones facilitadas.
3. Póngase en contacto inmediatamente con su concesionario en caso de cualquier anomalía.
4. Coloque el armario en un lugar seco y ventilado.
5. Mantenga el armario alejado de fuentes de mucho calor y no lo exponga a la luz solar directa.
6. Tenga siempre en cuenta que todos los dispositivos eléctricos pueden ser el origen de peligros potenciales.
7. No almacene materiales inflamables como disolvente, gasolina, etc., en el armario.
8. Declaramos que no se ha usado amianto ni CFC en su construcción.
9. El aceite del compresor no contiene PCB.



SOLO PER APPARECCHI CON REFRIGERANTE R290/R600a!

Questo apparecchio contiene un refrigerante infiammabile: assicurarsi che vi sia una buona ventilazione intorno all'apparecchio. Non utilizzare dispositivi meccanici in fase di scongelamento per evitare perdite del sistema di raffreddamento. Non utilizzare dispositivi elettrici all'interno del vano di conservazione refrigerato.

Qualsiasi riparazione dell'apparecchio deve essere svolta da un tecnico qualificato (EN 60335-2-89: 2010).

## Importante

La base di questo frigorifero è stata progettata per contenitori a chiusura ermetica contenenti cibi pronti (EN 16825).

## DESEMBALAJE E INSTALACIÓN

Retire el palet de madera y el embalaje. Las superficies exteriores llevan una lámina de protección que se debe retirar antes de la instalación.

# COLLEGAMENTI ELETTRICI

L'apparecchio è adatto a 230 V/50 Hz. Il collegamento deve essere effettuato attraverso una presa accessibile.

L'apparecchio deve essere dotato di protezione extra in base alle norme relative alla potenza. Lo stesso è previsto anche qualora venga sostituito un apparecchio senza protezione extra.

Utilizzare sempre una spina a 3 poli. Il filo con isolamento verde/giallo deve essere messo a terra (marcaturo).

In tutti gli altri casi un elettricista autorizzato sarà in grado di indicarvi come dare maggiore protezione all'apparecchio. Qualora l'edificio non disponga di protezione extra, l'ente Board of Electricity suggerisce l'installazione di un interruttore PFI o HPFI da parte di un elettricista (interruttore di contatto).


## PUESTA EN MARCHA DEL APARATO

Antes del uso, recomendamos limpiar el armario; remítase a la sección sobre mantenimiento y limpieza.

### Importante

If the cabinet has been horizontally placed during transport, please wait 2 hours before starting up the cabinet.


Si el armario se ha colocado en posición vertical durante el transporte, espere 2 horas antes de ponerlo en marcha.

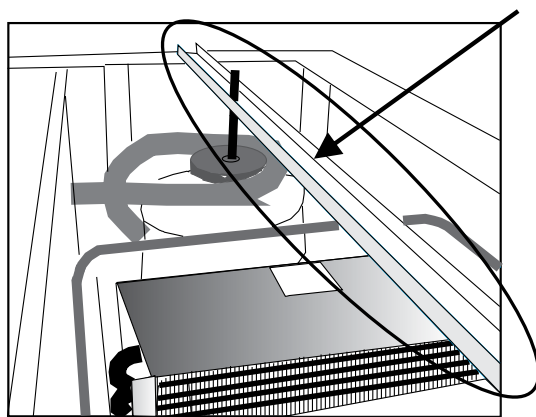


# CAPOVOLGIMENTO DELLE PORTE

NOTA BENE: il seguente procedimento deve essere fatto con le porte aperte!


Aprire il pannello frontale rimuovendo le viti come da figura 1.2.

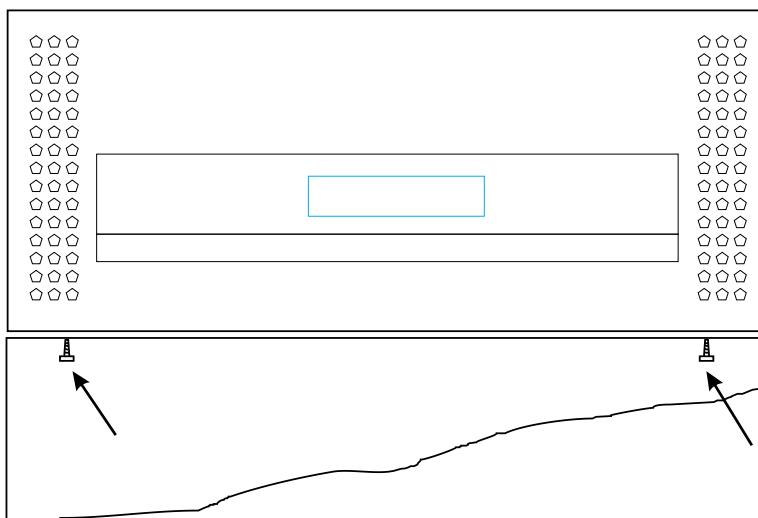


Rimuovere la vite di chiusura come mostrato in fig 1.3. Allentare la cerniera e estrarre la porta.

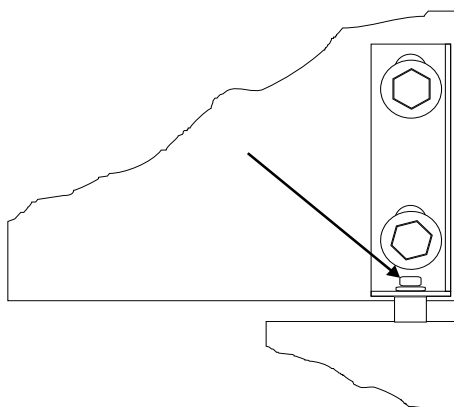


Invertire la posizione della cerniera a molla e del supporto in plastica, come da fig.1.4.

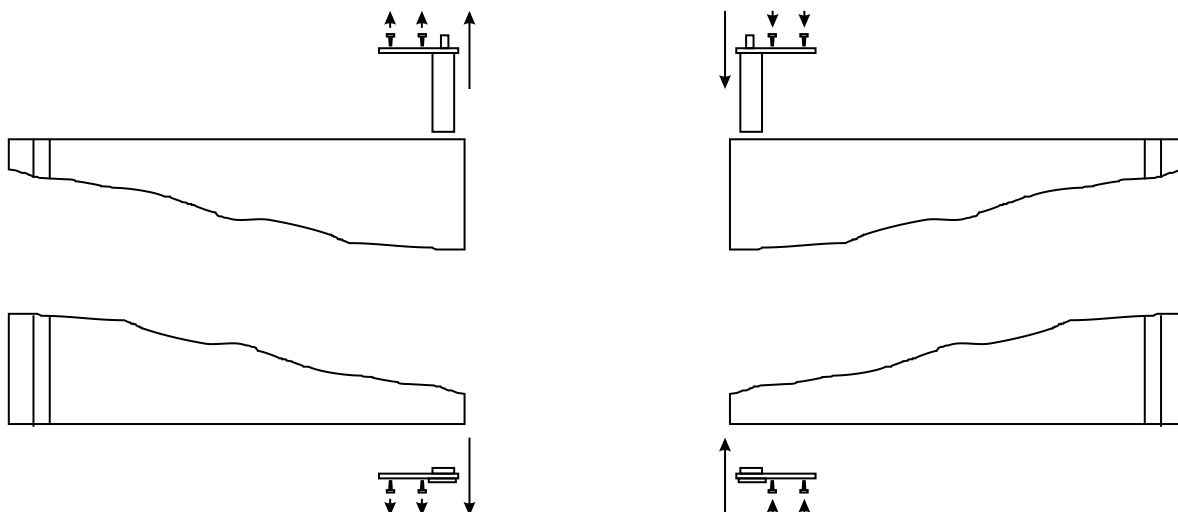


La cerniera in fondo può essere rimossa smontando i due piedini (o ruote) frontali e montandoli nel lato opposto dell'armadio; deve essere cambiata la posizione del perno da destra verso sinistra e successivamente rimontare i piedini. vedi fig. 1.5.

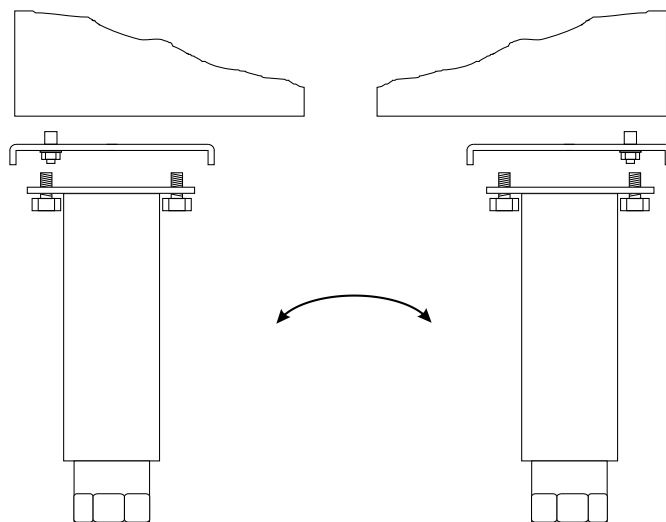

Fissati i piedini, vanno allentate le viti del supporto superiore ed inserita la porta. Controllare l'allineamento e il posizionamento della guarnizione magnetica.

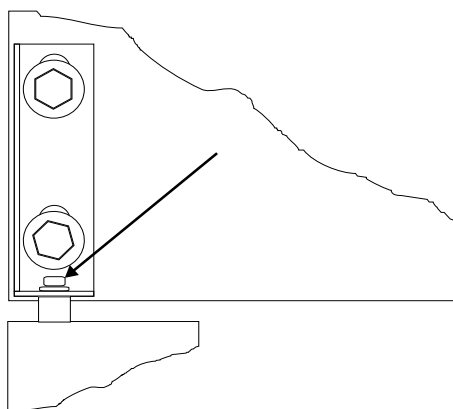

Successivamente, fissare definitamene le viti di fissaggio del supporto superiore.

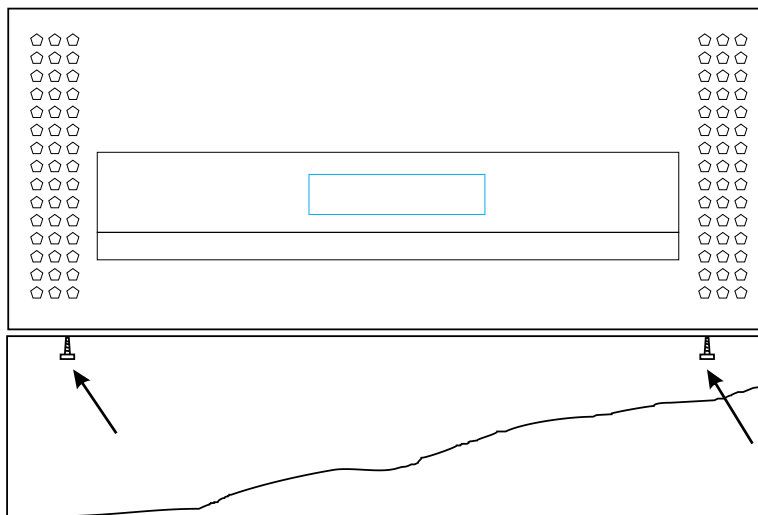

# TERMOSTATO

El termostato se coloca en el panel inferior



El termostato ya está programado para este aparato. En la mayoría de los casos, no es necesario ajustar las posiciones.

Al encender el aparato, el display/pantalla mostrará la temperatura actual en el aparato.

## Cambio a nueva temperatura:

Premere il tasto Prg.

Il display mostrerà:



Premere il tasto Prg per più di 3 secondi.

Il display mostrerà:



Premere il tasto Set.

Il display mostrerà la temperatura impostata:



Utilizzare i tasti Su/Giù per modificare.

Utilizzare il tasto Prg per salvare la temperatura impostata:



# CAMBIO DEI PARAMETRI

Vedi elenco dei parametri a pag.

## DESCONGELACIÓN

El aparato descongela automáticamente con intervalos fijos programados. Si la puerta del aparato está abierta o el contenido del aparato se cambia con frecuencia, puede llegar a ser necesario descongelar el aparato manualmente.



Apriete esta tecla continuamente, más de 3 segundos, esto activará una descongelación manual, y después volverá a operar normalmente.

El agua de la descongelación circula para su evaporación a un contenedor, que está situado en el compartimento del compresor.

## MANTENIMIENTO Y LIMPIEZA

Desenchufe el refrigerador por la toma de corriente.

El armario se debe limpiar periódicamente. Limpie las superficies externas e internas del armario con una solución jabonosa ligera y séquelas después con un trapo.

NO use productos de limpieza que contengan cloro u otros productos abrasivos, puesto que pueden dañar las superficies y el sistema de refrigeración interno.

Limpie el compartimento del condensador y del compresor con un aspirador y un cepillo rígido.

## SERVICIO

El sistema de refrigeración es un sistema sellado herméticamente que no requiere supervisión, solo limpieza.

Si el armario no enfría, compruebe si el motivo es un corte de suministro eléctrico.

Si no puede encontrar el motivo de la avería del armario, póngase en contacto con su proveedor.

Indique el modelo y el número de serie del armario. Puede encontrar dicha información en la etiqueta de características situada en el interior del armario, en el lado superior derecho.

## ELIMINACIÓN

El desecho del armario se debe realizar de forma respetuosa con el medio ambiente. Tenga en cuenta la normativa existente en cuanto a residuos. Es posible que haya requisitos y condiciones especiales que deban cumplirse.





# Gastro-Line Mesas de refrigeração

## Manual do usuário





# ÍNDICE

## 1.

### Información general

|                                                       |   |
|-------------------------------------------------------|---|
| Instruções importantes de segurança .....             | 4 |
| Desembalagem e instalação .....                       | 4 |
| Ligações Eléctricas.....                              | 5 |
| Arranque da arca.....                                 | 5 |
| Inversão da porta.....                                | 6 |
| Termostato .....                                      | 8 |
| Descongelamento .....                                 | 9 |
| Manutenção e otimização de eficiência energética..... | 9 |
| Assistência Técnica.....                              | 9 |
| Eliminação .....                                      | 9 |

## 2.

### Termostato Carel ijF

|                                      |    |
|--------------------------------------|----|
| Manual técnico para termostato ..... | 11 |
|--------------------------------------|----|

# INSTRUÇÕES IMPORTANTES DE SEGURANÇA

1. Para se obter uma utilização plena desta arca vertical, recomendamos-lhe que leia este manual de instruções.
2. A utilização do aparelho de acordo com as instruções fornecidas é da inteira responsabilidade do utilizador.
3. Contacte imediatamente o distribuidor em caso de avarias.
4. Coloque a máquina num local seco e ventilado.
5. Mantenha o aparelho afastado de fontes de calor intenso e não o exponha a luz solar directa.
6. Tenha sempre presente que qualquer dispositivo eléctrico é uma fonte de perigo potencial.
7. Não armazene na arca quaisquer materiais inflamáveis, como diluente, gasolina, etc.
8. Declara-se que não foi usado amianto ou CFC na construção deste aparelho.
9. O óleo no compressor não contém PCB.



## APENAS PARA EQUIPAMENTOS COM REFRIGERANTE R290/R600a!

Este equipamento contém um agente refrigerante inflamável. Por isso, certifique-se de que existe boa ventilação em torno do mesmo. Não utilize dispositivos mecânicos quando descongelar, pois pode provocar fugas no sistema de refrigeração. Não utilize equipamentos eléctricos no interior do compartimento de arrumação refrigerado. Todos trabalhos de reparação no aparelho devem ser realizados por um técnico qualificado (EN 60335-2-89: 2010).

## Importante

A base deste frigorífico foi concebida para recipientes hermeticamente fechados contendo alimentos processados (EN 16825).

# DESEMBALAGEM E INSTALAÇÃO

Retire el palet de madera y el embalaje. Las superficies exteriores llevan una lámina de protección que se debe retirar antes de la instalación.

Para garantir o correcto funcionamento da arca, é importante que esta esteja nivelada. Se a arca tiver pés, estes podem ser ajustados.

# LIGAÇÕES ELÉCTRICAS

A arca funciona a 230 V/50 Hz.

A tomada de parede deverá estar facilmente acessível.

Todas as ligações à terra estipuladas pelas autoridades eléctricas locais deverão ser observadas. A ficha da arca e a tomada de parede deverão fornecer a ligação à terra adequada. Se houver qualquer dúvida, contacte o distribuidor local ou um electricista qualificado.

As principais ligações eléctricas deverão ser executadas por electricistas credenciados.


## ARRANQUE DA ARCA

Antes de utilizá-la, recomendamos que a arca seja limpa; consulte a secção sobre manutenção e limpeza.

### Importante

Se a arca tiver sido colocada na vertical durante o transporte, aguarde duas horas até ligá-la.


Lembre-se de retirar o dispositivo de segurança do compressor. Retire a barra completa, conforme mostrado na fig. 1.8.

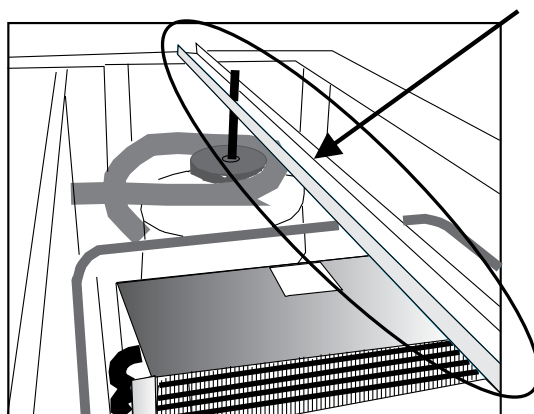


# INVERSÃO DA PORTA

NOTE que o procedimento seguinte deverá ser levado a cabo com a porta aberta!


Abra a parte superior retirando o parafuso mostrado na fig. 1.2.

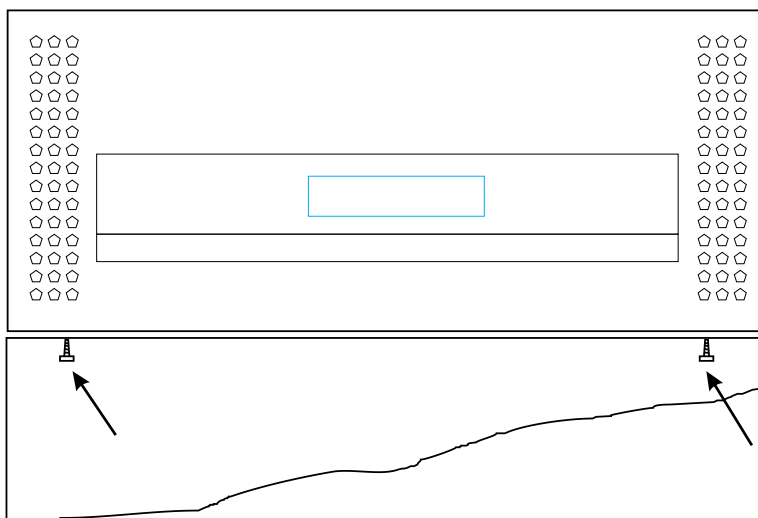


Retire o parafuso de fixação na mola da porta como mostrado na fig. 1.3. Desaperte o a dobradiça e retire a porta.

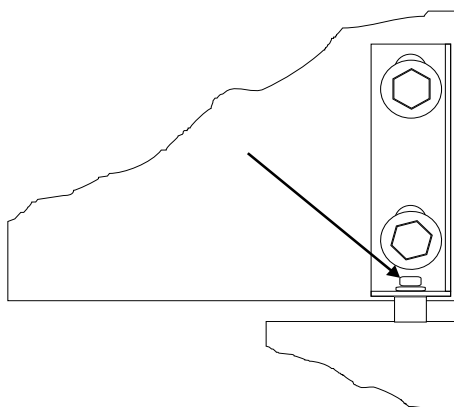


A porta é colocada na horizontal e a mola da porta e o apoio inferior são invertidos, como mostrado na fig. 1.4.

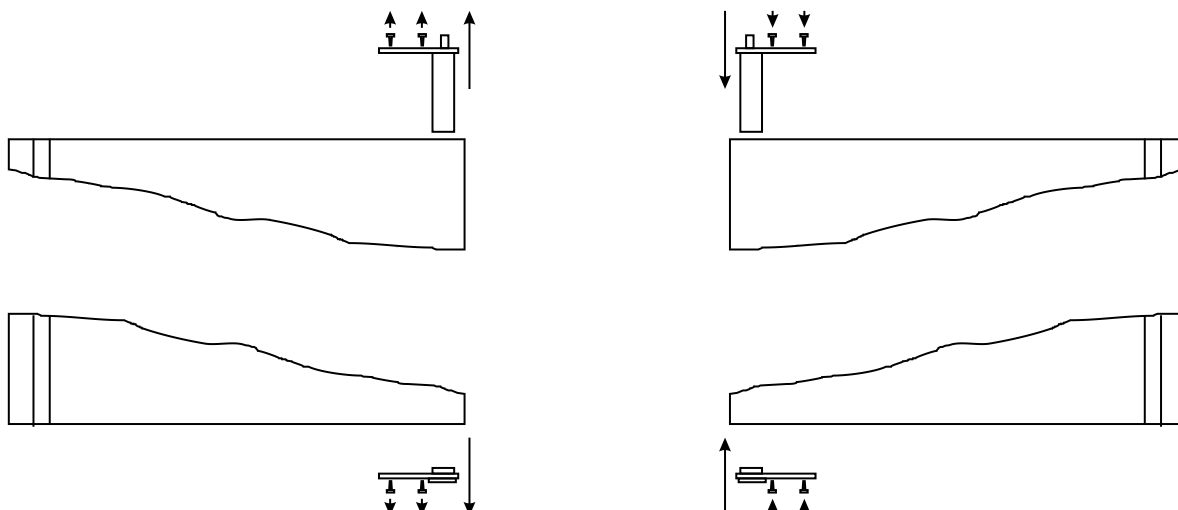


A dobradiça inferior é invertida desmontando-se o pé/roda dianteira e tornando a montar-se no outro lado da arca, conforme mostrado na fig. 1.5.

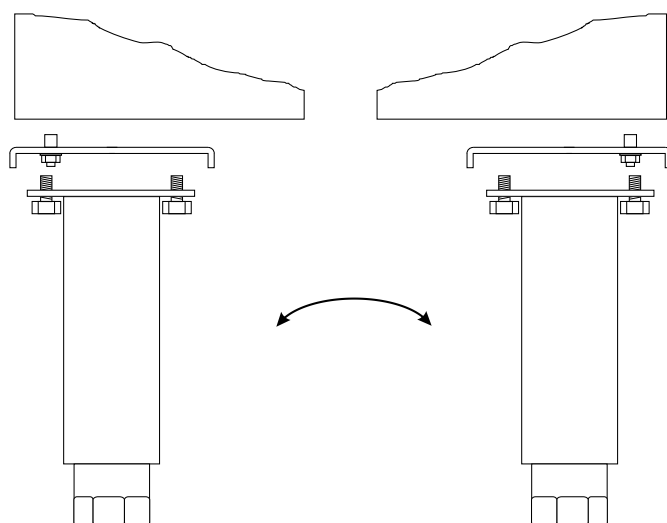

Desaperte a dobradiça superior na sua nova posição e substitua a porta na dobradiça inferior. A dobradiça é pressionada para baixo na mola da porta e é apertada. Coloque o parafuso de fixação, como mostrado na fig. 1.6

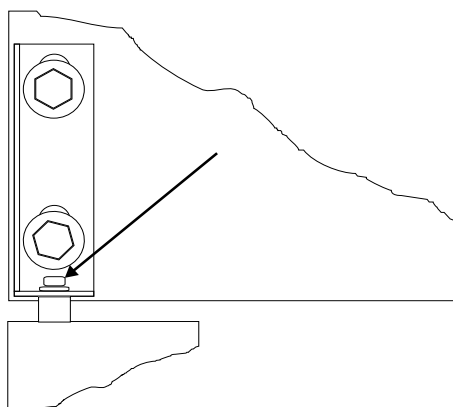

Feche e aperte a parte de cima com o parafuso, como se vê na fig. 1.7.

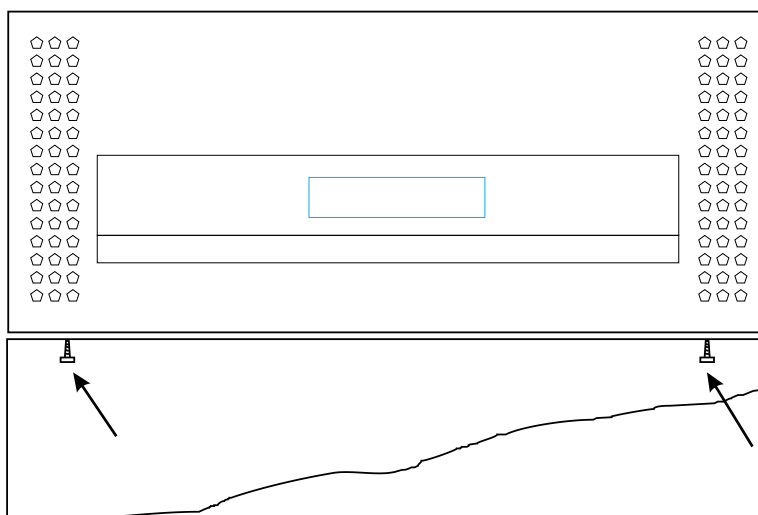

# TERMÓSTATO

O termóstato encontra-se no painel de controlo.



O termóstato foi pré-regulado e, na maioria dos casos, não é necessário qualquer ajuste.

Quando a arca é ligada, o visor irá exibir a temperatura actual na câmara.

## Definir uma nova temperatura:

Pressione a tecla Prg.



O display mostrará:



Pressione a tecla Prg por mais de 3 segundos.



O display mostrará:



Pressione a tecla Set.



O visor mostrará a temperatura definida:



Use as teclas para cima/para baixo para alterar.



Use a tecla Prg para salvar a temperatura definida:



# ALTERAÇÃO DE PARÂMETROS

Consulte a tabela de parâmetros na página 11.

## DESCONGELAMENTO

A arca descongela automaticamente em intervalos pré-definidos. Se houver frequentes aberturas da porta da arca ou mudanças do conteúdo, poderá ser necessário descongelar a arca manualmente.



Se este botão for premido continuamente durante mais de 3 segundos, dá-se início à descongelação manual e depois regressará ao funcionamento normal.

A água daí resultante é recolhida num receptáculo colocado no compartimento do compressor e depois evapora.

## MANUTENÇÃO E OTIMIZAÇÃO DE EFICIÊNCIA ENERGÉTICA

Desligue a arca da tomada de parede.

A arca deve ser limpa periodicamente. Limpe as superfícies interna e externa da arca com uma solução ligeiramente ensaboada e seque de seguida. As superfícies externas poderão ser conservadas com um óleo de máquina.

NÃO utilize produtos de limpeza que contenham cloro ou produtos abrasivos pois poderão danificar as superfícies de aço inoxidável e o sistema de arrefecimento interno.

Limpe o condensador e o compartimento do compressor utilizando um aspirador e uma escova de cerdas duras.

NÃO lave à mangueira o compartimento do compressor pois poderá provocar curto-circuitos e danos às partes eléctricas.

## ASSISTÊNCIA TÉCNICA

O sistema de arrefecimento é hermeticamente selado e não requer supervisão; apenas limpeza. Se a arca não arrefecer, verifique se isso se deve a uma falta de electricidade.

Se não conseguir diagnosticar a causa da falha da arca, contacte o distribuidor. Informe o modelo e o número de série da arca. Poderá encontrar esta informação na etiqueta de características localizada na parte de dentro da arca, do lado superior direito.

## ELIMINAÇÃO

A eliminação da arca deverá efectuar-se de modo ambientalmente correcto. Aquando da eliminação, tenha em consideração a legislação existente. Poderá haver requisitos e condições especiais a serem observados.





# Шкафы Gastro-Line

## Руководство пользователя





# СОДЕРЖАНИЕ

## 1.

### содержание

|                                                 |   |
|-------------------------------------------------|---|
| Внимание. ....                                  | 4 |
| Распаковка и установка .....                    | 4 |
| Подключение к электросети.....                  | 5 |
| Запуск. ....                                    | 5 |
| Установка двери в противоположную сторону ..... | 6 |
| Термостат .....                                 | 8 |
| Размораживание.....                             | 9 |
| Техобслуживание .....                           | 9 |
| Устранение неполадок .....                      | 9 |
| Утилизация. ....                                | 9 |

## 2.

### Термостат Carel iJF

|                                             |    |
|---------------------------------------------|----|
| Техническое руководство по термостату ..... | 11 |
|---------------------------------------------|----|

# ВНИМАНИЕ

1. Перед использованием Бэк-бара необходимо прочитать инструкцию.
2. Пользователь несёт ответственность за использование Бэк-бара в соответствии с инструкциями.
3. В случае неполадок свяжитесь с дистрибьютором.
4. Бэк-бар должен быть расположен в сухом и хорошо проветриваемом помещении.
5. Не допускается установка изделия вблизи источников теплового излучения, т.е. плит, батарей отопления и т.п., а также в местах действия прямых солнечных лучей.
6. Обратите внимание на то, что любой электрический аппарат может быть опасным.
7. Нельзя использовать для хранения взрывоопасных веществ, таких как например газ, бензин и т.п.
8. В конструкции изделия не использованы асбест или CFC.
9. Компрессорное масло не содержит РСВ



Этот шкаф содержит горючий хладагент..

## Внимание!

Основа этого холодильника предназначена для герметично запечатанных контейнеров с обработанными пищевыми продуктами (EN 16825).

# РАСПАКОВКА И УСТАНОВКА

Бэк-бар поставляется в упакованном виде. Перед тем как распаковать, проверьте если нет повреждений на упаковке.

# ПОДКЛЮЧЕНИЕ К ЭЛЕКТРОСЕТИ

Бэк-бар должен быть подключён к питающей электрической сети 230 V/50 Hz.

Розетка должна находиться в легко доступном месте. Подключение к электросети допускается только через стационарную розетку или удлинитель с заземляющим проводом.


## ЗАПУСК

Перед использованием Бэк-бар необходимо почистить, см. раздел «Обслуживание».

### Внимание!

Если Бэк-бар при перевозке находился в лежачем состоянии, подождите 2 часа до того как включать его в электросеть.


Не забудьте снять с компрессора защитное устройства защищающее от повреждений при перевозке, рис.1.8.

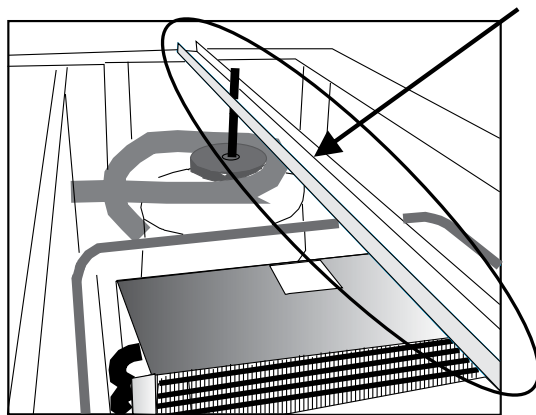


# УСТАНОВКА ДВЕРИ В ПРОТИВОПОЛОЖНУЮ СТОРОНУ

**ВНИМАНИЕ!** Устанавливать только при открытых дверях.


Открутите винты и откройте верхнюю часть шкафа, как показано на рисунке 1.2.

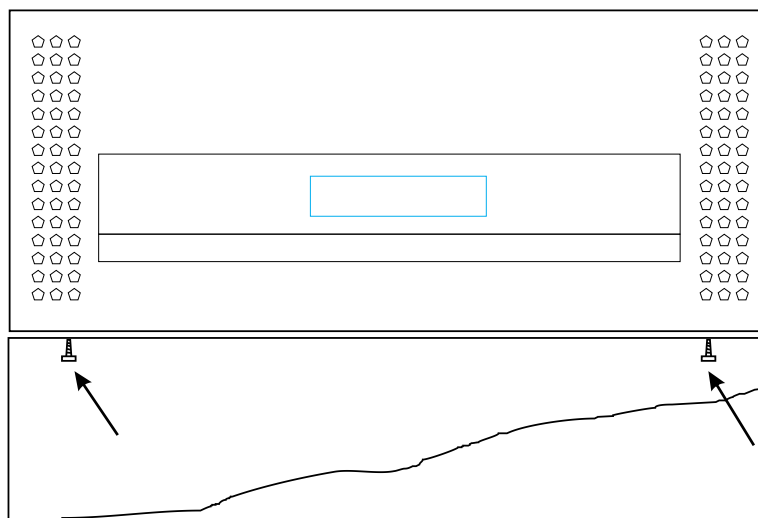


Снимите болты, дверь освободится и легко отойдёт, рис.1.3.

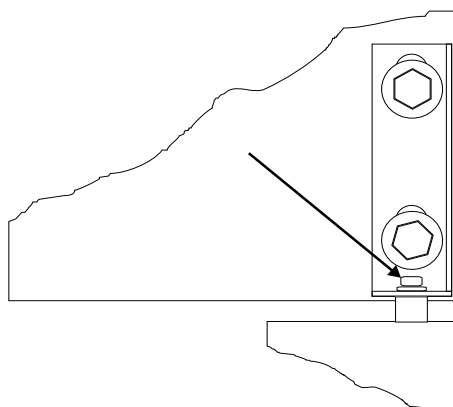


Положите дверь на пол и поменяйте держатель и пружину на другую сторону, рис.1.4.

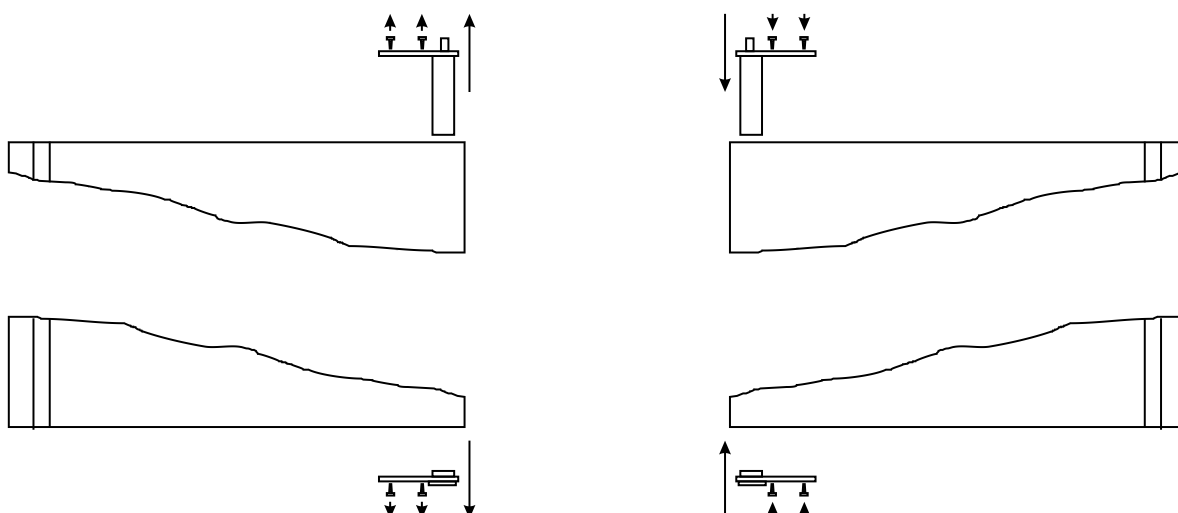


Нижняя дверная петля откручивается после снятия передних ножек, после чего ножки встраиваются на противоположную сторону, рис.1.5.

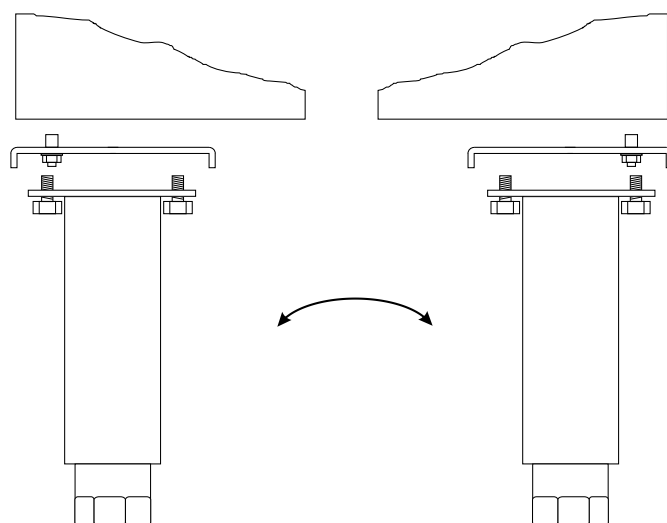

После того как все детали смонтированы на противоположной стороне, расслабьте верхние петли, поставьте дверь на место, надстроив на нижние петли. Вставьте винт, как показано на рис.1.6.

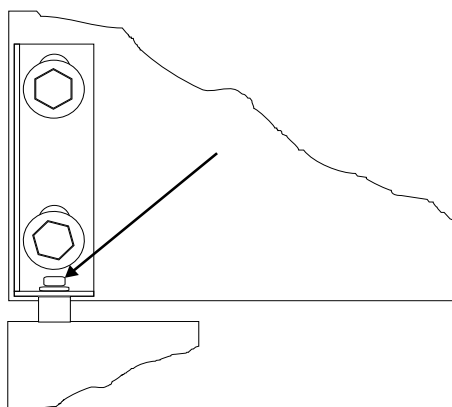

И закрепите верхнюю часть, рис.1.7.

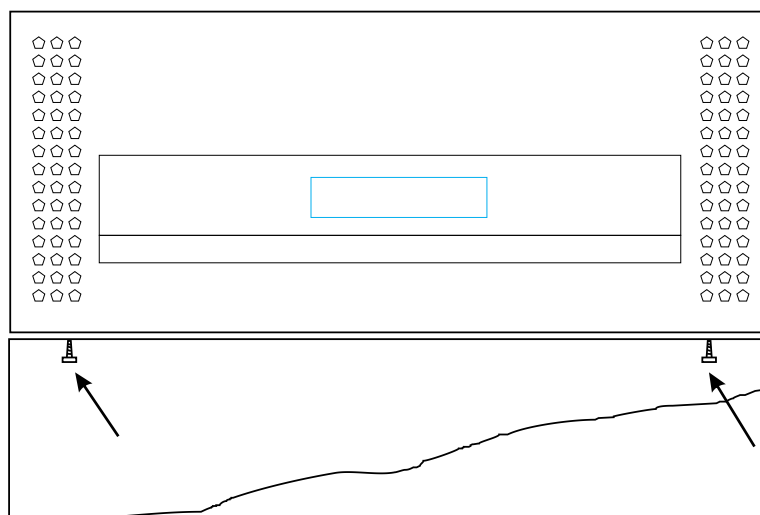

# ТЕРМОСТАТ

Термостат находится на контрольной панели



Термостат запрограммирован, поэтому нет необходимости в его настройке.

При включении стола, на экране дисплея появится актуальная внутренняя температура стола.

## Настройка температуры:

Нажмите клавишу Prg.

На дисплее отобразится:



Нажмите клавишу Prg и удерживайте ее более 3 секунд.

На дисплее отобразится:



Нажмите клавишу Set.

На дисплее отобразится установленная температура:



Для изменения используйте клавиши «Вверх»/«Вниз».

Используйте клавишу Prg для сохранения установленной температуры:



# РЕГУЛИРОВАНИЕ ТЕМПЕРАТУРЫ

См.таблицу параметров на стр. 11.

## РАЗМОРАЖИВАНИЕ СТОЛА

Стол размораживается автоматически с запрограммированными интервалами. В случае частого открывания дверцы стола может возникнуть необходимость ручного размораживания



Механическое размораживание запускается при помощи нажатия на данную кнопку более 3 секунд, после чего изделие запускается как обычно.

Оттаявшая вода стекается в ванночку расположенную в компрессорном отделе.

## ТЕХОБСЛУЖИВАНИЕ

Отключите Бэк-бар от сети.

Бэк-бар необходимо регулярно чистить. Мойка изделия производится теплой водой с небольшим количеством мыльного средства. После чего Бэк-бар промыть чистой водой и просушить.

**ЗАПРЕЩАЕТСЯ** использовать хлоросодержащие моющие средства или другие едкие средства, которые могут повредить работе Бэк-бара.

## УСТРАНЕНИЕ НЕПОЛАДОК

При неполадках в холодильной системе проверьте вставлена ли вилка в розетку и подключена ли розетка, а также если нет неполадков в сети.

Если причину неисправности не возможно выяснить, обратитесь к дилеру. Обращаясь к дилеру, назовите модель холодильника, серийный номер и номер изделия. Эти данные указаны на заводской табличке с правой стороны на внутренней панели шкафа.

## УТИЛИЗАЦИЯ

Если срок эксплуатации изделия подошёл к концу, его следует утилизировать без нанесения вреда окружающей среде. Следует принимать во внимание существующие правила утилизации. Помимо этого могут существовать определённые законодательные требования по утилизации, которым тоже необходимо следовать.





# Gastro-Line kylskåp

## Bruksanvisning





## 1.

### Allmänna anvisningar

|                                                     |   |
|-----------------------------------------------------|---|
| Viktiga anvisningar .....                           | 4 |
| Uppackning och uppställning.....                    | 4 |
| Elanslutning .....                                  | 5 |
| Driftsstart. ....                                   | 5 |
| Vända dörren. ....                                  | 6 |
| Termostaten .....                                   | 8 |
| Avfrostning.....                                    | 9 |
| Underhåll och optimering av energieffektivitet..... | 9 |
| Service .....                                       | 9 |
| Bortskaffande .....                                 | 9 |

## 2.

### Termostat Carel iJF

|                                     |    |
|-------------------------------------|----|
| Teknisk handbok för termostat ..... | 11 |
|-------------------------------------|----|

# VIKTIGA ANVISNINGAR

1. Läs den här bruksanvisningen så att du får bästa möjliga nytta av kylskåpet.
2. Det är användarens ansvar att använda kylskåpet enligt anvisningarna.
3. Kontakta återförsäljaren omgående om det uppstår fel på kylskåpet.
4. Kylskåpet bör placeras i ett torrt rum med god ventilation.
5. Kylskåpet bör inte placeras i närheten av värmekällor eller i direkt solljus.
6. Observera att alla elektriska apparater kan innebära fara.
7. Förvara inte explosionsfarliga ämnen som t.ex. gas, bensin eter eller liknande.
8. Ingen asbest och inga freoner (CFC) har använts vid konstruktionen.
9. Oljan i kompressorn innehåller inte PCB.



Kylen innehåller det energigodkända och icke ozonnedbrytande kylmedlet R600a/R290. R600a/R290 är en brandfarlig typ av gas och det är därför viktigt att kylkretsloppet inte skadas under transport och installation.

Om kylkretsloppet trots detta skadas ska man undvika att använda öppen eld i närheten av kylen och enheten får heller inte anslutas till strömuttag. Sörj dessutom för god ventilation i rummet. Vid tveksamhet: kontakta din leverantör.

## Viktigt !

Basen i detta kylskåp är konstruerad för hermetiskt förseglade behållare som innehåller färdiglagad mat (EN 16825).

# UPPACKNING OCH UPPSTÄLLNING

Kontrollera att det inte finns några skador på emballaget före uppackning.

# ELANSLUTNING

Kylskåpet är beräknat för anslutning till 230 V/50 Hz. Anslutningen ska göras med en stickkontakt som bör vara lätt åtkomlig.

Detta kylskåp ska extraskyddas enligt starkströmsbestämmelserna. Detta gäller också även vid utbyte av ett befintligt kylskåp som inte haft sådant extraskydd.

Använd alltid jordade stickkontakter med tre ledare. Kabelledaren med grön/gul isolering ska jordas (märkt ).

I alla övriga fall hänvisas till behörig elektriker som kan informera om hur apparaten ges extra skydd. Om byggnaden saknar extra skydd rekommenderar vi att en elektriker installerar en jordfelsbrytare (PFI eller HPFI).


## DRIFTSSTART

Innan kylskåpet tas i bruk ska det rengöras. Se avsnittet om underhåll.

### Viktigt !

Om kylskåpet har legat ner under transporten ska du vänta två (2) timmar innan det startas.


Ta bort transportsäkringen på kompressorn genom att ta bort hela stängen enligt fig. 1.8.

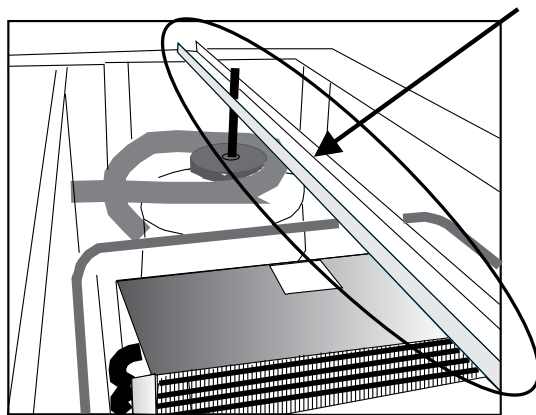


# VÄNDA DÖRREN

KOM IHÅG att detta ska göras medan dörren är öppen!


Öppna toppen genom att ta bort de markerade skruvarna i fig. 1.2.

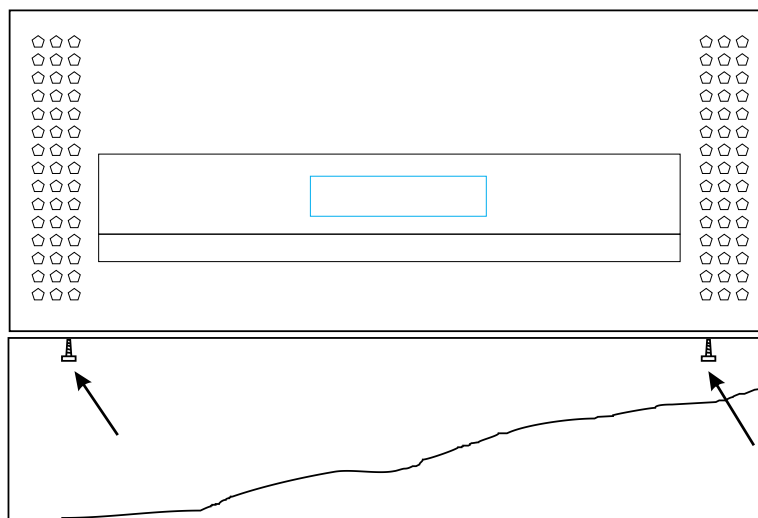


Ta bort låsskruvarna i dörrfjädersn, markerade i fig. 1.3, lossa sedan gångjärnet och lyft av dörren.

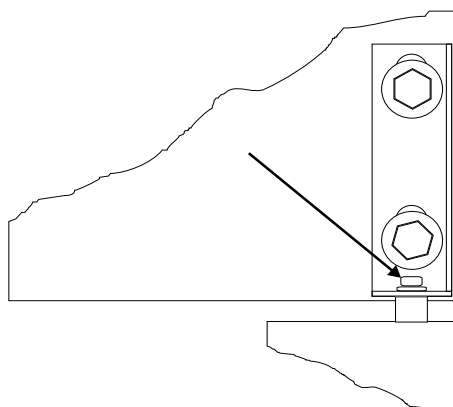


Lägg ned dörren och växla sedan dörrfjädersn och nedre bussningen, se fig. 1.4.

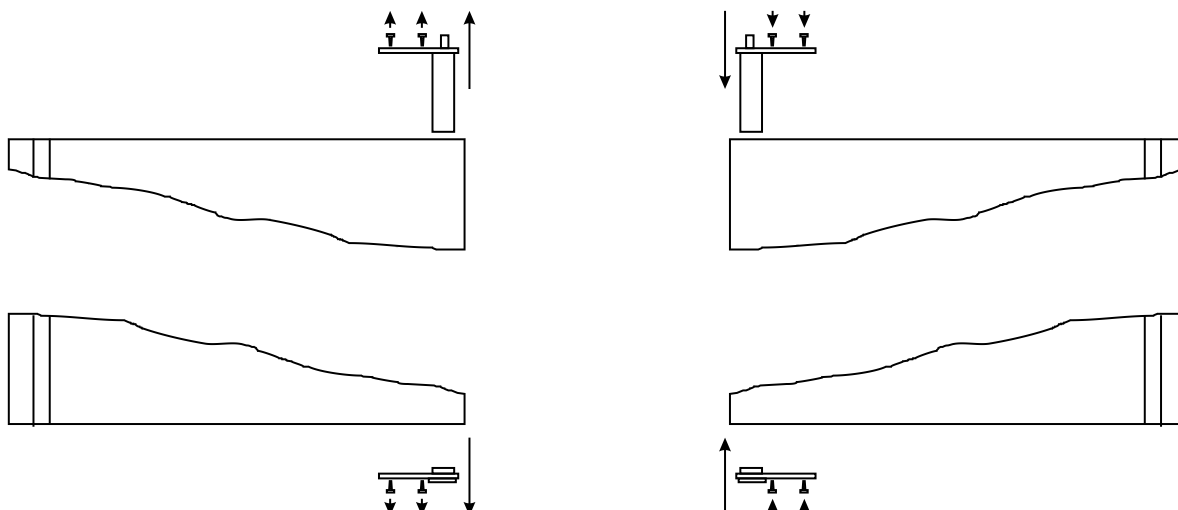


Nedre gångjärnet ska flyttas genom att demontera de främre benen/hjulen och därefter montera på motsatta sidan, se fig. 1.5.

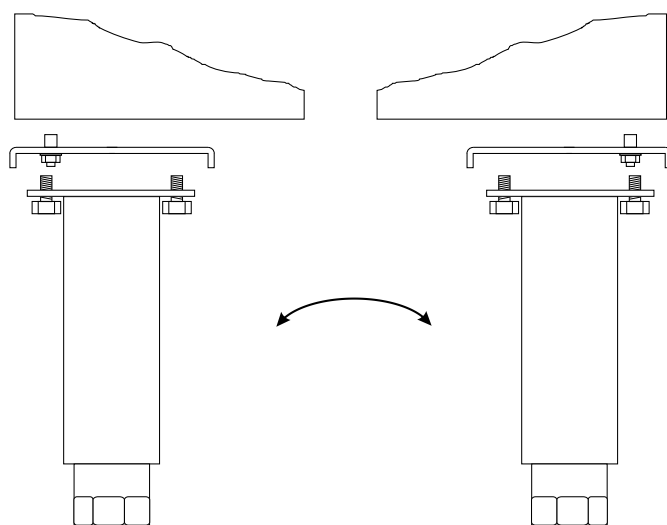

Lossa sedan övre gångjärnet på den nya gångjärnssidan och lyft dörren på plats på nedre gångjärnet. Tryck ner gångjärnet på dörrfjädern och fäst det. Sätt in låsskruvarna (se fig. 1.6)

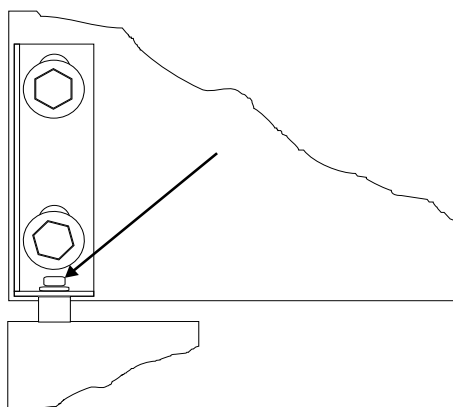

Lås fast och fäst med skruvarna (se fig. 1.7).

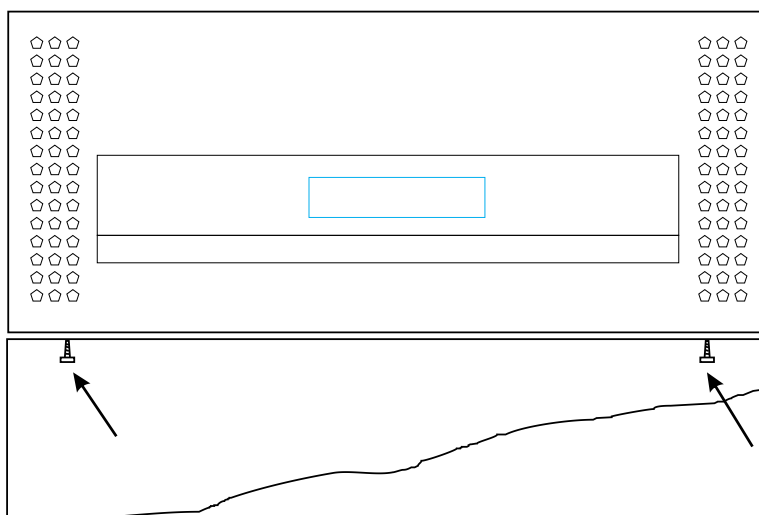

# TERMOSTATEN

Termostaten är placerad i teknik dörr.



Termostaten är förprogrammerad för skåpet, och oftast behöver inga inställningar justeras.

När skåpet startas kommer displayen att visa den aktuella temperaturen i skåpet.

## Ställa in ny temperatur:

Tryck på Prg-tangenten.

Displayen visar:



Tryck på Prg-tangenten i mer än 3 sekunder.

Displayen visar:



Tryck på knappen Set.

Displayen visar Inställd temperatur:



Använd piltangenterna för att justera.

Tryck på Prg-tangenten för att spara den nya temperaturen:



# ÄNDRA PARAMETRARNA

Se parameteröversikt på sida 11.

## AVFROSTNING

Skåpet avfrostar automatiskt enligt förprogrammerade intervall. Om skåpet belastas extremt mycket med återkommande öppningar av dörren eller återkommande byte av innehållet kan en manuell avfrostning bli nödvändig.



Tryck på den här knappen i minst tre (3) sekunder. Då startar den manuella avfrostningen och därefter återgår skåpet till normal drift.

Smältvatten leds ut till förångning i en behållare som sitter i kompressorutrymmet.

## UNDERHÅLL

Bryt strömmen till kylskåpet genom att dra ut stickkontakten.

Kylskåpet ska rengöras med lämpliga mellanrum. Utvändig och invändig rengöring ska utföras med en svag tvällösning (milt diskmedel) och därefter ska skåpet torkas av noggrant.

Rengöringsmedel får INTE innehålla klor, klorföreningar eller andra aggressiva medel eftersom de kan orsaka skador på ytorna och på det interna kylsystemet.

Ventilationsgallret ska rengöras med dammsugare och en styv borste.

## SERVICE

Kylsystemet är ett hermetiskt slutet system och kräver ingen tillsyn – endast rengöring.

Vid dålig kylverkan: kontrollera först om orsaken är ett avbrott i stickkontakten eller proppskåpet.

Kontakta återförsäljaren om det inte går att lokalisera felet. Vi ber dig alltid uppge skåpets typbeteckning och serienummer vid alla kontakter med oss. Informationen sitter på skåpets insida, på märkskylten överst på högra sidan.

## BORTSKAFFANDE

Ett uttjänt kylskåp måste bortskaffas på ett miljömässigt försvarbart sätt. Var uppmärksam på vilka regler som gäller för bortskaffande. Det kan finnas särskilda krav och bestämmelser som måste följas.





# Gastro-Line Upright Cabinets

## Users manual





# CONTENTS

## 1.

### Users manual

|                                                         |   |
|---------------------------------------------------------|---|
| Important safety instructions .....                     | 4 |
| Unpacking and installation .....                        | 4 |
| Electrical connection .....                             | 5 |
| Start-up of the cabinet .....                           | 5 |
| Door reversal .....                                     | 6 |
| Thermostat .....                                        | 8 |
| Defrosting .....                                        | 9 |
| Maintenance and optimization of energy efficiency ..... | 9 |
| Service .....                                           | 9 |
| Disposal .....                                          | 9 |

## 2.

### Thermostat Carel ijF

|                        |    |
|------------------------|----|
| Technical manual ..... | 11 |
|------------------------|----|

# IMPORTANT SAFETY INSTRUCTIONS

1. To get the best out of your cabinet, read these instructions thoroughly.
2. The user is responsible for correct use of the cabinet in accordance with instructions.
3. Contact your dealer immediately in the event of faults.
4. Place cabinet in a dry, well ventilated room.
5. Do not place close to sources of heat or in direct sunlight.
6. NB: all electrical appliances can be hazardous.
7. Do not store explosive substances such as gas, petrol, ether or the like in the cabinet.
8. No asbestos or CFC has been used in manufacture.
9. The compressor oil does not contain PCB.



## ONLY FOR APPLIANCES WITH REFRIGERANT R290/R600a!

This appliance contains a flammable refrigerant, so make sure of good ventilation around the appliance. Do not use mechanical devices when defrosting, this can cause leakage of the cooling system. Do not use electrical appliances inside the refrigerated storage compartment.

Any repair of the appliance should be carried out by a skilled technician (EN 60335-2-89: 2010).

## Important !

The base of this cabinet is designed for storage of hermetically sealed containers containing processed food (EN 16825).

# UNPACKING AND INSTALLATION

Remove the wooden pallet and the packing. External surfaces are supplied with a protection foil, which must be removed before installation.

To ensure correct function it is important that the cabinet is level. If the cabinet is supplied with legs, these can be adjusted.

If you want to build in your cabinet please note the following:

1. There must be at least 15 cm free space above the cabinet in order for the cooling system to work satisfactorily.
2. There must be sufficient space at the hinge side to clean and replace the shelves and clean around the hinge.

# ELECTRICAL CONNECTION

The cabinet operates on 220-240 V/50 Hz.

The wall socket should be easily accessible.

All earthing requirements stipulated by the local electricity authorities must be observed. The cabinet plug and wall socket should then give correct earthing. If in doubt, contact your local supplier or authorized electrician.

The main electrical connections must be done by skilled electricians.


## START-UP OF THE CABINET

Before use, we recommend that the cabinet is cleaned, see the section on maintenance and cleaning.

### Important !

If the cabinet has been horizontally placed during transport, please wait 2 hours before starting up the cabinet.


Remember to remove the transport safety device on the compressor. Remove the whole bar as shown in fig. 1.8.

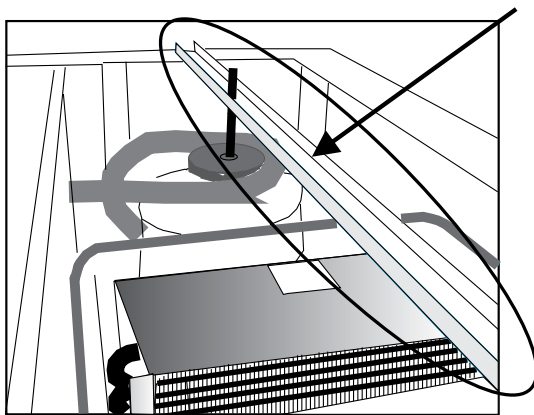


# DOOR REVERSAL

NOTE that the following procedure must be made with the door open!


Open the top by removing the screws shown in fig. 1.2.

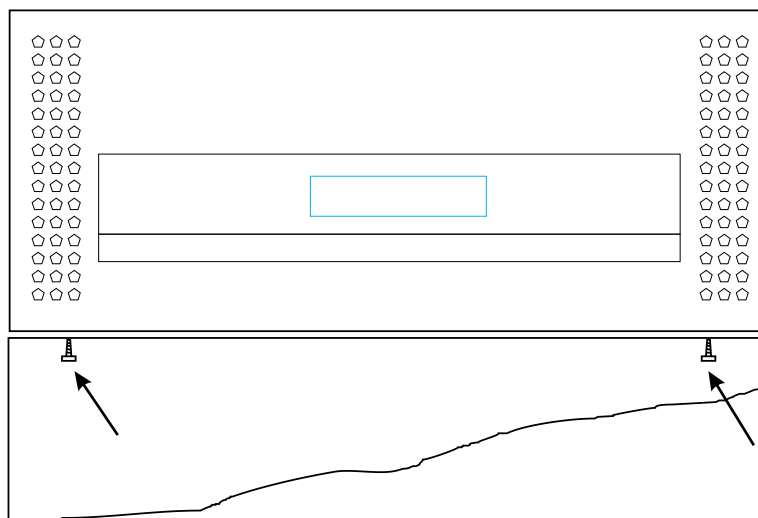


Remove lock screw in door spring as shown in fig. 1.3. Loosen the hinge and remove the door.

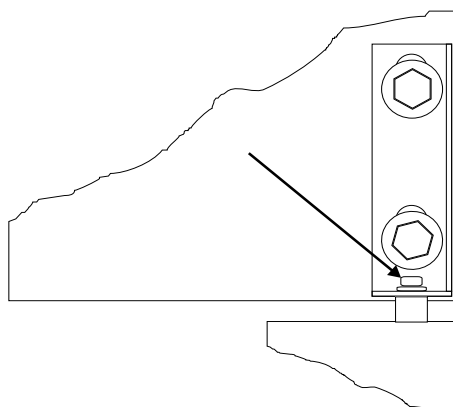


The door is placed horizontally and the door spring and bottom bush are reversed as in fig. 1.4.

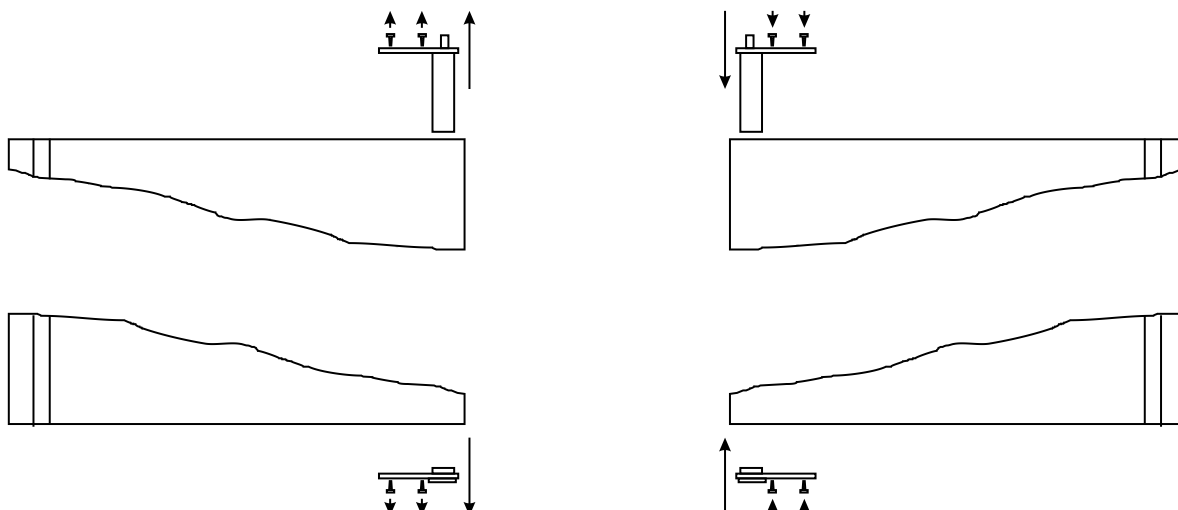


The bottom hinge is reversed by demounting the front legs/wheels and mount them in the other side of the cabinet as in fig. 1.5

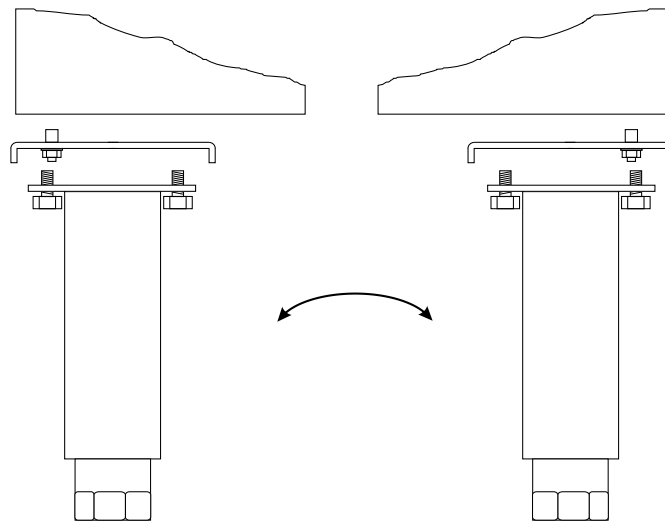

Loosen the top hinge in the new hinge side and replace the door on the bottom hinge. The hinge is pressed downwards on the door spring and is fastened. Put in the lock screw as in fig. 1.6

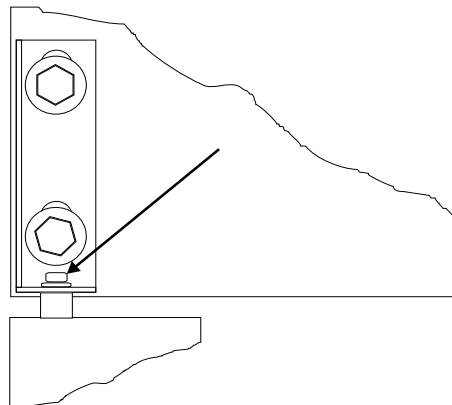

Close and fasten the top with screws as in fig. 1.7.

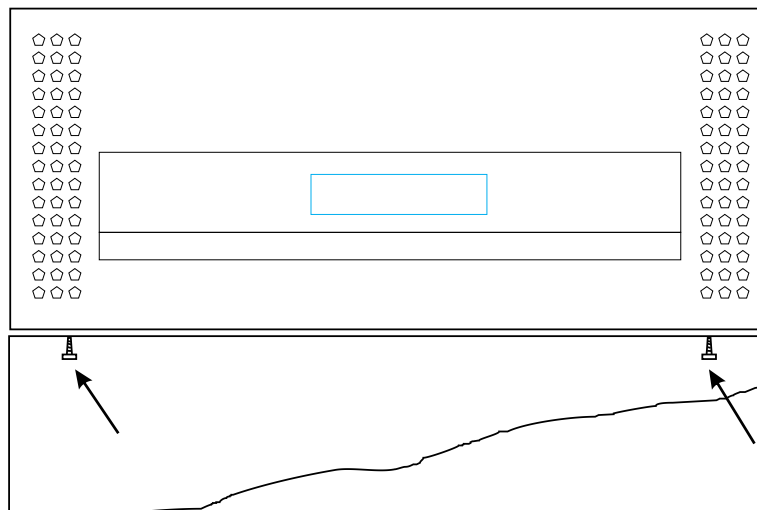

# THERMOSTAT

The thermostat is placed in the control panel.



The thermostat has been pre-set and in most cases it is not necessary to adjust the settings.

When turning on the cabinet the display will show the current temperature in the cabinet.

## Set new temperature:

Press the Prg-key.

Display will show:



Press the Prg-key for more than 3 sec.

Display will show:



Press the Set-key.

Display will show the Set temperature:



Use the Up/Down-keys to change.

Use the Prg-key to save the Set temperature:



# CHANGING OF PARAMETERS

See table of parameters from page 11.

## DEFROSTING

The cabinet defrosts automatically with pre-set intervals. If the door to the cabinet is opened or the contents of the cabinet is changed frequently it may become necessary to defrost the cabinet manually.



Pressing this key continuously for more than 3 seconds will start a manual defrosting and then return to normal operation.

Defrosted water runs to a container placed in the compressor compartment and evaporates.

## CLEANING AND MAINTENANCE

Switch off the electrical connection at the socket.

The cabinet must be periodically cleaned. Clean the external and internal surfaces of the cabinet with a light soap solution and subsequently wipe dry.

Do not spray the appliance with direct jets of water or using high pressure appliances.

Do NOT use cleansers containing chlorine or other harsh cleansers, as these can damage the surfaces and the internal cooling system.

Clean the condenser and the compressor compartment using a vacuum cleaner and a stiff brush.

## SERVICE

The cooling system is a hermetically sealed system and does not require supervision, only cleaning.

If the cabinet fails to cool, check if the reason is a power cut.

If you cannot locate the reason to the failure of the cabinet, please contact your supplier. Please inform model and serial number of the cabinet. You can find this information on the rating label which is placed inside the cabinet in the top right hand side.

## DISPOSAL

Disposal of the cabinet must take place in an environmentally correct way. Please note existing regulation on disposal. There may be special requirements and conditions which must be observed.







**iJF**

Electronic controller for food storage and display units



# USER MANUAL



**iJF**

+0300100EN - ENG

Up to date version available on

**[www.carel.com](http://www.carel.com)**



## GENERAL WARNINGS



CAREL bases the development of its products on decades of experience in HVAC, on continuous investments in technological innovations to products, procedures and strict quality processes with in-circuit and functional testing on 100% of its products, and on the most innovative production technology available on the market. CAREL and its subsidiaries/affiliates nonetheless cannot guarantee that all the aspects of the product and the software included with the product respond to the requirements of the final application, despite the product being developed according to start-of-the-art techniques. The customer (manufacturer, developer or installer of the final equipment) accepts all liability and risk relating to the configuration of the product in order to reach the expected results in relation to the specific final installation and/or equipment. CAREL may, based on specific agreements, act as a consultant for the successful commissioning of the final unit/application, however in no case does it accept liability for the correct operation of the final equipment/system. The CAREL product is a state-of-the-art product, whose operation is specified in the technical documentation supplied with the product or can be downloaded, even prior to purchase, from the website [www.carel.com](http://www.carel.com). Each CAREL product, in relation to its advanced level of technology, requires setup/configuration/programming/commissioning to be able to operate in the best possible way for the specific application. Failure to complete such operations, which are required/indicated in the user manual, may cause the final product to malfunction; CAREL accepts no liability in such cases. Only qualified personnel may install or carry out technical service on the product. The customer must only use the product in the manner described in the documentation relating to the product. In addition to observing any further warnings described in this manual, the following warnings must be heeded for all CAREL products:

- prevent the electronic circuits from getting wet. Rain, humidity and all types of liquids or condensate contain corrosive minerals that may damage the electronic circuits. In any case, the product should be used or stored in environments that comply with the temperature and humidity limits specified in the manual;
- do not install the device in particularly hot environments. Too high temperatures may reduce the life of electronic devices, damage them and deform or melt the plastic parts. In any case, the product should be used or stored in environments that comply with the temperature and humidity limits specified in the manual;
- do not attempt to open the device in any way other than described in the manual.
- do not drop, hit or shake the device, as the internal circuits and mechanisms may be irreparably damaged;
- do not use corrosive chemicals, solvents or aggressive detergents to clean the device;
- do not use the product for applications other than those specified in the technical manual.

All of the above suggestions likewise apply to the controllers, serial cards, programming keys or any other accessory in the CAREL product portfolio. CAREL adopts a policy of continual development. Consequently, CAREL reserves the right to make changes and improvements to any product described in this document without prior warning. The technical specifications shown in the manual may be changed without prior warning. The liability of CAREL in relation to its products is specified in the CAREL general contract conditions, available on the website [www.carel.com](http://www.carel.com) and/or by specific agreements with customers; specifically, to the extent where allowed by applicable legislation, in no case will CAREL, its employees or subsidiaries/affiliates be liable for any lost earnings or sales, losses of data and information, costs of replacement goods or services, damage to things or people, downtime or any direct, indirect, incidental, actual, punitive, exemplary, special or consequential damage of any kind whatsoever, whether contractual, extra-contractual or due to negligence, or any other liabilities deriving from the installation, use or impossibility to use the product, even if CAREL or its subsidiaries/affiliates are warned of the possibility of such damage.

## DISPOSAL




Fig. 1

Fig. 2

### INFORMATION FOR USERS ON THE CORRECT HANDLING OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

The product is made up of metal parts and plastic parts. In reference to European Union directive 2002/96/EC issued on 27 January 2003 and related national legislation, please note that:

- WEEE cannot be disposed of as municipal waste and such waste must be collected and disposed of separately;
- the public or private waste collection systems defined by local legislation must be used. In addition, the equipment can be returned to the distributor at the end of its working life when buying new equipment;
- the equipment may contain hazardous substances: the improper use or incorrect disposal of such may have negative effects on human health and on the environment;
- the symbol (crossed-out wheeled bin) shown on the product or on the packaging and on the technical leaflet indicates that the equipment has been introduced onto the market after 13 August 2005 and that it must be disposed of separately;
- in the event of illegal disposal of electrical and electronic waste, the penalties are specified by local waste disposal legislation.

**Warranty on materials:** 2 years (from production date, excluding consumables).

**Approval:** the quality and safety of CAREL S.p.A. products are guaranteed by the ISO 9001 certified design and production system.



Separate as much as possible the probe and digital input cables from cables to inductive loads and power cables, so as to avoid possible electromagnetic disturbance. Never run power cables (including the electrical panel cables) and signal cables in the same conduits.

### Key to the symbols:



**Caution:** to bring critical issues to the attention of those using the product.



**Notice:** to focus attention on important topics; in particular the practical application of the various product functions.



**Caution:** this product is to be integrated and/or incorporated into the final apparatus or equipment. Verification of conformity to the laws and technical standards in force in the country where the final apparatus or equipment will be operated is the manufacturer's responsibility. Before delivering the product, Carel has already completed the checks and tests required by the relevant European directives and harmonised standards, using a typical test setup, which however cannot be considered as representing all possible conditions of the final installation.

## HACCP: CAUTION



Food Safety programs based on procedures such as HACCP and, more generally, certain national regulations, require that the devices used for food storage be periodically checked to ensure that measurement errors are within the limits allowed for the application used. Carel recommends users to follow, for example, the indications of the European standard "Temperature recorders and thermometers for the transport, storage and distribution of chilled, frozen, deep-frozen/quick-frozen food and ice cream - PERIODIC VERIFICATION", EN 13486 - 2001 (or subsequent updates) or similar regulations and provisions in force in the country in question. Further information can be found in the manual regarding the technical characteristics, correct installation and configuration of the product.



# Index

|                                                                         |           |                                                                             |            |
|-------------------------------------------------------------------------|-----------|-----------------------------------------------------------------------------|------------|
| <b>1. Introduction .....</b>                                            | <b>7</b>  | <b>7. Parameter table.....</b>                                              | <b>84</b>  |
| 1.1 Functions and main features .....                                   | 7         | 7.1 Parameter table.....                                                    | 84         |
| 1.2 Models and accessories.....                                         | 8         | 7.2 Configuring the iJF controller via the Applica app.....                 | 92         |
| <b>2. Installation .....</b>                                            | <b>13</b> | <b>8. Technical specifications .....</b>                                    | <b>94</b>  |
| 2.1 Warnings.....                                                       | 13        | 8.1 Connector/cable table .....                                             | 96         |
| 2.2 Small version for front panel mounting .....                        | 13        | <b>9. Alarms and signals.....</b>                                           | <b>97</b>  |
| 2.3 Small version with SPLIT mounting.....                              | 14        | 9.1 Signals.....                                                            | 97         |
| 2.4 Large version for front panel mounting .....                        | 16        | 9.2 Types of alarms.....                                                    | 97         |
| 2.5 Large version with SPLIT mounting .....                             | 17        | 9.3 Alarm table .....                                                       | 98         |
| 2.6 Small version with remote HMI terminal .....                        | 18        | 9.4 Low and high temperature alarms LO and HI .....                         | 99         |
| 2.7 Large version with remote HMI terminal .....                        | 20        | 9.5 HACCP alarms (HACCP = Hazard Analysis and Critical Control Point) ..... | 100        |
| 2.8 Description of the terminals.....                                   | 21        | 9.6 Dirty condenser alarm .....                                             | 101        |
| 2.9 Probe connections.....                                              | 23        | 9.7 Frost protection alarm .....                                            | 101        |
| 2.10 Connection diagrams .....                                          | 24        | 9.8 Refrigerant leak alarm rSF .....                                        | 102        |
| 2.11 Positioning inside the panel.....                                  | 24        | 9.9 Maintenance alarm.....                                                  | 102        |
| 2.12 Electrical installation .....                                      | 24        | 9.10 VCC compressor alarms with serial control.....                         | 103        |
| 2.13 Serial port connections.....                                       | 25        | <b>10. Logs .....</b>                                                       | <b>104</b> |
| 2.14 Installation.....                                                  | 25        | 10.1 Periodic logs.....                                                     | 104        |
| <b>3. Configuration tools.....</b>                                      | <b>26</b> | 10.2 Event log .....                                                        | 104        |
| 3.1 Spark: configuration and commissioning software .....               | 26        | <b>11. Appendix .....</b>                                                   | <b>105</b> |
| 3.2 Sparkly: command-line configuration and commissioning software..... | 26        | 11.1 ir33 and IJ parameter compatibility table .....                        | 105        |
| 3.3 Applica app and Controlla.....                                      | 27        | 11.2 Input/output configuration procedure.....                              | 107        |
| 3.4 Applica Desktop.....                                                | 27        | 11.3 Setting the default parameters/loading the parameter sets ...          | 108        |
| <b>4. User interface.....</b>                                           | <b>28</b> | 11.4 Copy configuration parameters .....                                    | 109        |
| 4.1 Introduction.....                                                   | 28        | 11.5 Preparing and using the configurations .....                           | 109        |
| 4.2 Models with user terminal or remote HMI.....                        | 29        | <b>12. Release notes.....</b>                                               | <b>110</b> |
| 4.3 SPLIT models without user terminal.....                             | 33        |                                                                             |            |
| <b>5. Commissioning.....</b>                                            | <b>34</b> |                                                                             |            |
| 5.1 Description of the initial configuration parameters.....            | 34        |                                                                             |            |
| 5.2 Set date/time and time bands .....                                  | 36        |                                                                             |            |
| 5.3 Checks after commissioning .....                                    | 36        |                                                                             |            |
| <b>6. Functions .....</b>                                               | <b>37</b> |                                                                             |            |
| 6.1 ON/OFF .....                                                        | 37        |                                                                             |            |
| 6.2 Inputs and outputs.....                                             | 38        |                                                                             |            |
| 6.3 Digital inputs .....                                                | 40        |                                                                             |            |
| 6.4 Analogue outputs .....                                              | 43        |                                                                             |            |
| 6.5 Digital outputs.....                                                | 43        |                                                                             |            |
| 6.6 Control.....                                                        | 47        |                                                                             |            |
| 6.7 Control modes.....                                                  | 49        |                                                                             |            |
| 6.8 Night-time operation.....                                           | 52        |                                                                             |            |
| 6.9 ECO operation .....                                                 | 53        |                                                                             |            |
| 6.10 Continuous cycle.....                                              | 53        |                                                                             |            |
| 6.11 Custom set points .....                                            | 54        |                                                                             |            |
| 6.12 Compressor .....                                                   | 54        |                                                                             |            |
| 6.13 Compressor protection times.....                                   | 54        |                                                                             |            |
| 6.14 Variable capacity compressor (VCC).....                            | 55        |                                                                             |            |
| 6.15 Pump down .....                                                    | 60        |                                                                             |            |
| 6.16 Defrost.....                                                       | 61        |                                                                             |            |
| 6.17 Evaporator fans .....                                              | 68        |                                                                             |            |
| 6.18 Condenser fans .....                                               | 72        |                                                                             |            |
| 6.19 Humidity management .....                                          | 74        |                                                                             |            |
| 6.20 Light management.....                                              | 77        |                                                                             |            |
| 6.21 Door management.....                                               | 77        |                                                                             |            |
| 6.22 Door - light interactions .....                                    | 78        |                                                                             |            |
| 6.23 Curtain management.....                                            | 78        |                                                                             |            |
| 6.24 Generic functions .....                                            | 79        |                                                                             |            |
| 6.25 Anti-sweat heater or fan.....                                      | 81        |                                                                             |            |
| 6.26 Gasket heater .....                                                | 82        |                                                                             |            |
| 6.27 Drain heater.....                                                  | 82        |                                                                             |            |
| 6.28 Temperature monitoring .....                                       | 83        |                                                                             |            |
| 6.29 High and low voltage protection (HLVP) .....                       | 83        |                                                                             |            |



# 1. INTRODUCTION

iJF is the range of CAREL electronic controls designed for commercial refrigeration food storage and display applications. The range comprises SMALL and LARGE formats, which differ in terms of the number of inputs/outputs and buttons available. Both formats allow different mounting methods: FRONT PANEL mounting with built-in display or SPLIT mounting, with or without REMOTE HMI DISPLAY. All models come with 115 - 230 Vac switching power supply and NFC (Near Field Communication) connectivity. All standard iJF display interfaces use backlit buttons with a capacitive touch screen.

A vast catalogue of options for integration into the device is available across the entire iJF range:

- Bluetooth to interact in real time with the chiller and access the data logs stored on the controller. Bluetooth antenna for connection to the Applica (service) and CONTROLLA apps (end user).
- Modbus over RS485 for connection to Carel or third-party supervisory systems (no external converter needed).
- VCC serial output to directly drive a VCC (variable capacity compressor) via serial link, without external adapters.
- Modulating outputs (0-10 V/PWM) to directly drive modulating loads such as frequency-controlled VCC compressors, dimmable lights or variable-speed fans.
- Humidity input to directly read a 0-5 V ratiometric humidity probe.
- Safety package with compressor protection against high and low power supply voltages (HLVP) and zero crossing function for the relays.
- RTC clock
- Different combinations of colours and keypads for the display.

The entire iJF range is integrated into the following CAREL support software and apps:

- Spark software for OEM technical departments; connection via RS485, BMS or port ID2 with specific converters.
- Applica Desktop software for OEM technical departments; connection via RS485, BMS or port ID2 with specific converters.
- Sparkly software for OEM production lines; connection via RS485.
- Applica app for technical service in the field; connection via NFC and BT.
- Controlla app for end users; connection via BT.

## 1.1 Functions and main features

The functions and most of the parameters available on the iJF range are mainly derived from the Carel ir33+ range. In addition to these, the following functions have been added:

- Read/write parameters via NFC (replacing the programming key).
- Temperature control in the dead band.
- Defrost drain heater.
- Fan cycles to avoid air stratification.
- Fan management for humidity levels (no dedicated probe needed).
- Door gasket heater.
- High and low power supply voltage detection.
- Refrigeration system failure alarm (rSF).

The iJF range has been designed to offer maximum flexibility through the use of modular hardware.

Main features of the basic versions:

- SMALL models, 4 inputs and up to 4 relays.
- LARGE models, 5 inputs and up to 6 relays.
- panel mounting with built-in display.
- split version with remote display.
- split version without remote display.
- 115-230 Vac  $\pm 10\%$  (90-264 Vac) switching power supply.
- NFC connectivity.

Fully-integrated options:

- Bluetooth (with real time clock).
- Real time clock.
- 1 RS485 serial port for supervisor with Modbus protocol.
- 1 VCC serial port (\*).
- 2 modulating outputs (0-10V/PWM/VCC by frequency) (\*).
- 1 x 0-5 V ratiometric input (\*).
- Compressor protection against high and low power supply voltages (HLVP) and zero crossing function for the relays.

(\*) versions are mutually exclusive

## 1.2 Models and accessories

Below are the features of the iJF models, divided by format and mounting.

Each product group can be identified based on the first 6 digits of the part number; please contact CAREL for the complete part numbers of the products available and the corresponding technical specifications.

### 1.2.1 SMALL controllers

#### FRONT PANEL mounting with built-in display



Fig. 1.a

| P/N (first 6 digits) | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IJFPSA               | <p>Basic features:</p> <ul style="list-style-type: none"> <li>switching power supply, 115-230 Vac with high and low voltage detection;</li> <li>NFC;</li> <li>2 probe inputs, 1 digital input, 1 multifunction input;</li> <li>max 4 relays (2HP 8A 5A 5A);</li> <li>removable, screw or fast-on terminals;</li> <li>single or multiple pack;</li> <li>black or white faceplate (*);</li> <li>white or red digits (*);</li> <li>6 backlit touch buttons.</li> </ul> <p>(*) Different colours available on custom models.</p> <p>Optional features:</p> <ul style="list-style-type: none"> <li>Bluetooth with RTC;</li> <li>RTC;</li> <li>HLVP, ZC;</li> <li>1 RS485 serial port for supervision.</li> </ul> <p>Mutually-exclusive options:</p> <ul style="list-style-type: none"> <li>1 VCC serial port;</li> <li>2 modulating outputs (0-10V/PWM/VCC by frequency, selectable for each output);</li> <li>1 x 0-5 V ratiometric input;</li> <li>1 RS485 Fieldbus serial port (secondary Modbus protocol only).</li> </ul> |

Tab. 1.a

#### SPLIT mounting



Fig. 1.b

| P/N (first 6 digits) | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IJFSSA               | <p>Basic features:</p> <ul style="list-style-type: none"> <li>switching power supply, 115-230 Vac with high and low voltage detection;</li> <li>NFC;</li> <li>2 probe inputs, 1 digital input, 1 multifunction input;</li> <li>max 4 relays (2HP 8A 5A 5A);</li> <li>removable, screw or faston terminals;</li> <li>single or multiple pack;</li> <li>JST connector at front for connection to remote display.</li> </ul> <p>Optional features:</p> <ul style="list-style-type: none"> <li>Bluetooth with RTC;</li> <li>RTC;</li> <li>HLVP, ZC;</li> <li>1 RS485 serial port for supervision.</li> </ul> <p>Mutually-exclusive options:</p> <ul style="list-style-type: none"> <li>1 VCC serial port;</li> <li>2 modulating outputs (0-10V/PWM/VCC by frequency, selectable for each output);</li> <li>1 x 0-5 V ratiometric input;</li> <li>1 RS485 Fieldbus serial port (secondary Modbus protocol only).</li> </ul> |

Tab. 1.b

#### Remote HMI terminal



Fig. 1.c

| P/N (first 6 digits) | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IJFHSA               | <p>Basic features:</p> <ul style="list-style-type: none"> <li>low voltage power supply from the controller;</li> <li>NFC;</li> <li>single or multiple pack;</li> <li>mini JST terminal for connection to the controller, fixed screw or removable;</li> <li>black or white faceplate (*);</li> <li>white or red digits (*);</li> <li>6 backlit touch buttons.</li> </ul> <p>(*) Different colours available on custom models.</p> <p>Optional features:</p> <ul style="list-style-type: none"> <li>Bluetooth;</li> <li>1 multifunction input, fixed screw or removable terminal.</li> </ul> |

Tab. 1.c

## 1.2.2 LARGE controllers

### FRONT PANEL mounting with built-in display



Fig. 1.d

| P/N (first 6 digits) | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IJFPLA               | <p>Basic features:</p> <ul style="list-style-type: none"> <li>switching power supply, 115-230 Vac with high and low voltage detection;</li> <li>NFC;</li> <li>3 probe inputs, 1 digital input, 1 multifunction input;</li> <li>max 6 relays (2HP 16A 8A 8A 8A 8A or 30A 16A 8A 8A 8A);</li> <li>removable, screw or faston terminals;</li> <li>single or multiple pack;</li> <li>black or white faceplate (*);</li> <li>white or red digits (*);</li> <li>8 backlit touch buttons.</li> </ul> <p>(*) Different colours available on custom models.</p> <p>Optional features:</p> <ul style="list-style-type: none"> <li>Bluetooth with RTC;</li> <li>RTC;</li> <li>HLVP, ZC;</li> <li>1 RS485 serial port for supervision.</li> </ul> <p>Mutually-exclusive options:</p> <ul style="list-style-type: none"> <li>1 VCC serial port;</li> <li>2 modulating outputs (0-10V/PWM/VCC by frequency, selectable for each output);</li> <li>1 x 0-5 V ratiometric input;</li> <li>1 RS485 Fieldbus serial port (secondary Modbus protocol only).</li> </ul> |

Tab. 1.d

### SPLIT mounting



Fig. 1.e

| P/N (first 6 digits) | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IJFSLA               | <p>Basic features:</p> <ul style="list-style-type: none"> <li>switching power supply, 115-230 Vac with high and low voltage detection;</li> <li>NFC;</li> <li>2 probe inputs, 1 digital input, 1 multifunction input;</li> <li>max 6 relays (2HP 16A 8A 8A 8A 8A or 30A 16A 8A 8A 8A);</li> <li>removable, screw or faston terminals;</li> <li>single or multiple pack;</li> <li>JST terminal at front for connection to remote display.</li> </ul> <p>Optional features:</p> <ul style="list-style-type: none"> <li>Bluetooth with RTC;</li> <li>RTC;</li> <li>HLVP, ZC;</li> <li>1 RS485 serial port for supervision.</li> </ul> <p>Mutually-exclusive options:</p> <ul style="list-style-type: none"> <li>1 VCC serial port;</li> <li>2 modulating outputs (0-10V/PWM/VCC by frequency, selectable for each output);</li> <li>1 x 0-5 V ratiometric input;</li> <li>1 RS485 Fieldbus serial port (secondary Modbus protocol only).</li> </ul> |

Tab. 1.e

## Remote HMI terminal



Fig. 1.f

| P/N (first 6 digits) | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IJFHLA               | <p>Basic features:</p> <ul style="list-style-type: none"> <li>• low voltage power supply from the controller;</li> <li>• NFC;</li> <li>• single or multiple pack;</li> <li>• JST terminal for connection to the controller, fixed screw or removable;</li> <li>• black or white faceplate (*);</li> <li>• white or red digits (*);</li> <li>• 8 backlit touch buttons.</li> </ul> <p>(*) Different colours available on custom models.</p> <p>Optional features:</p> <ul style="list-style-type: none"> <li>• Bluetooth;</li> <li>• 1 probe input, 1 digital input, 1 multifunction input, with fixed screw or removable terminals.</li> </ul> |

Tab. 1.f

## 1.2.3 Accessories



**Notice:** This list of ACCESSORY part numbers is updated as of the release date of this manual; please contact CAREL for any additional part numbers available.

## Connector kit



Fig. 1.g

| P/N           | Description                                                    |
|---------------|----------------------------------------------------------------|
| BXOPZB35002B1 | removable connector kit, 2-pin, 3.5 mm pitch, black (10 pcs)   |
| BXOPZB35003B1 | removable connector kit, 3-pin, 3.5 mm pitch, black (10 pcs)   |
| BXOPZB38102G1 | removable connector kit, 2-pin, 3.81 mm pitch, green (10 pcs)  |
| BXOPZB38104G1 | removable connector kit, 4-pin, 3.81 mm pitch, green (10 pcs)  |
| BXOPZB38105G1 | removable connector kit, 5-pin, 3.81 mm pitch, green (10 pcs)  |
| BXOPZB50802O1 | removable connector kit, 2-pin, 5.08 mm pitch, orange (10 pcs) |
| BXOPZB50803G1 | removable connector kit, 3-pin, 5.08 mm pitch, green (10 pcs)  |
| BXOPZB50805G1 | removable connector kit, 5-pin, 5.08mm pitch, green (10 pcs)   |
| BXOPZB50807G1 | removable connector kit, 7-pin, 5.08 mm pitch, green (10 pcs)  |

Tab. 1.g

## Fixing brackets



Fig. 1.h

| P/N           | Description                                                |
|---------------|------------------------------------------------------------|
| BXOPZMBRC0002 | Built-in version panel bracket kit, multiple pack (20 pcs) |
| ACS00CK001602 | panel bracket kit for HMI version multiple pack (20 pcs)   |

Tab. 1.h

## Cables

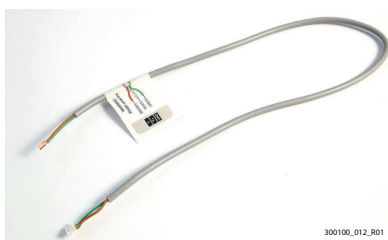


Fig. 1.i

| P/N           | Description                                           |
|---------------|-------------------------------------------------------|
| BXOPZC3000050 | 3-wire cable jst mini/free end 50 cm (1 pc)           |
| BXOPZC3S00250 | 3-wire cable jst mini/free end shielded 250 cm (1 pc) |

Tab. 1.i

## Cables for HMI display



Fig. 1.j

| P/N           | Description                                  |
|---------------|----------------------------------------------|
| BXOPZC4000150 | 4-wire cable jst mini/jst mini 150cm (1 pc)  |
| BXOPZC4000300 | 4-wire cable jst mini/jst mini 300cm (1 pc)  |
| BXOPZC4010300 | 4-wire cable jst mini/free end 300 cm (1 pc) |

Tab. 1.j

## Cables for VCC compressor inverters

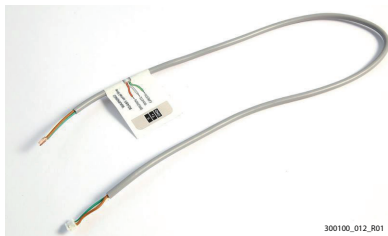


Fig. 1.k

| P/N           | Description                                                                 |
|---------------|-----------------------------------------------------------------------------|
| BXOPZC30E0100 | 3-pin mini JST/free end shielded cable for Embraco inverter, 100 cm (1 pc)  |
| BXOPZC30E0104 | 3-pin mini JST/free end shielded cable for Embraco inverter, 100 cm (40 pc) |
| BXOPZC30S0100 | 3-pin mini JST/free end shielded cable for Secop inverter, 100 cm (1 pc)    |

Tab. 1.k

## Adapter kits

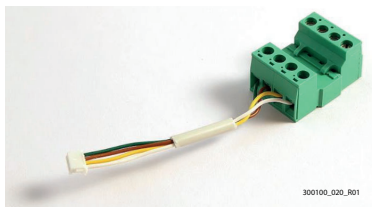


Fig. 1.l

| P/N           | Description                                         |
|---------------|-----------------------------------------------------|
| BXOPZC4020010 | 4-wire cable JST mini/removable adapter 10cm (1 pc) |

Tab. 1.l

## Converters



Fig. 1.m

| P/N           | Description                                  |
|---------------|----------------------------------------------|
| BXOPZIOWD0000 | USB/1-wire converter for Digital Input (DI2) |
| BXOPZI4850000 | RS485 converter for TTL serial port          |
| CVSTDUMORO    | USB/RS485 converter                          |

Tab. 1.m

## Gaskets

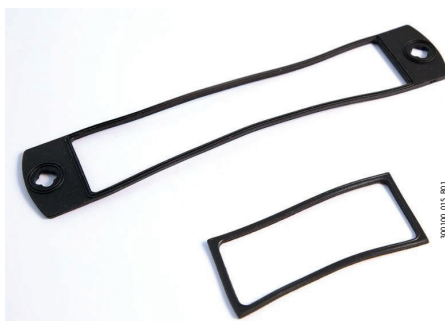


Fig. 1.n

| P/N           | Description                                     |
|---------------|-------------------------------------------------|
| BXOPZMGKS0001 | Gasket for rear mounting - Split Small (10 pcs) |
| BXOPZMGKI0001 | Gasket for rear mounting - Split Large (10 pcs) |

Tab. 1.n

## 1.2.4 Temperature sensors



Fig. 1.o

| P/N        | Type                               | Description                               | Range                         |
|------------|------------------------------------|-------------------------------------------|-------------------------------|
| NTC***HP0* | 10 kΩ±1%@25°C,<br>IP67 β 3435      | Temperature probe                         | -50 to 50°C<br>(105°C in air) |
| NTC***HF01 | 10 kΩ±1%@25°C,<br>IP67 β 3435      | Evaporator outlet<br>temperature probe    | -50 to 90°C strap-on          |
| PT1060HP01 | PT1000<br>Class B, IP67            | Temperature probe                         | -50T105°C in air              |
| PT1***HF01 | PT1000<br>Class B, IP67            | Evaporator outlet<br>temperature probe    | 50T105°C in air               |
| DPRC*      | NTC 10KΩ@25°C<br>β3435 - 0...5 Vdc | Ambient temperature<br>and humidity probe | -10T60°C -<br>10...90% U.R    |

Tab. 1.o



**Notice:** see manuals +040010025 (ITA- ENG) /+040010026 (FRE-GER) for guidelines on installing the sensors on the unit.

Installation example with one evaporator

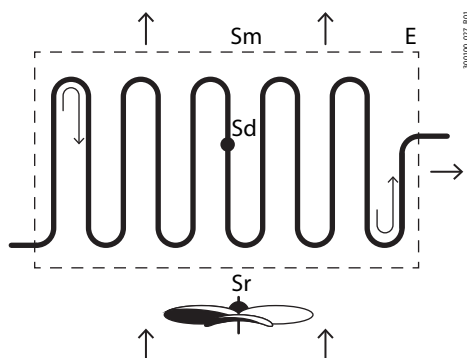


Fig. 1.p

**Key:**

| P/N | Description   |
|-----|---------------|
| Sm  | Outlet probe  |
| Sr  | Intake probe  |
| Sd  | Defrost probe |
| E   | Evaporator    |

Tab. 1.p

## 2. INSTALLATION

### 2.1 Warnings

**⚠ Caution:** avoid installing the controller in environments with the following characteristics:

- temperature and humidity that do not comply with the ambient operating conditions (see "Technical specifications");
- strong vibrations or knocks;
- exposure to water sprays or condensate;
- exposure to aggressive and polluting atmospheres (e.g.: sulphur and ammonia gases, saline mist, smoke) which may cause corrosion and/or oxidation;
- strong magnetic and/or radio frequency interference (thus avoid installation near transmitting antennae);
- exposure to direct sunlight and the elements in general;
- wide and rapid fluctuations in ambient temperature;
- exposure of the controller to dust (formation of corrosive patina with possible oxidation and reduction of insulation);

### 2.2 Small version for front panel mounting

#### 2.2.1 Dimensions mm (inch)

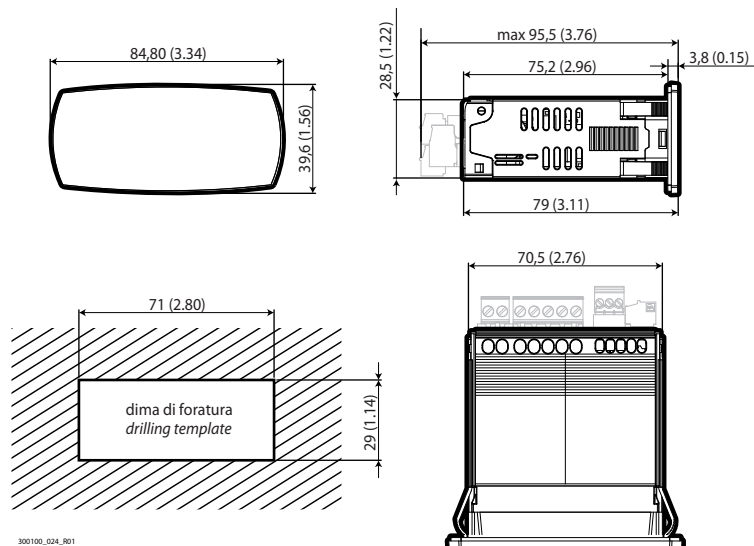


Fig. 2.a

#### 2.2.2 Assembly

**⚠ Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

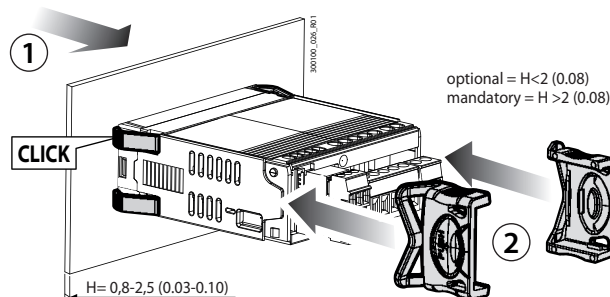


Fig. 2.b

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel, up to a maximum thickness of 2 mm).
3. If necessary, fit the fixing brackets.



**Caution:** IP65 front protection is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface:  $\leq 0.5$  mm (0.02 in);
- thickness of the electrical panel sheet metal: 0.8-2 mm (0.03-0.1 in); for thicknesses from 2-2.5 mm (0.08-0.10 in), the optional fixing brackets are required;
- maximum roughness of the surface where the gasket is applied:  $\leq 120$   $\mu$ m.



**Notice:** the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

## 2.2.3 Removal

**Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

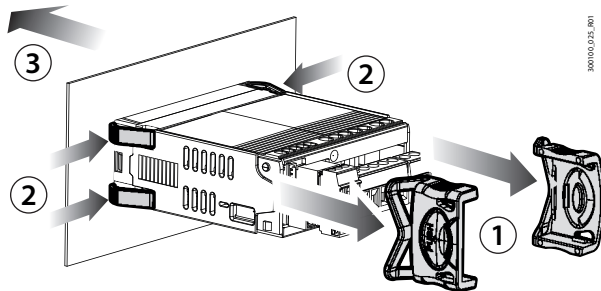


Fig. 2.c

Open the electrical panel and from the rear:

1. remove the fixing brackets (if fitted);
2. gently press the side anchoring tabs on the controller;
3. exert slight pressure on the controller until it is removed.

## 2.3 Small version with SPLIT mounting

### 2.3.1 Dimensions - mm (in)

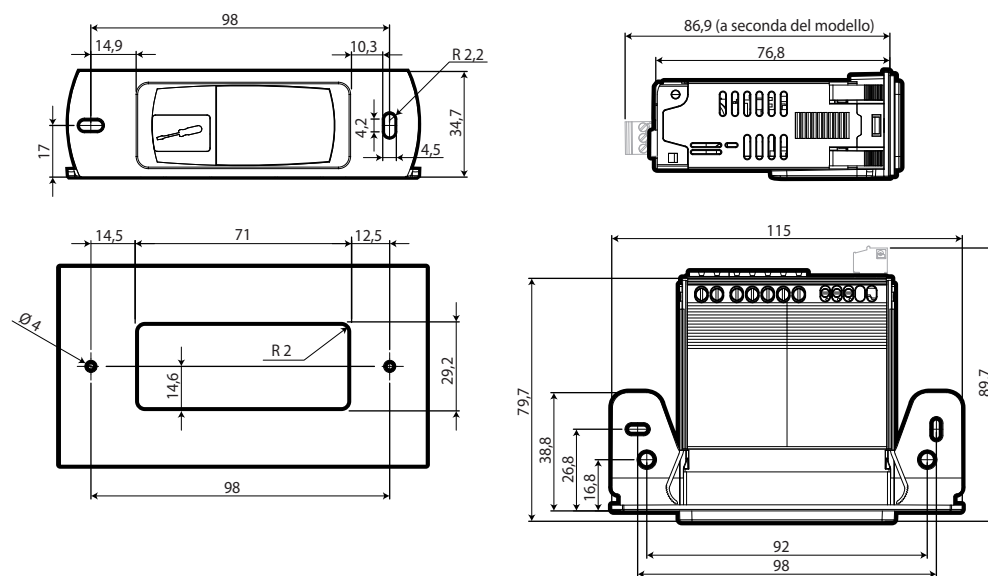


Fig. 2.d

### 2.3.2 Assembly

**⚠ Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

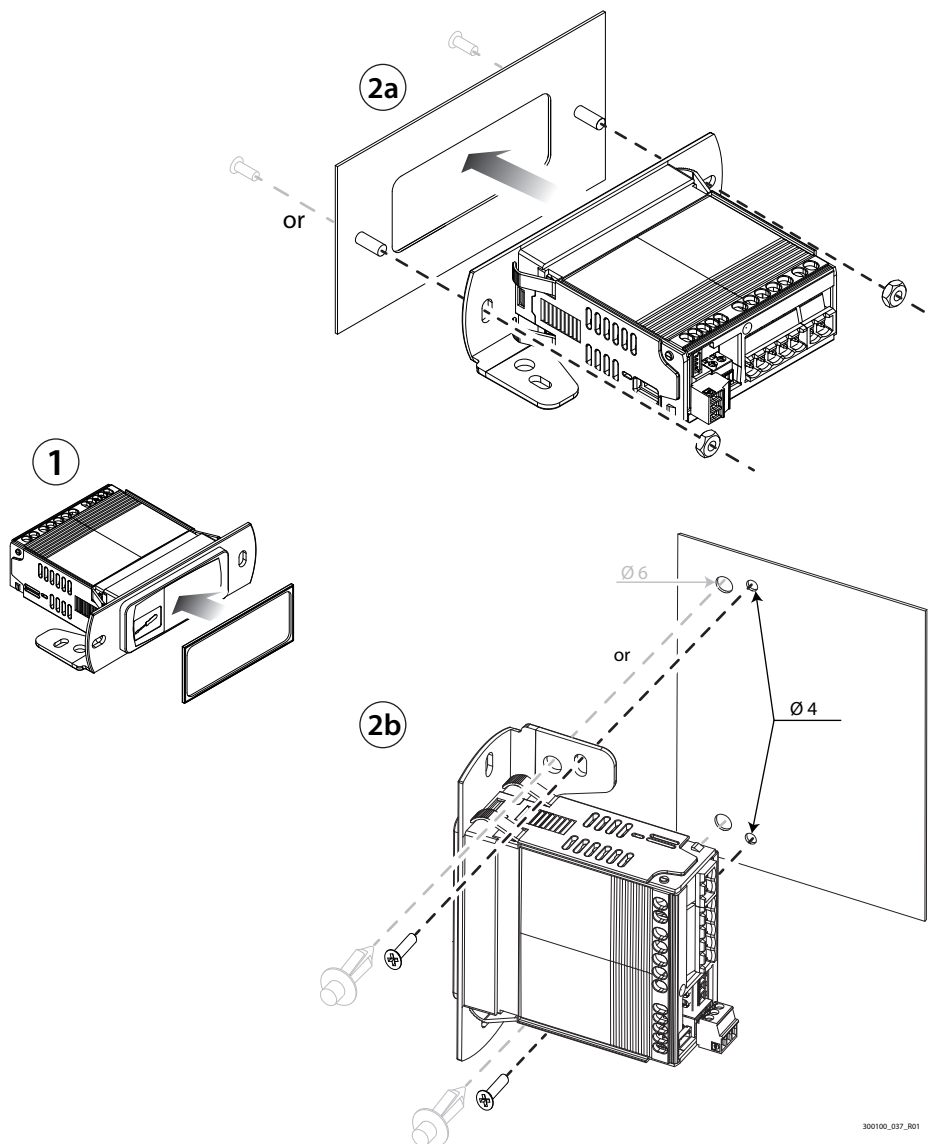


Fig. 2.e

1. Place the gasket on the front of the controller (for surface mounting only);
2. Place the controller over the drilling template or in the fixing position;
3. Tighten the fixing screws or insert the clips into the holes provided, as shown in the figure.

**⚠ Caution:** IP20 or IP45 front protection (with or without user interface connected, respectively) is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface:  $\leq 0.5 \text{ mm}$  (0.02 in);
- maximum roughness of the surface where the gasket is applied:  $\leq 120 \text{ }\mu\text{m}$ .

**📌 Notice:** the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

### 2.3.3 Removal

**⚠ Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. unscrew the fixing screws or remove the clips.

## 2.4 Large version for front panel mounting

### 2.4.1 Dimensions - mm (in)

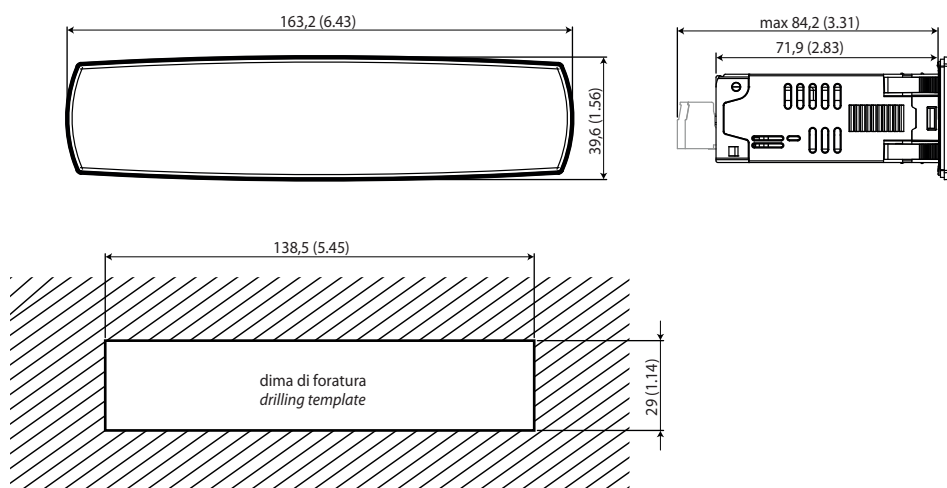


Fig. 2.f

### 2.4.2 Assembly

**Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

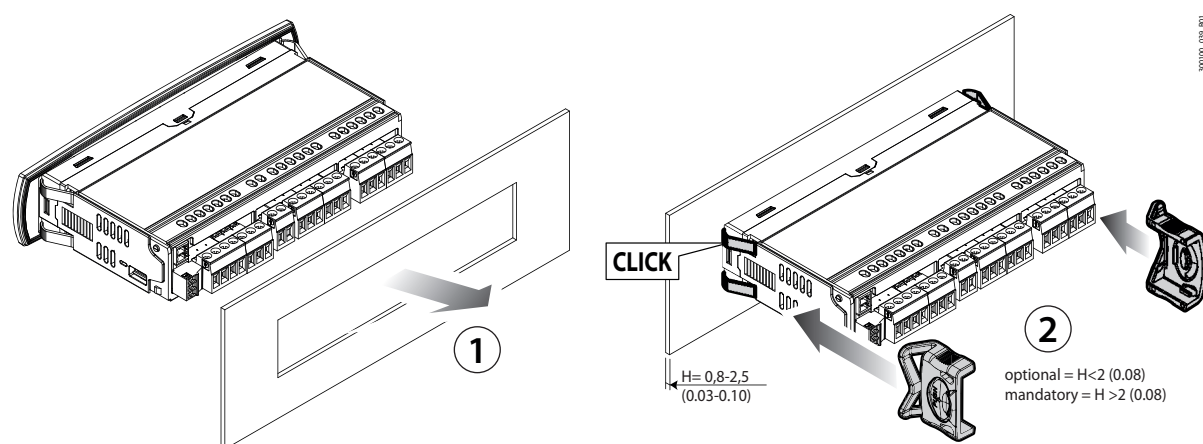


Fig. 2.g

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel, up to a maximum thickness of 2 mm).
3. If necessary, fit the fixing brackets.

**Caution:** IP65 or IP43 front protection (with or without fixing brackets, respectively) is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface:  $\leq 0.5$  mm (0.02 in);
- thickness of the electrical panel sheet metal: 0.8-2 mm (0.03-0.1 in); for thicknesses from 2-2.5 mm (0.08-0.10 in), the optional fixing brackets are required;
- maximum roughness of the surface where the gasket is applied:  $\leq 120$   $\mu\text{m}$ .

**Notice:** the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

### 2.4.3 Removal

**Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. remove the fixing brackets (if fitted);
2. gently press the side anchoring tabs on the controller;
3. exert slight pressure on the controller until it is removed.

## 2.5 Large version with SPLIT mounting

### 2.5.1 Dimensions - mm (in)

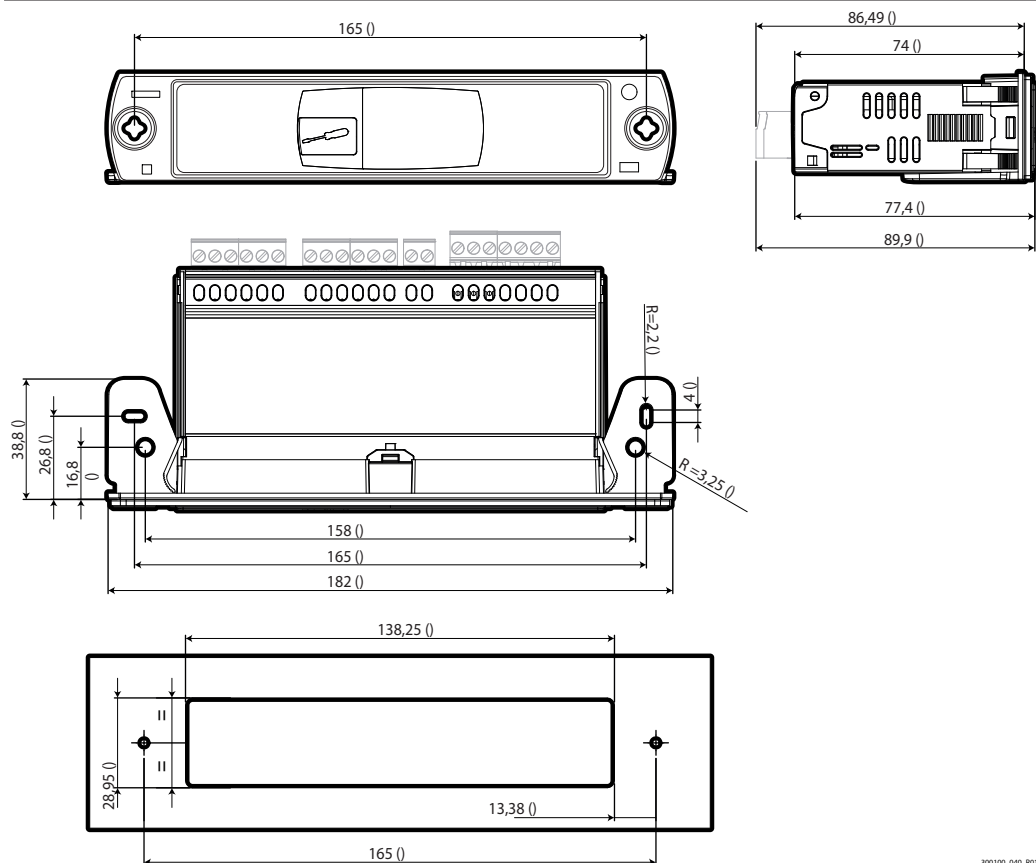


Fig. 2.h

### 2.5.2 Assembly

**⚠ Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

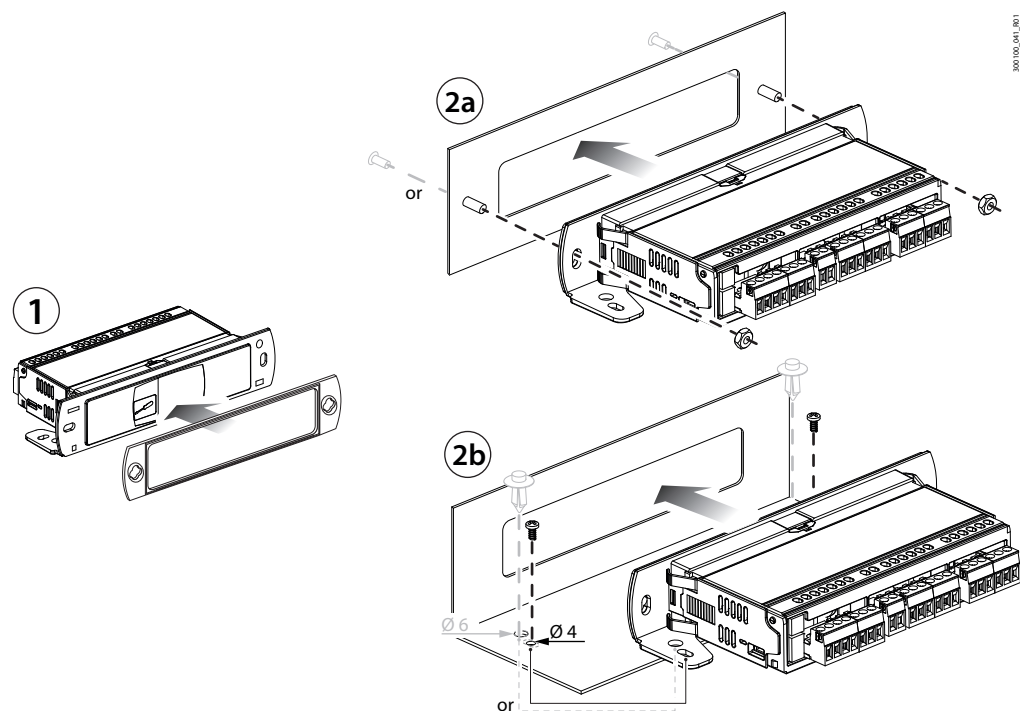


Fig. 2.i

1. Place the gasket on the front of the controller (for surface mounting only);
2. Place the controller over the drilling template or in the fixing position;
3. Tighten the fixing screws or insert the clips into the holes provided, as shown in the figure.

**⚠ Caution:** IP20 or IP45 front protection (with or without user interface connected, respectively) is guaranteed only if the following conditions are met:

Maximum deviation of the rectangular opening from flat surface:  $\leq 0.5 \text{ mm}$  (0.02 in);

Maximum roughness of the surface where the gasket is applied:  $\leq 120 \mu\text{m}$ .

**📌 Notice:** the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

### 2.5.3 Removal

**⚠ Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. unscrew the fixing screws or remove the clips.

## 2.6 Small version with remote HMI terminal

### 2.6.1 Dimensions - mm (in)

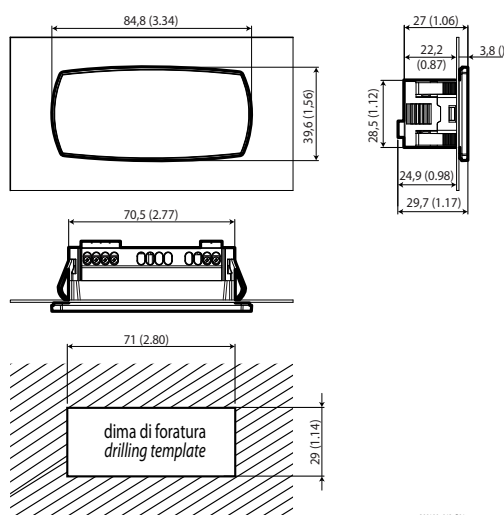


Fig. 2.j

### 2.6.2 Assembly

**⚠ Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

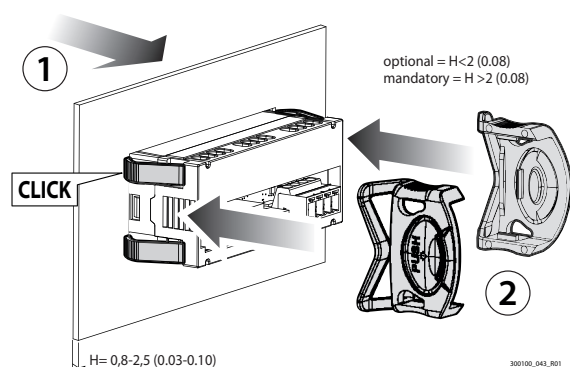


Fig. 2.k

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel, up to a maximum thickness of 2 mm).
3. If necessary, fit the fixing brackets.



**Caution:** IP65 front protection is guaranteed only if the following conditions are met:

Maximum deviation of the rectangular opening from flat surface:  $\leq 0.5$  mm (0.02 in);

Thickness of the electrical panel sheet metal: 0.8-2 mm (0.03-0.1 in); for thicknesses from 2-2.5 mm (0.08-0.10 in), the optional fixing brackets are required;

Maximum roughness of the surface where the gasket is applied:  $\leq 120$   $\mu\text{m}$ .



**Notice:** the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

### 2.6.3 Removal



**Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. remove the fixing brackets (if fitted);
2. gently press the side anchoring tabs on the controller;
3. exert slight pressure on the controller until it is removed.

### 2.6.4 HMI connection



**Caution:** disconnect the controller before carrying out any maintenance.

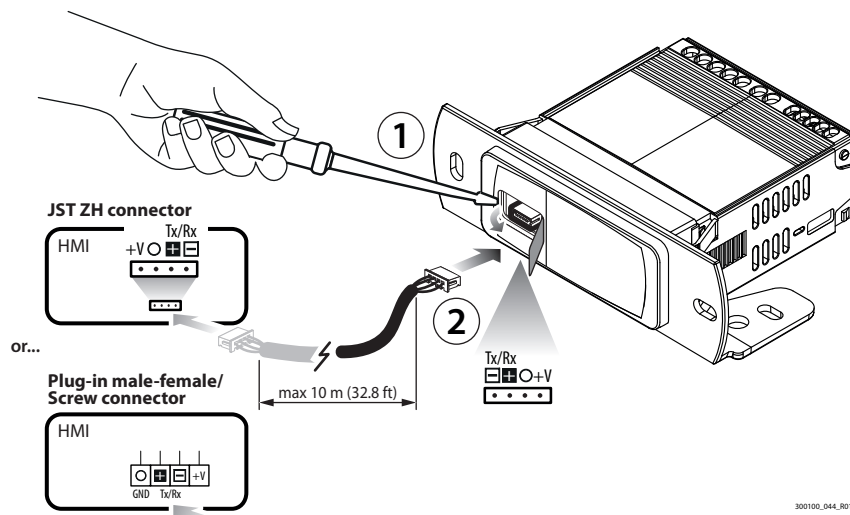


Fig. 2.I

Open the electrical panel and from the rear:

1. using a screwdriver, remove the rubber protection from the front of the Split controller;
2. connect the 4-wire cable to the mini JST connector on the controller;
3. connect the 4-wire cable to the mini JST or screw/removable connector on the user interface.



**Caution:** for HMIs with screw or removable terminals, respect the order of the wiring.



**Notice:** see "Introduction" for the cable part numbers.

## 2.7 Large version with remote HMI terminal

### 2.7.1 Dimensions - mm (in)

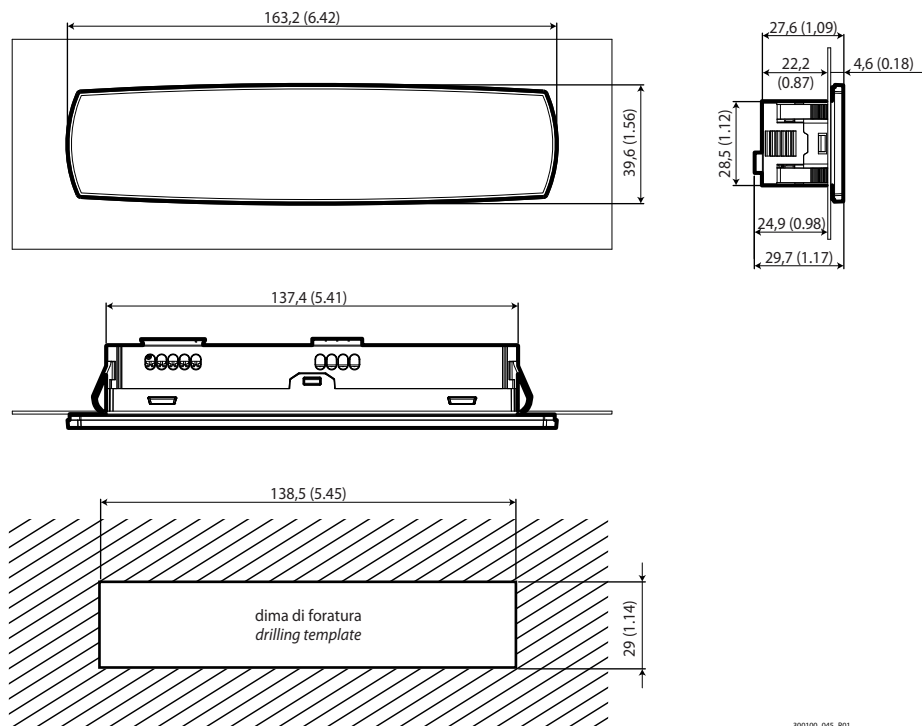


Fig. 2.m

### 2.7.2 Assembly

**Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel, up to a maximum thickness of 2 mm).
3. If necessary, fit the fixing brackets.

**Caution:** IP65 or IP43 front protection (with or without fixing brackets, respectively) is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface:  $\leq 0.5$  mm (0.02 in);
- thickness of the electrical panel sheet metal: 0.8-2 mm (0.03-0.1 in); for thicknesses from 2-2.5 mm (0.08-0.10 in), the optional fixing brackets are required;
- maximum roughness of the surface where the gasket is applied:  $\leq 120$   $\mu\text{m}$ .

**Notice:** the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

### 2.7.3 Removal

**Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. remove the fixing brackets (if fitted);
2. gently press the side anchoring tabs on the controller;
3. exert slight pressure on the controller until it is removed.

## 2.7.4 Remote HMI terminal connection

**⚠ Caution:** before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to “off”.

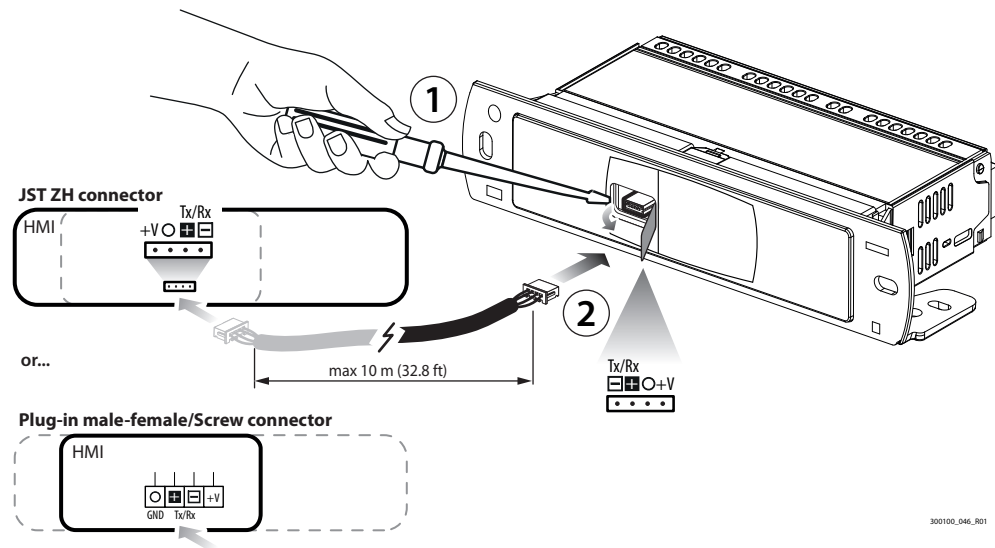


Fig. 2.n

Open the electrical panel and from the rear:

1. using a screwdriver, remove the rubber protection from the front of the Split controller;
2. connect the 4-wire cable to the mini JST connector on the controller;
3. connect the 4-wire cable to the mini JST or screw/removable connector on the user interface.

**⚠ Caution:** for HMIs with screw or removable terminals, respect the order of the wiring.

**📢 Notice:** see “Introduction” for the cable part numbers.

## 2.8 Description of the terminals

Small model

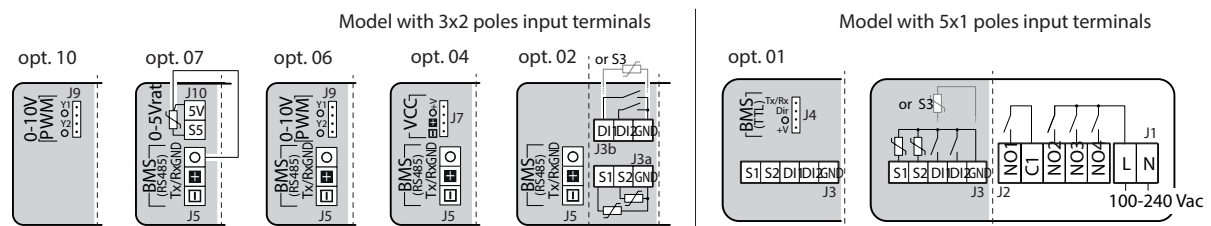


Fig. 2.o

| Ref.         | Description                                                                  | Ref. | Description                             |
|--------------|------------------------------------------------------------------------------|------|-----------------------------------------|
| J1           | L — Power supply                                                             | J5   | - BMS serial port (RS485): Rx-/Tx-      |
|              | N — Power supply                                                             |      | + BMS serial port (RS485): Rx+/Tx+      |
| J2           | NO1 Digital output (relay) 1                                                 |      | O BMS serial port (RS485): GND          |
|              | C1 Common for relay 1                                                        | J7   | - VCC serial port: Rx-/Tx-              |
|              | NO2 Digital output (relay) 2                                                 |      | + VCC serial port: Rx+/Tx+              |
|              | NO3 Digital output (relay) 3                                                 |      | O VCC serial port: GND                  |
|              | NO4 Digital output (relay) 4                                                 | J9   | Y1 Analogue output 1                    |
| J3, J3a, J3b | S1 Analogue input 1 (NTC, PTC or PT1000, NTC_HT and NTC_LT)                  |      | O GND: analogue output reference        |
|              | S2 Analogue input 2 (NTC, PTC or PT1000, NTC_HT and NTC_LT)                  |      | Y2 Analogue output 2                    |
|              | DI1 Digital input 1/Analogue input 3 (NTC, PTC or PT1000, NTC_HT and NTC_LT) |      | O GND: analogue output reference        |
|              | DI2 Digital input 2                                                          | J10  | 5V Ratiometric probe power supply       |
|              | GND GND: reference for probes, digital inputs and analogue outputs           |      | S5 Analogue input 5 (ratiometric probe) |
| J4           | Tx/Rx TTL port: Tx/Rx                                                        |      |                                         |
|              | Dir TTL port: Dir                                                            |      |                                         |
|              | +V TTL port: +V                                                              |      |                                         |
|              | O TTL port: GND                                                              |      |                                         |

Tab. 2.q

Fig. 2.p

| Ref. | Description                                                                | Ref. | Description                             |
|------|----------------------------------------------------------------------------|------|-----------------------------------------|
| J1   | L<br>N Power supply                                                        | J4   | Tx/Rx TTL port: Tx/Rx                   |
| J2a  | NO1 Digital output (relay) 1                                               |      | Dir TTL port: Dir                       |
|      | C1 Common for relay 1.2                                                    |      | O TTL port: GND                         |
|      | NO2 Digital output (relay) 2                                               |      | +V TTL port: +V                         |
| J2b  | C3 Common for relay 3.4                                                    | J5   | - BMS serial port (RS485): Rx-/Tx-      |
|      | NO3 Digital output (relay) 3                                               |      | + BMS serial port (RS485): Rx+/Tx+      |
|      | NO4 Digital output (relay) 4                                               |      | O BMS serial port (RS485): GND          |
| J2c  | NO5 Digital output (relay) 5                                               | J7   | - VCC serial port: Rx-/Tx-              |
|      | C5 Common for relay 5                                                      |      | + VCC serial port: Rx+/Tx+              |
| J2d  | C6 Common for relay 6                                                      |      | O VCC serial port: GND                  |
|      | NC6 Digital output (relay) 6, normally-closed contact                      | J9   | Y1 Analogue output 1                    |
|      | NO6 Digital output (relay) 6, normally-open contact                        |      | O GND: analogue output reference        |
| J3a  | S1 Analogue input 1 (NTC, PTC, PT1000, NTC_HT and NTC_LT)                  |      | Y2 Analogue output 2                    |
|      | S2 Analogue input 2 (NTC, PTC, PT1000, NTC_HT and NTC_LT)                  |      | O GND: analogue output reference        |
|      | GND GND: reference for probes, digital inputs and analogue outputs         | J10  | 5V Ratiometric probe power supply       |
|      | DI1 Digital input 1/Analogue input 3 (NTC, PTC, PT1000, NTC_HT and NTC_LT) |      | S5 Analogue input 5 (ratiometric probe) |
| J3b  | DI2 Digital input 2                                                        |      |                                         |
|      | GND GND: reference for probes, digital inputs and analogue outputs         |      |                                         |
|      | S4 Analogue input 4 (NTC, PTC, PT1000, NTC_HT and NTC_LT)                  |      |                                         |

Tab. 2.r

### Plug-in male-female/ Screw connector

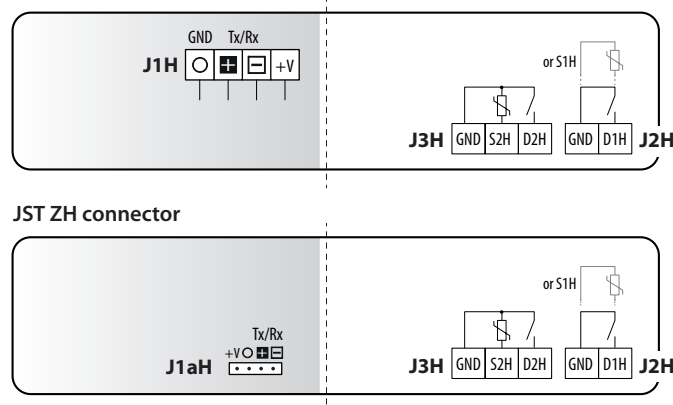


Fig. 2.q

### Plug-in male-female/ Screw connector

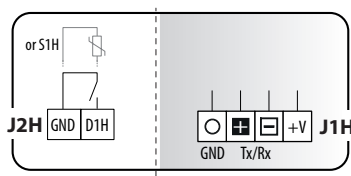


Diagram of the J2H and J1aH connectors. J2H is a 2-pin connector with GND and D1H pins. J1aH is a 4-pin connector with Tx/Rx, +V, and two ground pins.

Fig. 2.r

| Ref. small | Description |
|------------|-------------|
| J1H, J1aH  | -           |
|            | +           |
|            | O           |
|            | +V          |
| J2H        | D1H         |
|            | GND         |
| J3H        | GND         |
|            | S2H         |
|            | D2H         |



Tab. 2.s

## 2.9 Probe connections



### Notice:

- the probe connections relate to the default parameter configuration;
- probes S1, S2, S3 can be configured as NTC, PTC, PT1000, NTC\_HT or NTC\_LT; probes S1H, S2H can only be configured as NTC;
- the temperature probes must all be the same type.

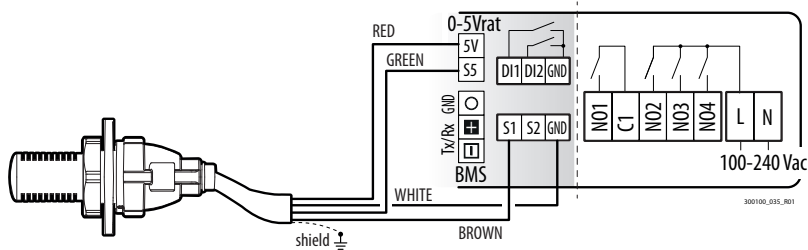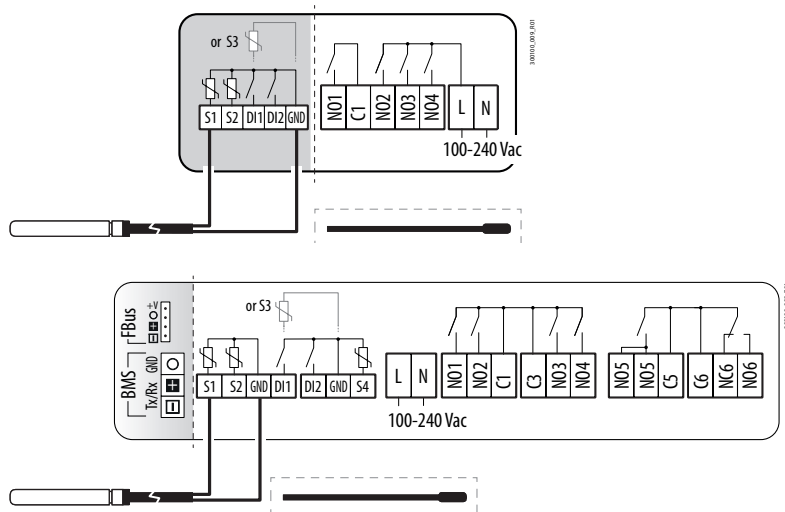

## 2.10 Connection diagrams

**Notice:** the “Applica” app and the configuration tool (see the corresponding chapter) can be used to change the configuration of the probes without needing to rewire or change the assignment of the relays to specific functions, thus taking advantage of different capacities when needed.

### 2.10.1 Small model

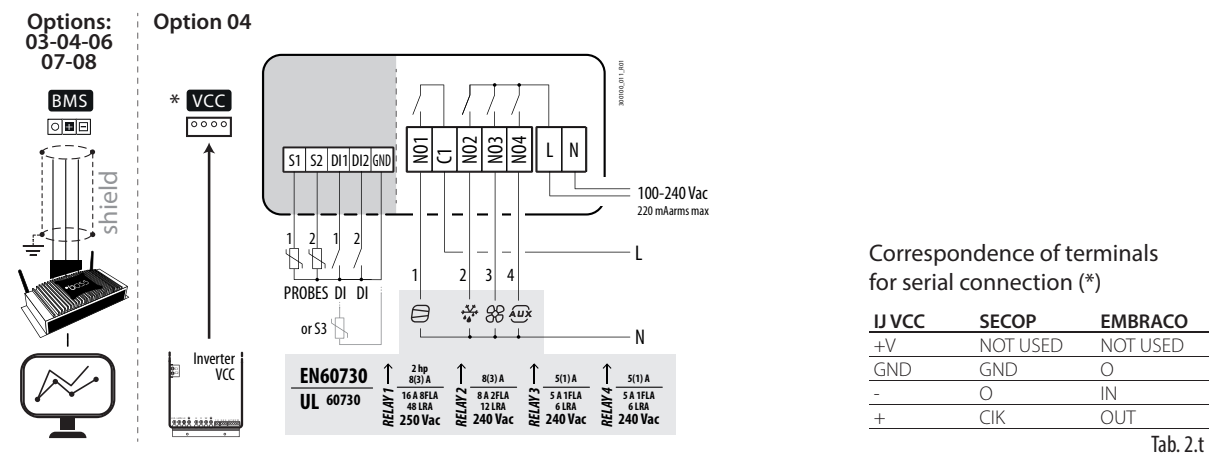


Fig. 2.u

### 2.10.2 Large model

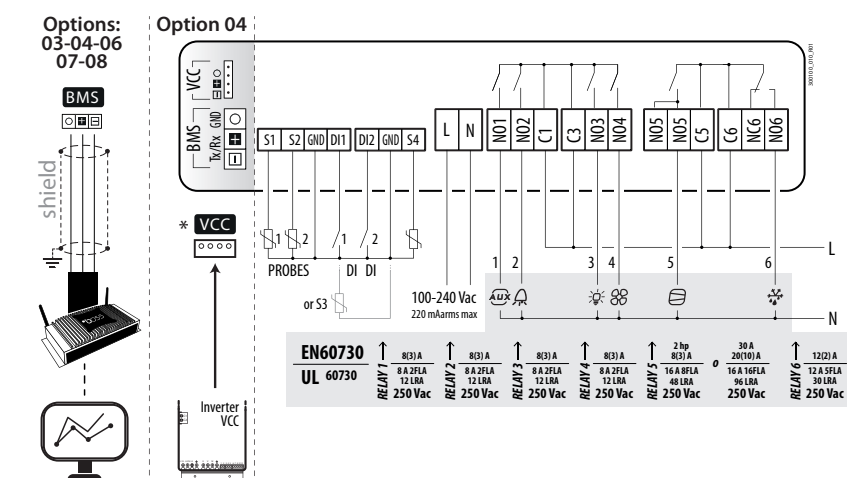


Fig. 2.v

## 2.11 Positioning inside the panel

The position of the controller in the electrical cabinet must be chosen so as to guarantee correct physical separation from the power components (solenoids, contactors, actuators, inverters, ...) and the connected cables. Proximity to such devices/cables may create random malfunctions that are not immediately evident. The structure of the panel must allow the correct flow of cooling air.

## 2.12 Electrical installation

**Caution:** when laying the wiring, “physically” separate the power part from the control part. The proximity of these two sets of wires will, in most cases, cause problems of induced disturbance or, over time, malfunctions or damage to the components. The ideal solution is to house these two circuits in two separate cabinets. Sometimes this is not possible, and therefore the power part and the control part must be installed in two separate areas inside the same panel.

For the control signals, it is recommended to use shielded cables with twisted wires. If the control cables have to cross over the power cables, the intersections must be as near as possible to 90 degrees, always avoiding running the control cables parallel to the power cables.

Pay attention to the following warnings:

- use cable ends suitable for the corresponding terminals. Loosen each screw and insert the cable ends, then tighten the screws. When the operation is completed, slightly tug the cables to check they are sufficiently tight;
- separate as much as possible the probe signal, digital input and serial line cables from the cables carrying inductive loads and power cables to avoid possible electromagnetic disturbance. Never run power cables (including the electrical cables) and probe signal cables in the same conduits. Do not install the probe cables in the immediate vicinity of power devices (contactors, circuit breakers or similar);
- reduce the path of the probe cables as much as possible, and avoid spiral paths that enclose power devices;
- avoid touching or nearly touching the electronic components fitted on the boards to avoid electrostatic discharges (extremely damaging) from the operator to the components;
- do not secure the cables to the terminals by pressing the screwdriver with excessive force, to avoid damaging the controller: maximum tightening torque: 0.22-0.25 N·m.
- for applications subject to considerable vibrations (1.5 mm pk-pk 10/55 Hz), secure the cables connected to the controller around 3 cm from the connectors using cable ties;
- all the extra low voltage connections (analogue and digital inputs, analogue outputs, serial bus connections, power supplies) must have reinforced or double insulation from the mains network.

## 2.13 Serial port connections

For serial connections (FBus and BMS ports), the cables used must be suitable for the RS485 standard (shielded twisted pair, see the specifications in the following table). The earth connection of the shield must be made using the shortest connection possible on the metal plate at the bottom of the electrical panel.

| Main device      | Serial port | Lmax (m) | Wire/wire capacitance (pF/m) | Resistance on last device | Max secondary devices on bus | Data rate (bit/s) |
|------------------|-------------|----------|------------------------------|---------------------------|------------------------------|-------------------|
| IJ%              | VCC         | 500      | <90                          | -                         | 1                            | 600               |
| PC (supervision) | BMS         | 500      | <90                          | 120 Ω                     | -                            | 19200             |
| PC (supervision) | TTL         | <90      | -                            | -                         | 19200                        | -                 |

Tab. 2.u

**! Caution:** connect the shield to the earth in the electrical panel. Connect a 120 Ω terminating resistor between the Tx/Rx+ and Tx/Rx- terminals on the last controller on the RS485 line. Do not connect GND to earth.

## 2.14 Installation

For installation proceed as follows, with reference to the wiring diagrams:

- before performing any operations on the control board, disconnect the main power supply by turning the main switch in the electrical panel OFF;
- avoid touching the control board, as electrostatic discharges may damage the electronic components;
- the index of protection required for the application must be ensured by the manufacturer of the cabinet or by suitable assembly of the controller;
- connect any digital inputs, Lmax = 10 m;
- connect the actuators: the actuators should only be connected after having programmed the controller. Carefully evaluate the maximum ratings of the relay outputs as indicated in "Controller electrical and physical specifications";
- program the controller: see "User interface";
- for safety devices (e.g. circuit breakers), comply with the following requirements:
  - IEC 60364-4-41;
  - standards in force in the country;
  - connection technical requirements of the power company.

**! Caution:** the following warnings must be observed when connecting the controllers:

- incorrect connection to the power supply may seriously damage the controller;
- use cable ends suitable for the corresponding terminals. Loosen each screw and insert the cable ends, then tighten the screws and lightly tug the cables to check correct tightness;
- separate as much as possible the probe and digital input cables from cables to inductive loads and power cables, so as to avoid possible electromagnetic disturbance. Never run power cables (including the electrical panel cables) and probe signal cables in the same conduits;
- do not install the probe cables in the immediate vicinity of power devices (contactors, circuit breakers, etc.). reduce the path of probe cables as much as possible, and avoid spiral paths that enclose power devices.

## 3. CONFIGURATION TOOLS

### 3.1 Spark: configuration and commissioning software

Spark is configuration software for laptops that provides the following functions:

- configure access and password levels;
- change parameter sets and create custom read/write lists to upload to the device;
- add languages and parameter descriptions;
- view the trends of physical quantities in real time, with the possibility to save data in Excel format.

In order to carry out the operations mentioned above, it is necessary to have a specific "workspace" file (file with .spark extension), which can be downloaded from [ksa.carel.com](http://ksa.carel.com).



**Notice:** the workspace is specific for each firmware version; the correct combination of file-controller firmware version is required for correct communication.

For the electrical connection, use the USB/RS485 converter CVSTDUMOR0 for models equipped with BMS port option.

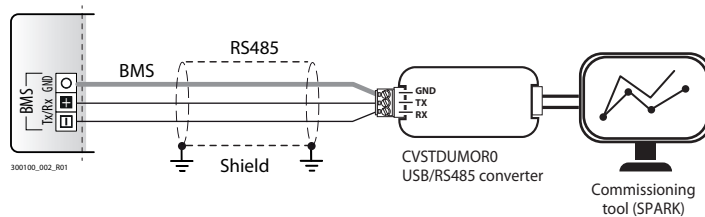


Fig. 3.a

For models without BMS port option, the USB/ID converter BXOPZIOWD0000 can be used, connecting to digital input ID2 and completing the specific procedure on Spark.

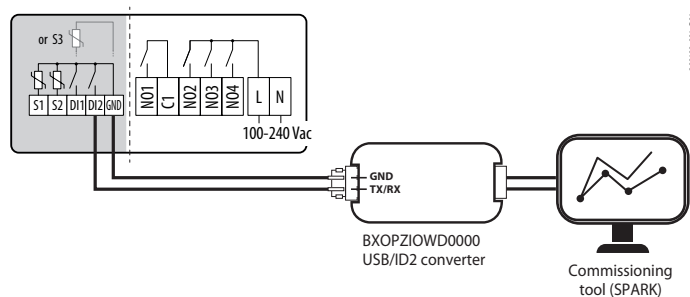


Fig. 3.b

### 3.2 Sparkly: command-line configuration and commissioning software

Sparkly is the command-line version of the configuration tool, and can be used for configuring and commissioning iJF. Contact Carel for support.

### 3.3 Applica app and Controlla

The Carel apps can be used to configure the controller from a mobile device (smartphone, tablet), via NFC (Near Field Communication) or BLE (Bluetooth Low Energy). Supported devices: Android 5.1, iOS 10, Bluetooth® 4.0 and higher.

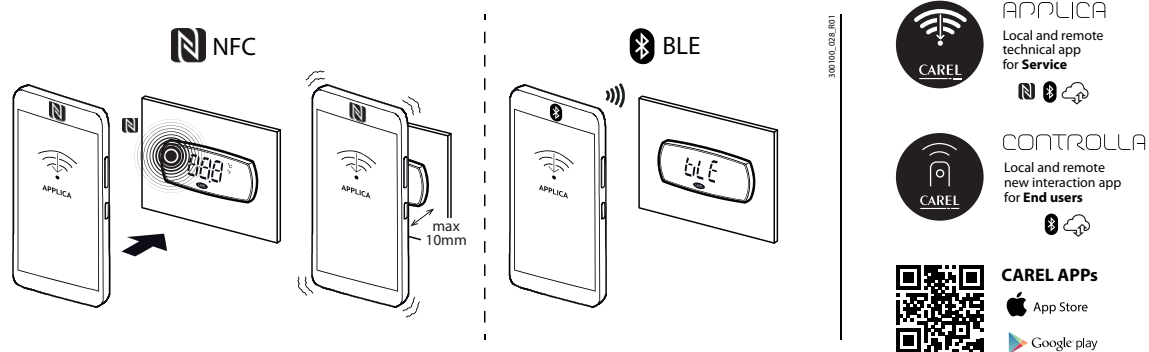


Fig. 3.c

Procedure (modify parameters):

- download the CAREL "Applica" or "Controlla" app from Apple Store or Google Play;
- (on the mobile device) enable NFC and/or Bluetooth communication and mobile data;
- open Applica (or Controlla);
- select NFC or Bluetooth® communication, depending on the model of iJF model;
- move the mobile device near to the user terminal, maximum distance 10 mm (for NFC only), so as to recognise the configuration;
- select the access profile and enter the required password (\*);
- set the parameters as needed;
- move the mobile device near to the user terminal again to upload the configuration parameters (for NFC only).

(\*) pre-assigned by the unit manufacturer to allow maintenance only by authorised service technicians, default "44". See the parameter table.



**Notice:**

- make sure NFC or Bluetooth have been enabled. Some smartphones may experience problems if location is not enabled.
- during Bluetooth® connection, the iJF user terminal is disabled and shows the message "bLE".

### 3.4 Applica Desktop

Applica Desktop is configuration software for laptops that provides the following functions:

- configure the controller;
- change parameter sets and create custom lists to upload to the device;
- view the trends of physical values in real time, with the possibility to save data in Excel format.

For the electrical connection, see "Spark: configuration and commissioning software"

#### 3.4.1 NFC communication for split and HMI models

All iJF models are equipped with NFC memory, which can be used to set the parameters. Due to its operating characteristics, the NFC memory is always active, even when the device is turned off. However, there are limitations for setting the parameters on the SPLIT and HMI models using NFC, as shown in the table.

| Model | Programmability via NFC |               |
|-------|-------------------------|---------------|
|       | Controller off          | Controller on |
| Panel | YES                     | YES           |
| Split | NO                      | YES           |
| HMI   | NO                      | YES           |

Tab. 3.a



**Notice:**

- when the HMI is connected to the SPLIT controller, the NFC memory on the controller is disabled.
- If replacing the HMI, when first starting the iJF split controller the working parameters are written to the HMI NFC memory.

Communication with the NFC memory can be disabled at any time by setting parameter "nFE". If nFE = 0, writes to NFC memory are ignored by the controller.

## 4. USER INTERFACE

### 4.1 Introduction

iJF is available in panel versions with front mounting and built-in display, or in the split version with rear panel mounting, with or without HMI terminal. For rear panel mounting, however, a basic user interface is provided, comprising two status LEDs, while the front panel and remote terminal feature the display and keypad with backlit or non-backlit buttons (depending on the models) for carrying out some of the controller programming operations. The user interface display features three digits with sign for below-zero temperatures and decimal point, a buzzer for signalling alarms and nine icons. The terminal features wireless connectivity and an NFC (Near Field Communication) or Bluetooth interface (depending on the model) for interaction with mobile devices (on which the CAREL "Applica" app has been installed, available on Google Play for the Android operating system and on the Apple Store for iOS devices (Bluetooth only).

 **Notice:** for simplicity, the set of parameters accessible from the user interface is a subset of all the parameters available via the Applica app.

The information available on the user terminal and in the Applica app may vary according to the type of profile, the password entered and the configuration parameters set by the manufacturer. See the parameter table.

 **Notice:** the user and service passwords can be changed directly by accessing the parameter list in the Applica app, and can contain up to 8 alphanumeric and special characters.

| Code | Description           | Def. | Min | Max | UOM | User | User terminal |
|------|-----------------------|------|-----|-----|-----|------|---------------|
| PDM  | Manufacturer password | 44   | 0   | 999 | -   | M    | NO            |
| PDS  | Service password      | 22   | 0   | 999 | -   | S    | NO            |
| PDU  | User password         | 0    | 0   | 999 | -   | U    | NO            |

Parameter /5 can be set to change the unit of measure of the values shown on the display, while parameter /6 selects whether or not to display the decimal point.

 **Notice:** parameter /5 only affects the controller's display and not Applica and the configuration tool, which need to be set accordingly.

| Code | Description                                                               | Def. | Min | Max | UOM | User |
|------|---------------------------------------------------------------------------|------|-----|-----|-----|------|
| /5   | Unit of measure:<br>0 = °C; 1 = °F                                        | 0    | 0   | 1   | -   | U, S |
| /6   | Display decimal point (main screen only):<br>0 = visible; 1 = not visible | 0    | 0   | 1   | -   | S    |

Parameter Hb can be set to enable or disable the buzzer (on models where featured).

| Code | Description                                 | Def. | Min | Max | UOM | User |
|------|---------------------------------------------|------|-----|-----|-----|------|
| Hb   | Enable buzzer:<br>0 = disabled; 1 = enabled | 1    | 0   | 1   | -   | U, S |

Parameter /nE can be used to enable or disable navigation via the user terminal, while parameter BtE can be used to disable Bluetooth communication.

Due to its operating characteristics, the NFC memory is always active, while parameter nFE can be used to have the controller ignore writes to NFC memory.

| Code | Description                                                | Def. | Min | Max | UOM | User |
|------|------------------------------------------------------------|------|-----|-----|-----|------|
| /nE  | Navigation on the display<br>0 = Disabled; 1 = Enabled     | 0    | 0   | 1   | -   | M    |
| BtE  | Bluetooth communication<br>0 = Disabled; 1 = Enabled       | 1    | 0   | 1   | -   | M    |
| nFE  | Communication with NFC memory<br>0 = Disabled; 1 = Enabled | 1    | 0   | 1   | -   | M    |

Parameters /Lb and /Sb can be set to change how the terminal behaves in standby; specifically, /Lb enables or disables the lighting on the status LEDs (icons), including ON/OFF, while /Sb enables or disables the lighting on the PRG button. writes to NFC memory are ignored by the controller

| Code | Description                                                       | Def. | Min | Max | UOM | User |
|------|-------------------------------------------------------------------|------|-----|-----|-----|------|
| /Lb  | Status LEDs on in standby (including ON/OFF):<br>0 = off; 1 = on. | 0    | 0   | 1   | -   | M    |
| /Sb  | PRG button always ON in standby:<br>0 = off; 1 = on.              | 1    | 0   | 1   | -   | M    |

## 4.2 Models with user terminal or remote HMI

### User terminal

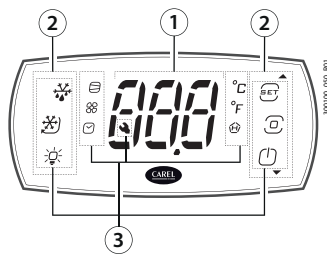


Fig. 4.a

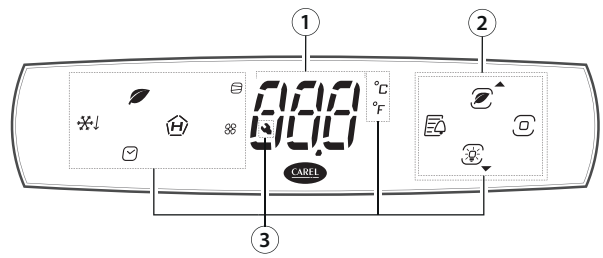


Fig. 4.b

**Key:**

|   |               |
|---|---------------|
| 1 | Display       |
| 2 | Icons/buttons |
| 3 | Icons         |



**Notice:**

- the user terminal can only be used to set the frequent (User) and (Service) parameters and display the value of the probes connected to iJF. The Service- and Manufacturer-level parameters are set using the Applica app or the configuration software, depending on the access profile. See the parameter table and the paragraph "Parameter categories visible on the user terminal";
- Parameter /t1 is used to choose the variable to be shown on the display during normal operation;
- Parameter /5 is used to change the unit of measure .
- Parameter /d6 is used to choose the value to be shown on the display when defrosting:

| Code | Description                                                                                                          | Def.  | Min            | Max | UOM | User | User terminal |
|------|----------------------------------------------------------------------------------------------------------------------|-------|----------------|-----|-----|------|---------------|
| /5   | Unit of measure: 0 = °C; 1 = °F                                                                                      | 0     | 0              | 1   | -   | S    | YES           |
| /6   | Display decimal point: 0 = Yes; 1 = No                                                                               | 0     | 0              | 1   | -   | S    | NO            |
| /t1  | Display on user terminal:                                                                                            | 9     | 0              | 15  | -   | S    | NO            |
|      | 0 Not configured                                                                                                     | 6-8   | not available  |     |     |      |               |
|      | 1 value of S1                                                                                                        | 9     | control probe  |     |     |      |               |
|      | 2 value of S2                                                                                                        | 10    | virtual probe  |     |     |      |               |
|      | 3 value of S3                                                                                                        | 11-14 | not available  |     |     |      |               |
|      | 4 value of S4                                                                                                        | 15    | actual control |     |     |      |               |
|      | 5 value of S1H                                                                                                       |       | set point      |     |     |      |               |
| d6   | Display on terminals during defrosts:<br>0 = temperature alternating with 'dEF';<br>1 = freeze display;<br>2 = 'dEF' | 1     | 0              | 2   | -   | U    | NO            |

Tab. 4.a

### Keypad

| Icon/button | Description         | On                                                                                                                                                                                                                                                                          | Flashing       |
|-------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
|             | Set point/Up arrow  | <ul style="list-style-type: none"> <li>Increase value</li> <li>Scroll menu</li> <li>Direct access to change set point</li> </ul>                                                                                                                                            | -              |
|             | Program             | Pressed briefly: <ul style="list-style-type: none"> <li>enter menu branch</li> <li>save value and return to the parameter</li> </ul> Pressed and held (3 s): <ul style="list-style-type: none"> <li>enter programming mode</li> <li>return to the previous level</li> </ul> | -              |
|             | On-Off/Down arrow   | <ul style="list-style-type: none"> <li>Unit ON</li> <li>Decrease value</li> <li>Scroll menu</li> <li>Switch unit on/off</li> </ul>                                                                                                                                          | -              |
|             | Defrost             | Active/stop                                                                                                                                                                                                                                                                 | Awaiting/start |
|             | Continuous cycle    | Active/stop                                                                                                                                                                                                                                                                 | Awaiting/start |
|             | Lights              | Active/stop                                                                                                                                                                                                                                                                 | Activation     |
|             | HACCP               | <ul style="list-style-type: none"> <li>HACCP alarms present</li> <li>Direct access to HACCP menu</li> </ul>                                                                                                                                                                 | -              |
|             | Alarm log           | <ul style="list-style-type: none"> <li>Logged alarms present</li> <li>Direct access to the alarm log menu</li> </ul>                                                                                                                                                        | -              |
|             | Auxiliary output    | Active                                                                                                                                                                                                                                                                      | -              |
|             | Compressor          | Active                                                                                                                                                                                                                                                                      | Awaiting       |
|             | Evaporator fan      | Active                                                                                                                                                                                                                                                                      | -              |
|             | Clock               | Scheduler active                                                                                                                                                                                                                                                            | -              |
|             | °C                  | Unit of measure °C                                                                                                                                                                                                                                                          | -              |
|             | °F                  | Unit of measure °F                                                                                                                                                                                                                                                          | -              |
|             | Service Maintenance | Active alarms                                                                                                                                                                                                                                                               | -              |

Tab. 4.b



**Notice:** during navigation, the buttons will be on/flashing only if enabled.

### 4.2.1 Navigation

The figure shows how to navigate between the screens on the display; specifically, the grey part shows programming mode for setting the parameters. The screens and functions of the buttons available on each screen are described in detail below.

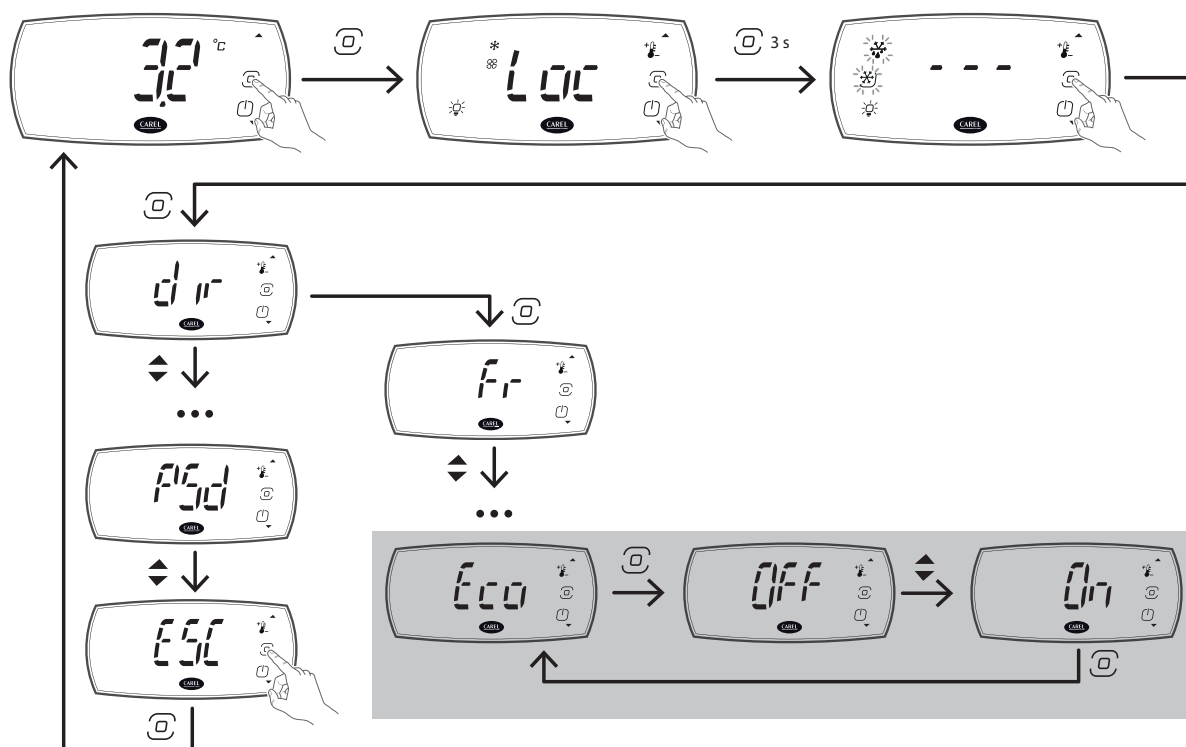


Fig. 4.c

### 4.2.2 Screens

The possible states of the terminal are shown in the table below.

|                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p><b>Status</b><br/>Standby</p> <p><b>Description</b><br/>The display shows the main value, alternating with any alarms and signals</p>                           |  <p><b>Status</b><br/>Display active loads</p> <p><b>Description</b><br/>The terminal shows any active loads, the keypad is locked</p>                                  |  <p><b>Status</b><br/>Direct activation of loads and functions from the keypad</p> <p><b>Description</b><br/>The loads can be activated or deactivated and the direct functions accessed from the keypad</p> |  <p><b>Status</b><br/>Programming menu</p> <p><b>Description</b><br/>Scroll the programming menu using the arrow buttons</p> |
|  <p><b>Status</b><br/>Parameter programming/display values</p> <p><b>Description</b><br/>Set the parameters using the arrow buttons or display read-only values</p> |  <p><b>Status</b><br/>Bluetooth connection</p> <p><b>Description</b><br/>The display is disabled, as the controller is connected to an app via Bluetooth Low Energy</p> |                                                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                   |

### Standard display

At power on, the user terminal briefly shows the firmware version and then the standard display. The standard display depends on the setting of parameter /t1:

- control temperature (control probe temperature or calculated based on two probes, see "Functions");
- value of one of the probes connected to the analogue inputs;
- control/virtual probe;
- temperature set point.



**Notice:** if there is an active alarm, press any button to mute the buzzer.

### Display active actuators/functions and direct activation of actuators/functions

When pressing any button, the display shows the message "Loc" and the icons corresponding to the currently-active actuators/functions come on to indicate the status of the unit. On pressing PRG for 3 s, the display shows 3 dashes in sequence and enters actuator/function direct activation mode. In this mode:

- the buttons that are on steady indicate that the corresponding actuator/function is active, and can be deactivated by pressing the button;
- the buttons that are flashing indicate that the actuator/function is not active and can be activated by pressing the button;

When pressing the button, the display shows information on the status of the selected actuator/function (On/Off).

| Icon | iJF small | iJF large | On/Off                        |
|------|-----------|-----------|-------------------------------|
|      | •         | •         | Lights                        |
|      | •         | •         | Continuous cycle              |
|      | •         | •         | Defrost                       |
|      | •         | •         | Direct access to set point    |
|      | •         | •         | Unit On/Off                   |
|      | -         | •         | Direct access to HACCP alarms |
|      | -         | •         | Direct access to alarm log    |

Tab. 4.c



**Notice:** if no button is pressed, after 7 seconds the terminal will automatically return to the standard display.

## 4.2.3 Programming mode

In actuator/function direct activation mode, pressing PRG enters programming mode, where the unit's main operating parameters can be set. To access the Service parameters, go to the "PSD" menu item (see the table below) and enter the password (default 22). The user terminal only provides access to the basic configuration parameters, such as direct functions and active alarms without password protection, or, with password protection (Service).



**Notice:** in the default settings the user password is set to 0 and is not required when entering programming mode; if the password has been set to a value other than 0, this needs to be entered to access programming mode. Access to the Service level is also available by entering the default password 22.



**Notice:** for optimisations use Applica, which provides access to all of the parameters available for the corresponding profile.

### Parameter categories visible on the user terminal

The menu items available and parameters visible on the user terminal are listed below. The menu branches/parameters protected by the Service password (default 22) are shown in bold italics.

| dir (*)<br>(Direct functions) | CtL<br>(Control) | Pro<br>(Display probes) | dEF<br>(Defrost) | HcP<br>(HACCP)  | CnF<br>(Configuration) | ALM<br>(Alarms) | PSD | ESC |
|-------------------------------|------------------|-------------------------|------------------|-----------------|------------------------|-----------------|-----|-----|
| See the following table       | St               | /5                      | dI               | HAn             | Hb                     | AH/AHA          |     |     |
|                               | <b>rd</b>        | <b>/6</b>               | <b>dP1</b>       | HF <sub>n</sub> | <b>H0</b>              | AL/ALA          |     |     |
|                               | Sth              | /t1                     | <b>dt1</b>       | rHP             | <b>H10</b>             | Ad              |     |     |
|                               | <b>rdh</b>       | ESC                     | <b>dP2</b>       | ESC             | <b>H11</b>             | Add             |     |     |
|                               | HU               |                         | <b>dt2</b>       |                 | ESC                    | rSA             |     |     |
|                               | <b>rM</b>        |                         | <b>d6</b>        |                 |                        | <b>rAL</b>      |     |     |
|                               | rt (**)          |                         | <b>d8</b>        |                 |                        | ESC             |     |     |
|                               | <b>IS (***)</b>  |                         | <b>ESC</b>       |                 |                        |                 |     |     |
|                               | <b>rSC</b>       |                         |                  |                 |                        |                 |     |     |
|                               | ESC              |                         |                  |                 |                        |                 |     |     |

Tab. 4.d

(\*) The visibility of the direct functions can be set using the corresponding parameters, and depends on whether the functions are available on the controller.

(\*\*) Visible if the corresponding monitoring function is enabled.

(\*\*\*) Visible if there is at least one configuration loaded on the controller (see "Appendix")

## Direct functions

| Acr. | Description                   | Display alarms | Acr. | Description                    | Display alarms |
|------|-------------------------------|----------------|------|--------------------------------|----------------|
| Auc  | Activate auxiliary output     | DOC > 0        | rH   | Maximum value of control probe | rM = 1         |
| BtE  | Enable Bluetooth              | if featured    | rL   | Minimum value of control probe | rM = 1         |
| CnC  | Activate continuous cycle     | cc > 0         | rtL  | Reset min/max control probe    | rM = 1         |
| dFM  | Start defrost                 |                | SAh  | Display alarm log              |                |
| Ec1  | Load embedded configurazion 1 | if featured    | Sc   | Condenser probe                | /Fo > 0        |
| Ec2  | Load embedded configurazion 2 | if featured    | Sc1  | Quick Set point 1              |                |
| Eco  | Activate ECO mode             |                | Sc2  | Quick Set point 2              |                |
| Fr   | Firmware version              |                | Sc3  | Quick Set point 3              |                |
| HAC  | Direct access to HACCP menu   |                | Sd   | Defrost probe                  | /Fb > 0        |
| HL   | Dim Light                     | /AF > 0        | SHu  | Humidity probe                 | /FP > 0        |
| HU   | Set humidity level            | F2 = 3         | Sm   | Outlet probe                   | /Fa > 0        |
| Lht  | Activate lights               | DOE > 0        | SPr  | Product probe                  | /FR > 0        |
| nFE  | Enable NFC memory reading     |                | SrG  | Control probe                  |                |
| OnF  | Unit On/Off                   |                | St   | Set control set point          |                |
| Pd   | Activate pull down            |                | Sth  | Set humidity set point         | /SP > 0        |

Tab. 4.e

## Procedure

To navigate the menu tree, use the following buttons:

- UP and DOWN to navigate the menu and set the values;
- PRG to enter the menu items and save the changes made;
- Select the menu item or ESC to return to the previous branch.

Example of how to set parameter St (set point):



1. Wait for the standard display to be shown;



2. Press PRG to enter display active actuators/functions mode



3. Press PRG 3 s to access actuator/function direct activation mode



4. Press PRG to enter programming mode; the UP and DOWN buttons will flash and the first category of parameters dir (=direct functions) will be displayed;



5. Press DOWN until reaching the parameter category Ctl (=control)



6. Press PRG to display the first menu item: St (=set point). Press PRG to display the parameter value



7. Press UP/DOWN to modify the value



8. Press PRG to save the setting and return to the menu

**Caution:** if the PRG button is not pressed, the new setting will not be saved.



9. Press UP/DOWN to select ESC and press PRG to return to the parameter categories;



**Notice:** if no button is pressed, after 20 seconds the terminal will automatically return to the standard display.

10. Press DOWN to move to the next category and follow steps 6 to 9 to set the other parameters;

11. Once the settings have been made, to exit the categories select ESC and press PRG.

#### Mobile device and PC

The controller can be configured via NFC (Near Field Communication) or Bluetooth from a mobile device (smartphone, tablet) using Applica, or via serial connection (laptop) using the configuration tools. The controller can be programmed according to the profile used for access to Applica or Spark, with different parameter visibility depending on the rights associated with each profile (User, Service, Manufacturer). See "Configuration tools".

**Notice:** when changing the parameter settings, it is recommended to power the controller off and on again to realign any timings in progress. Caution: wait at least 5 seconds are changing the parameter settings before powering the controller off, to allow the data to be correctly saved to the memory.

### 4.3 SPLIT models without user terminal

For Split mounting versions, a basic user interface is provided, comprising two status LEDs.

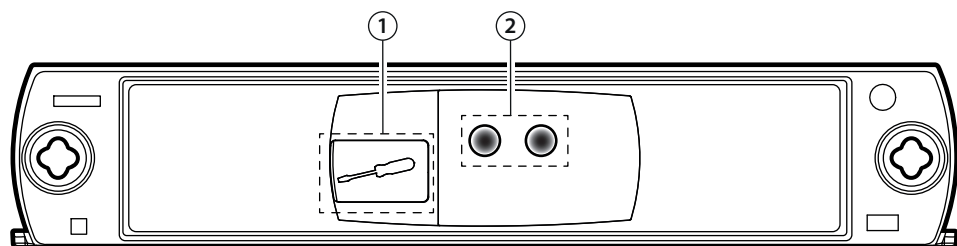


Fig. 4.d

|             |               |
|-------------|---------------|
| <b>Key:</b> |               |
| 1           | HMI connector |
| 2           | Status LEDs   |

The meaning of the status LEDs is described in the table below.

| Red LED | White LED | No. flashes | Description                                                                                                               | Red LED | White LED | No. flashes | Description                            |
|---------|-----------|-------------|---------------------------------------------------------------------------------------------------------------------------|---------|-----------|-------------|----------------------------------------|
| ○       | ●         | -           | Unit OFF                                                                                                                  | ☀       | ○         | 4           | Defrost alarms: Ed1, Ed2               |
| ○       | ☀         | 1           | Unit ON                                                                                                                   | ☀       | ○         | 5           | Pumpdown alarms: Pd, LP, AtS           |
| ○       | ☀         | 2           | <ul style="list-style-type: none"> <li>Defrost active (dEF)</li> <li>Continuous cycle active</li> <li>ECO mode</li> </ul> | ☀       | ○         | 6           | Parameter configuration alarms: EE, EF |
| ☀       | ○         | 1           | Probe alarms: rE, E1, E2, E3, E4, E5                                                                                      | ☀       | ○         | 7           | Refrigerant leak alarm: rSF            |
| ☀       | ○         | 2           | Temperature alarms: LO, HI, Afr, cht, CHt, dor                                                                            | ☀       | ○         | 8           | Clock alarm: Etc                       |
| ☀       | ○         | 3           | Alarms from external contact: IA, dA                                                                                      | ☀       | ○         | 9           | HACCP alarms: HA, HF                   |

Tab. 4.f

## 5. COMMISSIONING

Once the electrical connections have been completed (see "Installation") and the power supply has been connected, the operations required for commissioning the controller depend on the type of interface used, however essentially involve setting the so-called initial configuration parameters. The configuration procedure can be run on the user terminal, a mobile device (with the Applica app), or configuration tool. The parameters used for commissioning are shown in the Parameter table.



### Caution:

- the parameters that can be set on the user terminal and in the Applica app may vary according to the rights assigned to the access profile, defined by the manufacturer. Therefore, not all of the following parameters may be visible or modifiable.
- Some operations can only be performed using Applica or the configuration tools, for example, configuring the temperature probe type or setting the date/time and time bands

### Commissioning parameters

| Par. | Menu | Desc.                                                                                                                                                                                                                         | Def. | Min | Max     | UOM     | User |
|------|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|-----|---------|---------|------|
| St   | Ctl  | Temperature control set point                                                                                                                                                                                                 | 50   | r1  | r2      | °C/°F   | U, S |
| /5   | Pro  | Unit of measure:<br>0 = °C; 1 = °F                                                                                                                                                                                            | 0    | 0   | 1       | -       | U, S |
| /6   | Pro  | Display decimal point (main screen only): 0 = visible; 1 = not visible                                                                                                                                                        | 0    | 0   | 1       | -       | S    |
| /t1  | Pro  | Value shown on the LED display:<br>0: Not config. (decimal point); 1: Probe 1; 2: Probe 2; ..., 7, 8: reserved;<br>9: Control probe, 10: Virtual probe (Sv); 11 to 14: reserved; 15: Set point (St);<br>16: Current set point | 10   | 0   | 16      | -       | S    |
| d6   | dEF  | Display during defrosts:<br>0 = temperature alternating with dEF; 1 = freeze display; 2 = dEF                                                                                                                                 | 1    | 0   | 2       | -       | S    |
| dl   | dEF  | Maximum interval between defrosts                                                                                                                                                                                             | 8    | 0   | 240     | h       | S    |
| dP1  | dEF  | Maximum defrost duration                                                                                                                                                                                                      | 45   | 1   | 240     | min     | S    |
| AH   | ALM  | Relative high temperature alarm threshold                                                                                                                                                                                     | 0    | 0   | 555/999 | Δ °C/°F | S    |
| AL   | ALM  | Relative low temperature alarm threshold                                                                                                                                                                                      | 0    | 0   | 200/360 | Δ °C/°F | S    |
| Hb   | CnF  | Enable buzzer: 0 = disabled; 1 = enabled                                                                                                                                                                                      | 1    | 0   | 1       | -       | U, S |
| /P1  | -    | Configure probe:<br>S1, S2, S4<br>0: PT1000; 1: PTC; 2: NTC; 3: NTC-LT; 4: NTC-HT                                                                                                                                             | 2    | 0   | 4       | -       | M    |
| /P2  | -    | Configure probe: S3/ ID1 - 0: S3; 1: ID1                                                                                                                                                                                      | 5    | 0   | 5       | -       | M    |

Tab. 5.a

(\*): U = User; S = Service; M = Manufacturer (OEM).

## 5.1 Description of the initial configuration parameters

### St: temperature control set point

Parameter St is used to set the temperature control set point.

| Par. | Menu | Desc.                         | Def.   | Min | Max | UOM   | User |
|------|------|-------------------------------|--------|-----|-----|-------|------|
| St   | Ctl  | Temperature control set point | 50/122 | r1  | r2  | °C/°F | U, S |

### rd: temperature control differential

Parameter rd is used to set the temperature control differential (see "Control").

| Par. | Menu | Desc.                            | Def.    | Min     | Max        | UOM     | User |
|------|------|----------------------------------|---------|---------|------------|---------|------|
| rd   | Ctl  | Temperature control differential | 2.0/3.6 | 0.1/0.2 | 99.9/179.2 | Δ °C/°F | S    |

### /5, /6, /t1: display on user terminal

Parameters /5, /6 and /t1 are used to set the display shown on the user terminal. Parameter /5 sets the unit of measure °C or °F, parameter /6 sets whether or not the decimal digit is displayed and parameter /t1 sets the value displayed, either the control probe or virtual probe reading, or one of the set points. By default, the virtual control probe value is displayed, expressed in °C with one decimal.

| Par. | Menu | Desc.                                                                                                                                                                                                                                       | Def. | Min | Max | UOM | User |
|------|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|-----|-----|-----|------|
| /5   | Pro  | Unit of measure: 0 = °C; 1 = °F                                                                                                                                                                                                             | 0    | 0   | 1   | -   | U, S |
| /6   | Pro  | Display decimal point (main screen only): 0 = visible; 1 = not visible                                                                                                                                                                      | 0    | 0   | 1   | -   | S    |
| /t1  | Pro  | Display on user terminal:<br>0 = Not configured;<br>1 to 4 = value of S1 to S4;<br>5 = value of S1H;<br>6 to 8 = not available;<br>9 = control probe;<br>10 = virtual probe;<br>11 to 14 = not available;<br>15 = actual control set point. | 9    | 0   | 15  | -   | S    |

**d6: display on user terminal during defrosts**

Parameter d6 is used to set the display shown on the user terminal when defrosting, chosen between the value selected by parameter /t1 alternating with the message 'dEF', the last value shown before defrosting, or 'dEF' alone on steady. By default, the virtual control probe value is shown, alternating with the message dEF.

| Par. | Menu | Desc.                                                                                         | Def. | Min | Max | UOM | User |
|------|------|-----------------------------------------------------------------------------------------------|------|-----|-----|-----|------|
| d6   | dEF  | Display during defrosts:<br>0 = temperature alternating with dEF; 1 = freeze display; 2 = dEF | 1    | 0   | 2   | -   | S    |

**dl, dP1: defrost parameters**

Parameter dl is used to set the maximum possible interval between defrosts, while parameter dP1 is used to set the maximum defrost duration. See "Functions" for more details.

| Par. | Menu | Desc.                             | Def. | Min | Max | UOM | User |
|------|------|-----------------------------------|------|-----|-----|-----|------|
| dl   | dEF  | Maximum interval between defrosts | 8    | 0   | 240 | h   | S    |
| dP1  | dEF  | Maximum defrost duration          | 45   | 1   | 240 | min | S    |

**Hb: enable buzzer**

Parameter Hb is used to enable or disable the buzzer built into the controller; the buzzer is enabled by default.

| Par. | Menu | Desc.                                    | Def. | Min | Max | UOM | User |
|------|------|------------------------------------------|------|-----|-----|-----|------|
| Hb   | CnF  | Enable buzzer: 0 = disabled; 1 = enabled | 1    | 0   | 1   | -   | U, S |

**/P1, /P2: Probe types**

Probes S1, S2, S3 can be configured as NTC, PTC, PT1000, NTC-HT or NTC-LT. Parameter /P1 is used to set the type of temperature probe.

Parameter /P2 is used to choose whether the multifunction input S3/ID1 is configured as a temperature probe (and in this case it will be same type set by parameter /P1) or as a digital input. Parameters /P1 and /P2 can only be set using Applica or configuration tool.



**Notice:** the temperature probes must all be the same type.

| Par. | Menu | Desc.                                                                                               | Def. | Min | Max | UOM | User |
|------|------|-----------------------------------------------------------------------------------------------------|------|-----|-----|-----|------|
| /P1  | -    | Configuration of probes S1, S2, S3, S4, B5<br>0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT. | 2    | 0   | 4   | -   | M    |
| /P2  | -    | Configuration of multifunction input S3/ID1:<br>0, 1, 2, 3, 4 = S3; 5 = ID1.                        | 5    | 0   | 5   | -   | M    |

**AH/AL: relative high and low temperature alarm thresholds**

Parameters AH and AL are used to set the thresholds relative to the set point for the high and low temperature alarms. For details on the high and low temperature alarms, see "Alarms".

| Par. | Menu | Desc.                                     | Def. | Min | Max     | UOM     | User |
|------|------|-------------------------------------------|------|-----|---------|---------|------|
| AH   | ALM  | Relative high temperature alarm threshold | 0    | 0   | 555/999 | Δ °C/°F | S    |
| AL   | ALM  | Relative low temperature alarm threshold  | 0    | 0   | 200/360 | Δ °C/°F | S    |

## 5.2 Set date/time and time bands

The smartphone's date and time can be used to set the controller's date/time, via the drop-down menu on the side in Applica, selecting "settings-->device-->set date/time".

Procedure for setting the time bands:

1. open Applica on the smartphone;
2. access the controller via NFC or Bluetooth, entering your profile credentials;
3. open the "Scheduler" section;
4. define the time bands for the different days of the week;
5. apply the set schedule to the controller (upload button at the top-right for connection via NFC).



**Notice:** 8 daily time bands can be configured by setting parameters tS1, tE1 to tS8, tE8.



**Notice:** always check the correct date and time setting for using the logs and other functions that refer to the RTC.

The correct setting of date and time is necessary for the operation of some features of the iJF control:

- activation of the light or auxiliary output (par. H8) according to the set time bands;
- management of defrosts by time bands;
- monitoring and recording of a temperature;
- counting of operating hours and activation of the maintenance alarm when a settable threshold is exceeded;
- recording of periodic and event logs.



**Notice:** using parameter dl it is possible to perform cyclic defrosts every "dl" hours, even in the absence of the RTC clock..



**Caution:** A change in the time set in the iJF control exceeding 140 minutes causes the loss of the stored logs..

## 5.3 Checks after commissioning

Once having completed the installation, configuration and programming operations, after commissioning the controller check that:

- the programming logic is suitable to control the unit and the system in question;
- the time has been set on the controller;
- the time bands have been set correctly;
- the standard display has been set on the user terminal;
- the appropriate unit of measure has been set for the temperature probes (°C or °F);



**Caution:** at the end of the commissioning procedure, the alarm log can be reset via the Applica app. See "Alarms".

## 6. FUNCTIONS

The following paragraphs describe how to implement a detailed parameter configuration.

The parameters described below can be configured via the Spark configuration software or the Applica app.

**Caution:** the information available in Applica may vary according to the password set and the configuration defined by the unit manufacturer, and consequently not all of the parameters shown may be visible or modifiable. For details on the parameters and the related access levels, see the "Parameter table".

### 6.1 ON/OFF

The unit can be switched on or off in different ways: user interface (button or parameter), supervisor and digital input.

Parameter On is used to switch the controller ON/OFF. If there is a digital input configured as remote ON/OFF, this has higher priority than the supervisor command or the On parameter.

| P/N | Desc.                                        | Def. | Min | Max | UOM | User | User terminal |
|-----|----------------------------------------------|------|-----|-----|-----|------|---------------|
| DIF | Assign remote ON/OFF digital input - see DIA | 0    | 0   | 4   | -   | S    | NO            |
| On  | ON/OFF command<br>0= OFF; 1 = ON.            | 1    | 0   | 1   | -   | U    | YES           |

In this operating mode, the display shows the standard display set by parameter /t1, alternating with the message "OFF".

#### Functions enabled/disabled in OFF status

| Function                                               | Enabled | Disabled |
|--------------------------------------------------------|---------|----------|
| Compressor control (off and pump down valve closed)    |         | ●        |
| Dead band control                                      |         | ●        |
| Auxiliary compressor control with and without rotation |         | ●        |
| Defrost                                                |         | ●        |
| Evaporator fan control                                 |         | ●        |
| Humidity control                                       |         | ●        |
| Continuous cycle                                       |         | ●        |
| Condensing fan control (if enabled)                    |         | ●        |
| Low temperature alarm LO                               |         | ●        |
| High temperature alarm HI                              |         | ●        |
| Immediate alarm from external contact IA               |         | ●        |
| Delayed alarm from external contact dA                 |         | ●        |
| Defrost ended due to timeout alarm Ed1, Ed2            |         | ●        |
| Pump down ended after maximum time alarm Pd            |         | ●        |
| Low pressure alarm from external contact LP            |         | ●        |
| Autostart in pump down alarm AtS                       |         | ●        |
| High condenser temperature warning and alarm cht, CHt  | ●       |          |
| Open door alarm dor                                    |         | ●        |
| Frost protection alarm AFR                             |         | ●        |
| Type HA and HF HACCP alarm                             | ●       |          |
| Buzzer (off) and alarm relay (non-alarm status)        |         | ●        |
| HACCP control                                          |         | ●        |
| Defrost according to scheduled time bands              |         | ●        |
| Timed defrost (timer "dl" updated)                     |         | ●        |
| Defrost from digital input (if enabled)                |         | ●        |
| Defrost from keypad and supervisor                     |         | ●        |
| High and low power supply voltage alarm EHI and ELO    |         | ●        |
| Generic alarm with high threshold GHI and GLO          |         | ●        |
| Refrigerant leak alarm rSF                             | ●       |          |
| Maintenance request SrC                                |         | ●        |
| Operating error UFC and VCC communication error COM    |         | ●        |
| Parameter setting and display                          | ●       |          |
| Auxiliary relay on/off                                 | ●       |          |
| Autostart compressor in pump down (if enabled)         | ●       |          |
| Door switch limited to light management                | ●       |          |
| Control probe error alarm rE                           | ●       |          |
| Probe error alarm E1, E2, E3, E4                       | ●       |          |
| Clock not updated (if featured) alarm Etc              | ●       |          |
| Configuration not terminated correctly alarm SF        | ●       |          |
| Configuration write error CE                           | ●       |          |
| Light or aux on/off based on scheduled time bands      |         | ●        |
| Set point changed based on scheduled time bands        | ●       |          |

Tab. 6.a

 **Notice:** in Off status, the defrost interval dI is always updated, in order to maintain the cyclical nature of this interval. If a defrost interval expires when the unit is off, the event is recorded and, when the unit is switched on, a defrost request is generated.

The transition from On to Off occurs as follows:

- the compressor protection times are observed;
- pump down is performed (if enabled);
- defrosting is forcibly terminated and will not resume when switching On;
- the continuous cycle is forcibly terminated and will not be resumed when switching On.

The transition from Off to On occurs as follows:

- the compressor protection times are observed;
- defrosting is not performed at power-on (if enabled), this in fact refers to power-on;
- the compressor and fan delay at power-on c0 is not set, and refers to power-on.

## 6.2 Inputs and outputs

On the panel models, the iJF controller has a maximum of 3 analogue inputs, 2 digital inputs and 1 multifunction input. In addition, on some models, an additional analogue input is available for connecting a humidity probe. iJF has a maximum of 6 digital outputs, and on some models a maximum of 2 analogue outputs. The HMI models have a maximum of 1 analogue input, 1 digital input and 1 multifunction input, in addition to those available on the connected panel version. See the description of the terminals in "Description of the terminals".

NTC, PT1000, PTC, NTC HT or NTC LT temperature probes can be connected to the analogue inputs; all probes must be the same type, except for any connected to the HMI terminal, which can only be NTC. The analogue outputs are PWM or 0-10 V and are independently configurable. See the parameter table.

### Analogue inputs and outputs

| Model                    | Code           | Probes            |                       |                    |                       |                       |                           | Outputs (Y1, Y2) |             |
|--------------------------|----------------|-------------------|-----------------------|--------------------|-----------------------|-----------------------|---------------------------|------------------|-------------|
|                          |                | Passive           |                       |                    | Active                |                       |                           | PWM              | 0 to 10 Vdc |
|                          |                | NTC<br>(-50T90°C) | Pt1000<br>(-60T120°C) | PTC<br>(-50T150°C) | NTC HT<br>(-40T150°C) | NTC LT<br>(-80T105°C) | 0 to 5 V ratio-<br>metric |                  |             |
| SMALL,<br>panel or split | IJ**SA*****    | YES               | YES                   | YES                | YES                   | YES                   | NO                        | NO               | NO          |
|                          | IJ**SA**06**** | YES               | YES                   | YES                | YES                   | YES                   | NO                        | YES              | YES         |
|                          | IJ**SA**07**** | YES               | YES                   | YES                | YES                   | YES                   | YES                       | NO               | NO          |
| SMALL, HMI               | IJ*HSA*****    | YES               | NO                    | NO                 | NO                    | NO                    | NO                        | NO               | NO          |
| LARGE<br>panel or split  | IJ**LA*****    | YES               | YES                   | YES                | YES                   | YES                   | NO                        | NO               | NO          |
|                          | IJ**LA**06**** | YES               | YES                   | YES                | YES                   | YES                   | NO                        | YES              | YES         |
|                          | IJ**LA**07**** | YES               | YES                   | YES                | YES                   | YES                   | YES                       | NO               | NO          |
| LARGE, HMI               | IJ*HLA*****    | YES               | NO                    | NO                 | NO                    | NO                    | NO                        | NO               | NO          |

Tab. 6.b

### 6.2.1 Probes (analogue inputs)

|                             | Small     |           |           |  | Large     |           |           |           |   | HMI SMALL  | HMI LARGE  |          |
|-----------------------------|-----------|-----------|-----------|--|-----------|-----------|-----------|-----------|---|------------|------------|----------|
|                             | S1<br>/P1 | S2<br>/P1 | S3<br>/P2 |  | S1<br>/P1 | S2<br>/P1 | S3<br>/P2 | S4<br>/P1 |   | S1H<br>/P7 | S1H<br>/P7 | S2H<br>- |
| Analogue input              |           |           |           |  |           |           |           |           |   |            |            |          |
| Parameter for type of probe |           |           |           |  |           |           |           |           |   |            |            |          |
| 0 : PT1000                  | ●         | ●         | ●         |  | ●         | ●         | ●         | ●         |   |            |            |          |
| 1 : PTC                     | ●         | ●         | ●         |  | ●         | ●         | ●         | ●         |   |            |            |          |
| 2 : NTC                     | ●         | ●         | ●         |  | ●         | ●         | ●         | ●         | ● |            | ●          | ●        |
| 3 : NTC-LT                  | ●         | ●         | ●         |  | ●         | ●         | ●         | ●         |   |            |            |          |
| 4 : NTC-HT                  | ●         | ●         | ●         |  | ●         | ●         | ●         | ●         |   |            |            |          |
| 5 : Digital input           |           |           | ●         |  |           |           | ●         |           | ● |            | ●          |          |

Tab. 6.c

The 0-5 V ratiometric humidity probe, available on some models, does not need to be configured.

 **Caution:** for the maximum current that can be supplied to the ratiometric probes, see the Technical specifications table.

To assign the function to each physical probe, configure parameters /FA, /Fb, ... /FR. See the parameter table.

| Probe                 | Par. | Probe                            | Par. | Probe                        | Par. |
|-----------------------|------|----------------------------------|------|------------------------------|------|
| Outlet (Sm)           | /FA  | Auxiliary temperature 1 (Saux 1) | /FG  | Condensing temperature       | /Fo  |
| Defrost (Sd)          | /Fb  | Auxiliary temperature 2 (Saux 2) | /FH  | Ambient humidity             | /Fp  |
| Intake (Sr)           | /Fc  | Ambient temperature              | /FI  | Frost protection temperature | /Fq  |
| Defrost probe 2 (Sd2) | /FF  | Glass temperature                | /FM  | Product temperature          | /FR  |

Tab. 6.d

### Example of probe configuration.

To associate a function with a physical probe, set the value of the corresponding parameter /Fx to the value corresponding to the probe, as shown in the following table. For example, to assign the outlet temperature to probe S1, set parameter /FA to 1.

| Code | Desc.                                                                                                | Def. | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| /FA  | Outlet probe configuration:<br>0: Disabled - 1: S1 - 2: S2 - 3: S3 - 4: S4 - 5: S5 - 6: S1H - 7: S2H | 1    | 0   | 7   | -   | S    | No            |

The default configuration for assigning the control probes is as follows:

- S1 = Outlet probe (Sm);

with the default settings, this probe corresponds to the virtual control probe Sv.

The default configuration also sets these three probes as standard CAREL NTC. However, other types of probes can be connected by setting parameter /P1.



#### Notice:

- the configuration /FA = 0 and /Fc = 0 will cause the 'rE' alarm (control probe alarm), as it means that no control probe is associated.
- For a description of the probe functions, see the following paragraphs.

### Calibration (parameters /cA to /cR)

iJF allows the possibility to calibrate values read by the probes associated with the various functions set by parameters /FA to /FR. In particular, parameters /cA to /cY are used to increase or decrease the values read by the probes connected to the analogue inputs, consistently with the unit of measure.



**Caution, HACCP:** this modification may not be allowed by HACCP procedures as it alters the measured value. Verify that you have authorisation and record the changes where required.

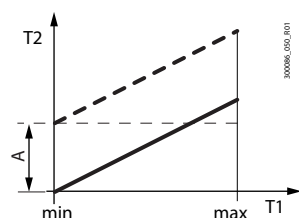


Fig. 6.a

#### Description

|          |                               |
|----------|-------------------------------|
| T1       | Temperature read by the probe |
| T2       | Calibrated temperature        |
| A        | Calibration offset            |
| min, max | Field of measurement          |

### /2: Analogue probe measurement stability and refresh display

| Code | Desc.                                                                                                              | Def. | Min | Max | UOM | User | User terminal |
|------|--------------------------------------------------------------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| /2   | Analogue probe measurement stability:<br>0 = probe reading not delayed;<br>...<br>15 = maximum probe reading delay | 5    | 0   | 9   | -   | M    | No            |
| /3   | Display probe value:<br>0 = disabled;<br>1 = fast update;<br>...<br>15 = slow update.                              | 0    | 1   | 15  | -   | M    | No            |

Parameter /2 defines the coefficient used to stabilise the temperature measurement. Low values assigned to this parameter allow a prompt response of the sensor to temperature variations; the reading however become more sensitive to disturbance. High values slow down the response, but guarantee greater immunity to disturbance, that is, a more stable, precise and filtered reading.

Parameter /3 is used to refresh the probe readings displayed; low values of /3 mean the display is refreshed quickly, high values mean it is refreshed slowly.



**Note:** parameter /3 only affects the display of the probe readings and not the value used for control.

## 6.3 Digital inputs

iJF manages up to 2 physical digital inputs and 1 multifunction input on the PANEL and SPLIT models, and up to 1 additional digital input and 1 multifunction input on the HMI models. See "Installation".

To associate an input to each available function, set parameters DIA, DIb, ... DIr to the value relating to the physical or virtual digital input. See the parameter table.

### Digital input functions

| Digital input assignment for:        | Par. | Contact (*)                 |                           |
|--------------------------------------|------|-----------------------------|---------------------------|
|                                      |      | Open                        | Closed                    |
| immediate external alarm             | DIA  | Alarm active                | Alarm not active          |
| delayed external alarm               | DIb  | Alarm active                | Alarm not active          |
| enable defrost                       | DIc  | Defrost not enabled         | Defrost enabled           |
| start defrost                        | DI d | No effect                   | Start defrost             |
| door switch with stopping control    | DIE  | Door open                   | Door closed               |
| remote ON/OFF                        | DIF  | OFF                         | ON                        |
| curtain switch/light                 | DIG  | Day status                  | Night status (ECO mode)   |
| start/stop continuous cycle          | DIH  | Stop continuous cycle       | Start continuous cycle    |
| change set of parameters             | DIo  | Set 1                       | Set 2                     |
| door switch without stopping control | DIP  | Door open                   | Door closed               |
| generic alarm function               | DIS  | Alarm active                | Alarm not active          |
| low pressure switch                  | DI t | Alarm active                | Alarm not active          |
| auxiliary input                      | DIU  | Auxiliary input deactivated | Auxiliary input activated |

Tab. 6.e

(\*) Default configuration with parameters rIA, rIb, ..., rIU = 0; by setting the corresponding parameters rIA, rIb, ..., rIU = 1, the contact logic is reversed and therefore the meanings of open/closed are also reversed.

### Example of digital input configuration.

To associate a function with a digital input, set the value of the corresponding parameter DIx to the value corresponding to the input, as shown in the following table. For example, to assign the immediate external alarm to input ID1, set parameter DIA to 1.

| Code | Desc.                                                                                      | Def. | Min | Max | UOM | User | User terminal |
|------|--------------------------------------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| DIA  | Immediate external alarm configuration:<br>0: Disabled - 1: ID1 - 2: ID2 - 3: D1H - 4: D2H | 1    | 0   | 4   | -   | S    | No            |

The default configuration does not include an assigned input.

If the opposite logic to the default setting is required, or to correct a wiring error, the logic of the functions associated with the digital inputs using parameters rIA, rIb, ... rIU can be reversed.

| Code               | Desc.                       | Def. | Min | Max | UOM |
|--------------------|-----------------------------|------|-----|-----|-----|
| rIA, rIb, ..., rIU | Reverse digital input logic | 0    | -   | 0   | 1   |

### Immediate external alarm (par. DIA)

Activation of the alarm causes:

- message 'IA' shown on the display and the "Service" icon flashing;
- activation of the buzzer (see par. Hb);
- activation of the alarm relay (see par. DO b);
- deactivation of the compressor output (see par. DOA).



**Notice:** activation of the external alarm shuts down the evaporator fan only if this follows the status of the compressor output, as set for parameter /F2. The compressor is shut down immediately due to an external alarm, and consequently the compressor ON time is ignored (parameter c3).

| Code | Desc.                                                                                                 | Def. | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| DIA  | Assign digital input for immediate external alarm.<br>0: Disabled - 1: ID1 - 2: ID2 - 3: D1H - 4: D2H | 0    | 0   | 4   | -   | S    | No            |

### Delayed external alarm (par. DIb)

The behaviour of this alarm is the same as for the immediate external alarm, with a delay in activation set by parameter A7. If set to 0, the alarm is signal-only.

| Code | Desc.                                                 | Def. | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------|------|-----|-----|-----|------|---------------|
| DIb  | Assign delayed external alarm digital input - see DIA | 0    | 0   | 4   | -   | S    | No            |

### Enable defrost (par. DIc)

Used to disable any defrost requests. When the contact is open, all defrost calls are ignored. Par. d5 can be used to delay activation.



#### Notice:

- if the contact is open while a defrost is in progress, this is immediately stopped, the defrost icon flashes on the display indicating the defrost request is active (this starts again when the contact closes);
- this function may be useful to prevent defrosts on units exposed to the public during store opening hours.

| Code | Desc.                                                         | Def. | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| DIc  | Assign enable defrost digital input - see DIA                 | 0    | 0   | 4   | -   | S    | No            |
| d5   | Defrost delay at power on or after command from digital input | 0    | 0   | 240 | min | M    | No            |

### Start defrost (par. DIId)

Closing the digital contact starts a defrost, if enabled.



**Notice:** if the defrost is disabled by another digital input configured as "enable defrost", the defrost calls are ignored.

| Code | Desc.                                                         | Def. | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| DIId | Assign start defrost digital input - see DIA                  | 0    | 0   | 4   | -   | S    | No            |
| d5   | Defrost delay at power on or after command from digital input | 0    | 0   | 240 | min | M    | No            |

### Door switch with compressor stop (par. DIE)

Door open:

- stop compressor and evaporator fan; alternatively, the compressor can stay on by setting parameter DIP (see the description below);
- light on (see par. DOE);
- ALARM flashing;
- disable temperature alarms.

Door closed:

- resume control;
- light off (see par. DOE) with delay set by par. H14;
- ALARM stops flashing;
- enable temperature alarms with delay Ad after bypass time defined by par. Add.

| Code | Desc.                                                                                           | Def.                    | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------------------------------------------------|-------------------------|-----|-----|-----|------|---------------|
| DIE  | Assign digital input for door switch with solenoid/compressor and evaporator fans OFF - see DIA | 0                       | 0   | 4   | -   | S    | No            |
| DOE  | Assign light digital output - see DOA                                                           | 4 (small)/<br>3 (large) | 0   | 6   | -   | S    | No            |
| H14  | Time light stays on after closing the door                                                      | 0                       | 0   | 240 | min | U    | No            |
| Add  | High temp. alarm bypass time for door open                                                      | 30                      | 1   | 240 | min | U    | No            |



**Caution:** check compatibility of disabling/delaying the alarm with the site's HACCP procedures.



#### Notice:

- when control resumes, the compressor times are observed (see the paragraph "Compressor");
- if the door remains open for longer than the value of par. Add, control resumes in any case. The light remains on, the measurement shown on the display flashes, the buzzer and the alarm relay (if enabled) are activated, and the temperature alarms are enabled with delay Ad.

### Door switch without compressor stop (par. DIP)

Operating mode that allows the door to be opened without stopping the compressor.

In this case, when opening the door, the evaporator fan will stop. This operating mode can be configured by setting parameter DIP with one of the digital inputs. Opening the door introduces a temperature alarm delay as described for the door switch function (par. DIE).

| Code | Desc.                                                           | Def. | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| DIP  | Assign door switch without control stop digital input - see DIA | 0    | 0   | 4   | -   | M    | No            |

### Remote ON/OFF (par. DIF)

When the controller is OFF:

- the user terminal shows the value measured by the set probe (parameter /t1) alternating with the message OFF;
- the auxiliary relays set as AUX and light remain active, while the other auxiliary outputs are deactivated;
- the buzzer and alarm relay are deactivated;
- the following are not performed: control, defrosts, continuous cycle, temperature alarm signals;
- in the transition from ON to OFF the compressor protection times are observed.

When the controller is ON again, the compressor times are observed and all of the functions are reactivated, except for the defrost on start-up and compressor and evaporator fan delay at power on (par. c0).



**Notice:**

- the OFF command from digital input has priority over those from the keypad or supervisor;
- if the controller remains OFF for a longer time than the value set for parameter dl, a defrost is performed when the controller is switched on again.

| Code | Desc.                                                               | Def. | Min | Max | UOM   | User | User terminal |
|------|---------------------------------------------------------------------|------|-----|-----|-------|------|---------------|
| DIF  | Assign remote ON/OFF digital input - see DIA                        | 0    | 0   | 4   | -     | S    | No            |
| dl   | Maximum interval between consecutive defrosts                       | 8    | 0   | 240 | hours | S    | Yes           |
| c0   | Delay to enable solenoid/compressor and evaporator fans at power on | 0    | 0   | 240 | min   | M    | No            |

### Curtain switch (par. DIG)

Digital input used to manage a curtain and switch from day to night (ECO).

During night status (ECO mode):

- the night-time set point  $St_n$  is used for control, calculated based on the set point  $St$  plus the offset defined by parameter  $r4$  ( $St_n = St + r4$ ) and  $r4d$  is used as the control differential. The control probe can also be modified according to the setting of parameter  $r6a$  (0 = virtual probe, 1 = probe), see the paragraph "Control";
- the AUX or light output is deactivated according to the setting of parameter H8.

During day status:

- normal operation resumes: set point =  $St$ , virtual probe used as control probe;
- AUX or light output activated according to the setting of parameter H8.

| Code | Desc.                                                      | Def.  | Min     | Max         | UOM   | User | User terminal |
|------|------------------------------------------------------------|-------|---------|-------------|-------|------|---------------|
| DIG  | Assign curtain switch digital input - see DIA              | 0     | 0       | 4           | -     | S    | No            |
| H8   | Output switched with time bands<br>0 = Light - 1 = AUX     | 0     | 0       | 1           | -     | S    | No            |
| r4   | Automatic night set point variation                        | 0     | -50/-90 | 50/90       | °C/°F | S    | No            |
| r4d  | Night control differential                                 | 4/7.2 | 0.1/0.2 | 99.9/ 179.2 | °C/°F | S    |               |
| r6a  | Night control probe 0/1 = virtual probe Sv/intake probe Sr | 0     | 0       | 1           | -     | S    | No            |

### Start/stop continuous cycle (par. DIH)

When the contact is closed, the continuous cycle is activated, based on parameters cc and ccE (see "Functions").

When the contact opens again, the continuous cycle is deactivated.

| Code | Desc.                                                      | Def. | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| DIH  | Assign start/stop continuous cycle digital input - see DIA | 0    | 0   | 4   | -   | S    | No            |

### Change working set (par. Dlo)

In this case, it is possible to choose between the configuration set for parameter  $rS1$  (digital input open) and the configuration set for parameter  $rS2$  (digital input closed). The changeover between sets occurs during the transition in status.



**Caution:** when changing sets, the default parameters for the chosen configuration are loaded, and any settings made by the user to the current set of parameters may be overwritten.



**Notice:** use the Spark configuration software to set the two default configurations. (see "Installation").

| Code | Desc.                                                       | Def. | Min | Max                 | UOM | User | User terminal |
|------|-------------------------------------------------------------|------|-----|---------------------|-----|------|---------------|
| Dlo  | Assign working parameter set change digital input - see DIA | 0    | 0   | 4                   | -   | S    | No            |
| rS1  | Configuration assigned to open digital input                | 1    | 0   | max<br>no.<br>conf. | -   | M    | No            |
| rS2  | Configuration assigned to closed digital input              | 2    | 0   | max<br>no.<br>conf. | -   | M    | No            |

### Generic alarm from digital input (par. DIS)

Activation of the alarm depends on parameter GFA\_E. Activation of the alarm causes:

- message GHl shown on the display and ALARM flashing;
- activation of the buzzer (see par. Hb);
- activation of the alarm relay (see par. DOB);

| Code  | Desc.                                                                                                                                                                                                   | Def. | Min | Max | UOM | User | User terminal |
|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| DIS   | Assign digital input for generic alarm from digital input - see DIA                                                                                                                                     | 0    | 0   | 4   | -   | S    | No            |
| GFA_E | Generic alarm function, enable<br>0 = always; 1 = unit ON; 2 = unit OFF; 3 = defrost; 4 = not used; 5 = continuous cycle; 6 = duty setting; 7 = standby; 8 = control; 9 = door open; 10 = active alarm. | 0    | 0   | 10  | -   | M    | No            |

### Low pressure switch (par. DI1)

If a low pressure switch is connected, the LP alarm is activated on opening. If pump down by pressure is enabled, the pressure switch is used to switch off the compressor and the autostart procedure.

| Code | Desc.                                              | Def. | Min | Max | UOM | User | User terminal |
|------|----------------------------------------------------|------|-----|-----|-----|------|---------------|
| DI1  | Assign low pressure switch digital input - see DIA | 0    | 0   | 4   | -   | M    | No            |

### Digital input for activating the output configured as AUX (par. DIU)

Digital input that can be used to activate/deactivate the output configured as AUX (parameter DOC).

| Code | Desc.                                                | Def.                    | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------------|-------------------------|-----|-----|-----|------|---------------|
| DIU  | Assign AUX output activation digital input - see DIA | 0                       | 0   | 4   | -   | M    | No            |
| DOC  | Assign AUX auxiliary digital output - see DOA        | 0 (small)/<br>1 (large) | 0   | 6   | -   | M    | No            |

## 6.4 Analogue outputs

On some models iJF has up to two 0-10 V or PWM analogue outputs (Y1, Y2), which can be configured separately by setting the corresponding parameter. The analogue outputs set as PWM can be used as a control signal to manage VCC compressors (up to a maximum of 3 in parallel for each output). The 0-10 V outputs can be used as a control signal for fans, anti-sweat heaters, LED dimmers or generic loads.

| Par. | Description                                                                                                                             | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| /AA  | Assign analogue output for modulating evaporator fans: 0 = not configured;<br>1 = analogue output 1 (Y1);<br>2 = analogue output 2 (Y2) | 0   | 0   | 2   | -   | S    | NO            |
| /Ac  | Assign analogue output for modulating anti-sweat heaters - see /AA                                                                      | 0   | 0   | 2   | -   | S    | NO            |
| /Ad  | Assign analogue output for generic function - see /AA                                                                                   | 0   | 0   | 2   | -   | S    | NO            |
| /AE  | Assign analogue output for generic function - see /AA                                                                                   | 0   | 0   | 2   | -   | S    | NO            |
| /AF  | Assign analogue output for modulating lights - see /AA                                                                                  | 0   | 0   | 2   | -   | S    | NO            |
| /AG  | Assign analogue output for modulating compressor - see /AA                                                                              | 0   | 0   | 2   | -   | S    | NO            |

## 6.5 Digital outputs

iJF features up to 6 digital outputs - NO1 to NO6. To associate the digital outputs with the available functions, set parameters DOA, DOB, ... DOZ to the value of the physical digital output. See the parameter table.

### Digital output functions

| Digital output assignment for:        | Par. | Default iJF small      | Default iJF large      |
|---------------------------------------|------|------------------------|------------------------|
| Solenoid/compressor                   | DOA  | Digital output 1 (NO1) | Digital output 5 (NO5) |
| Alarm                                 | DOB  | -                      | Digital output 2 (NO2) |
| Auxiliary                             | DOC  | -                      | Digital output 1 (NO1) |
| Light                                 | DOE  | Digital output 4 (NO4) | Digital output 3 (NO3) |
| Defrost                               | DOG  | Digital output 2 (NO2) | Digital output 6 (NO6) |
| Auxiliary evaporator defrost          | DOH  | -                      | -                      |
| Evaporator fans                       | DOI  | Digital output 3 (NO3) | Digital output 4 (NO4) |
| Dehumidification                      | DOj  | -                      | -                      |
| Auxiliary compressor without rotation | DOK  | -                      | -                      |
| Liquid valve                          | DOn  | -                      | -                      |
| Condensate drain heater               | DOP  | -                      | -                      |
| Anti-sweat heater                     | DOQ  | -                      | -                      |
| Generic digital output                | DOS  | -                      | -                      |
| Condenser fans                        | DOt  | -                      | -                      |
| Humidifier                            | DOU  | -                      | -                      |
| Heading in dead band                  | DOv  | -                      | -                      |
| Auxiliary parallel compressor         | DOw  | -                      | -                      |
| Gasket heater                         | DOx  | -                      | -                      |
| Auxiliary compressor with rotation    | DOy  | -                      | -                      |
| External dehumidifier                 | DOz  | -                      | -                      |

Tab. 6.f

If the opposite logic to the default setting is required, or to correct a wiring error, the logic of the functions associated with the digital outputs using parameters rOA, rOB, ... rOZ can be reversed.

| Code               | Description                                  | Def | Min | Max | UOM | User | User terminal |
|--------------------|----------------------------------------------|-----|-----|-----|-----|------|---------------|
| rOA, rOB, ..., rOZ | Digital output logic:<br>0=direct; 1=reverse | 0   | 0   | 1   | -   | S    | NO            |

**Solenoid/compressor (par. DOA)**

This is used to assign the compressor or liquid solenoid valve output.

| Par. | Description                               | Def                        | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------|----------------------------|-----|-----|-----|------|---------------|
| DOA  | Assign solenoid/compressor digital output | 1 (small)                  | 0   | 6   | -   | S    | NO            |
|      | 0 = not configured                        | 4 = digital output 4 (NO4) |     |     |     |      |               |
|      | 1 = digital output 1 (NO1)                | 5 = digital output 5 (NO5) |     |     |     |      |               |
|      | 2 = digital output 2 (NO2)                | 6 = digital output 6 (NO6) |     |     |     |      |               |
|      | 3 = digital output 3 (NO3)                |                            |     |     |     |      |               |

**Alarm (par. DOB)**

This is used to assign the alarm output. The relay associated with the alarm function can work as follows:

- normally de-energised: the relay is energised when an alarm occurs (rOA = 0);
- normally energised: the relay is de-energised when an alarm occurs (rOA = 1);



**Notice:** operation with the relay normally energised (rOA = 1) when an alarm occurs ensures maximum safety when the alarm is due to a power failure or power cable disconnection.

| Par. | Description                           | Def       | Min | Max | UOM | User | User terminal |
|------|---------------------------------------|-----------|-----|-----|-----|------|---------------|
| DOB  | Assign alarm digital output - see DOA | 0 (small) | 0   | 6   | -   | S    | NO            |
|      |                                       | 2 (large) |     |     |     |      |               |

**AUX auxiliary output (par. DOC)**

The relay can be activated/deactivated from the supervisor and on changeover between day/night status (linked to the curtain switch or the time band settings). Activation/deactivation of the actuator is signalled by the icon switching on/off (if present). The AUX output to be activated or deactivated based on the night/day time band can be selected (see parameters tS1...8, tE1...8 and H8).

| Par. | Description                                   | Def       | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------|-----------|-----|-----|-----|------|---------------|
| DOC  | Assign AUX auxiliary digital output - see DOA | 0 (small) | 6   | -   | S   | NO   |               |
|      |                                               | 1 (large) |     |     |     |      |               |

**Light (par. DOE)**

The relay can be activated/deactivated using the direct functions on the user terminal, from the supervisor and on changeover between day/night status (linked to the curtain switch or the time band settings). Activation/deactivation of the actuator is signalled by the light icon switching on/off (if present). The light output to be activated or deactivated based on the night/day time band can be selected (see parameters tS1...8, tE1...8 and H8).

| Par. | Description                           | Def       | Min | Max | UOM | User | User terminal |
|------|---------------------------------------|-----------|-----|-----|-----|------|---------------|
| DOE  | Assign light digital output - see DOA | 4 (small) | 0   | 6   | -   | S    | NO            |
|      |                                       | 3 (large) |     |     |     |      |               |

**Defrost (par. DOG)**

The relay is activated/deactivated based on the defrost settings (see "Defrost"). Activation/deactivation of the actuator is signalled by the defrost icon switching on/off on the user terminal (if present).

**Auxiliary evaporator defrost (par. DOH)**

The relay is activated/deactivated based on the defrost settings (see "Defrost").

| Par. | Description                                                  | Def | Min | Max | UOM | User | User terminal |
|------|--------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOH  | Assign auxiliary evaporator defrost digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |

**Evaporator fans (par. DOI)**

The relay is activated/deactivated based on the evaporator fan settings (see "Evaporator fans"). Activation/deactivation of the relay is signalled by the evaporator fan icon switching on/off on the display (if present).

| Par. | Description                                    | Def       | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------|-----------|-----|-----|-----|------|---------------|
| DOI  | Assign evaporator fan digital output - see DOA | 3 (small) | 0   | 6   | -   | S    | NO            |
|      |                                                | 4 (large) |     |     |     |      |               |

**Dehumidification (par. DOj)**

Select the digital output used to manage the dehumidification function. See "Control".

| Par. | Description                                      | Def | Min | Max | UOM | User | User terminal |
|------|--------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOj  | Assign dehumidification digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |

**Auxiliary compressor without rotation (par. DOk)**

Select the output for the auxiliary compressor without rotation (see "Control"). Setting this output enables an auxiliary compressor that is activated as a second control step, without rotation, i.e. always switching on after the main compressor. In the event of simultaneous request for both steps, the auxiliary compressor is activated after a delay time set by parameter c11, to avoid simultaneous starts.

| Par. | Description                                                           | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOk  | Assign auxiliary compressor without rotation digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |
| c11  | Second compressor start delay                                         | 4   | 0   | 250 | s   | M    | NO            |

**Pump down valve (par. DOn)**

Digital output for pump down valve management.

| Par. | Description                                     | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOn  | Assign pump down valve digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |

**Condensate drain heater (par. DOP)**

During defrosting there may be frozen condensate on the bottom of the cabinet that prevents the water thawed from the evaporator from being drained correctly. The digital output can be configured to manage the condensate drain heater function. The heater is switched on before defrosting (dHA) and remains on after the defrost ends, for the time dHE. The heater can be activated by selecting a digital output with par. DOP.

**Notice:** the heater must be protected against overheating (e.g. thermal protector).

| Par. | Description                                    | Def | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOP  | Assign drain heater digital output - see DOA   | ... | 0   | 6   | -   | S    | NO            |
| dHA  | Drain heater activation time before defrosting | 3   | 1   | 120 | min | M    | No            |
| dHE  | Drain heater activation time after defrosting  | 3   | 1   | 120 | min | M    | No            |

**Anti-sweat heater (par. DOQ)**

Select the digital output for demisting the glass (see "Anti-sweat heater or fan").

| Par. | Description                                       | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOQ  | Assign anti-sweat heater digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |

**Generic function output (par. DOS)**

Select the digital output for the generic function with ON/OFF output (see "Generic functions").

| Par. | Description                                     | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOS  | Assign generic function digital output- see DOA | ... | 0   | 6   | -   | S    | NO            |

**Condenser fans (par. DOT)**

The relay is activated/deactivated based on the condenser fan settings (see "Condenser fans").

| Par. | Description                                   | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOT  | Assign condenser fan digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |

**Humidifier output (par. DOu)**

Select the humidification output (see "Humidity management").

| Par. | Description                                    | Def | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOu  | Assign humidification digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |

**Reverse dead band output (par. DOv)**

Select reverse output for dead band control (see "Control").

| Par. | Description                                                    | Def | Min | Max | UOM | User | User terminal |
|------|----------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOv  | Assign reverse digital output with dead band control - see DOA | ... | 0   | 6   | -   | S    | NO            |

**Auxiliary parallel compressor (par. DOW)**

Select the auxiliary parallel compressor output (see "Control"). Setting this output enables an auxiliary compressor that works in parallel with the main compressor. A delay time can be set using parameter c11 to avoid simultaneous starts.

| Par. | Description                                                   | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOW  | Assign auxiliary parallel compressor digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |
| c11  | Second compressor start delay                                 | 4   | 0   | 250 | s   | M    | NO            |

### Gasket heater (par. DOx)

Select the digital output for the door gasket heater (see "Gasket heater").

| Par. | Description                                   | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOx  | Assign gasket heater digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |

### Auxiliary compressor with rotation (par. DOy)

Select the output for the auxiliary compressor with rotation (see "Control"). Setting this output enables an auxiliary compressor that is activated as a second control step, with rotation, i.e. alternating with the compressor that starts first so as to balance the operating hours of the two compressors. In the event of simultaneous request for both steps, the second compressor is activated after a delay time set by parameter c11, to avoid simultaneous starts.

| Par. | Description                                                        | Def | Min | Max | UOM | User | User terminal |
|------|--------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOy  | Assign auxiliary compressor with rotation digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |
| c11  | Second compressor start delay                                      | 4   | 0   | 250 | s   | M    | NO            |

### External dehumidifier (par. DOz)

Select the digital output for activation of an external dehumidifier (see "Humidity management").

| Par. | Description                                           | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOz  | Assign external dehumidifier digital output - see DOA | ... | 0   | 6   | -   | S    | NO            |

## 6.5.1 Test output mode

The iJF control provides the possibility to test the operation of the analogue and digital outputs, either from the configuration tool or via the Applica app, by accessing Service area > Test mode.

| Par. | Description                                                                                               | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| MA1  | Test mode, activate analogue output 1:<br>0 = disabled; 1 = automatic; 2 = activated at the value of MAr1 | 0   | 0   | 1   | -   | S    | NO            |
| MA2  | Test mode, activate analogue output 2 - see MA1                                                           | 0   | 0   | 1   | -   | S    | NO            |
| MAr1 | Test mode, analogue output 1 request                                                                      | 0   | 0   | 100 | %   | S    | NO            |
| MAr2 | Test mode, analogue output 2 request                                                                      | 0   | 0   | 100 | %   | S    | NO            |
| Mr1  | Test mode, activate relay 1:<br>0 = disabled; 1 = automatic; 2 = activated                                | 1   | 0   | 2   | -   | S    | NO            |
| Mr2  | Test mode, activate relay 2 - see Mr1                                                                     | 1   | 0   | 2   | -   | S    | NO            |
| Mr3  | Test mode, activate relay 3 - see Mr1                                                                     | 1   | 0   | 2   | -   | S    | NO            |
| Mr4  | Test mode, activate relay 4 - see Mr1                                                                     | 1   | 0   | 2   | -   | S    | NO            |
| Mr5  | Test mode, activate relay 5 - see Mr1                                                                     | 1   | 0   | 2   | -   | S    | NO            |
| Mr6  | Test mode, activate relay 6 - see Mr1                                                                     | 1   | 0   | 2   | -   | S    | NO            |
| Mt   | Manual mode duration (0 = manual mode always active)                                                      | 10  | 0   | 90  | min | S    | NO            |

Parameters Mr\* are used to activate the relays manually:

- Mr\* = 0 the corresponding relay is deactivated;
- Mr\* = 1 the corresponding relay is activated/deactivated automatically by the controller based on the associated function;
- Mr\* = 2 the corresponding relay is activated.

Parameters MA\* are used to activate the analogue outputs manually:

- MA\* = 0 the corresponding output is deactivated;
- MA\* = 1 the corresponding output is activated/deactivated automatically by the controller based on the associated function;
- MA\* = 2 the corresponding output is activated at the value set by parameter MAr\*.

The message 'Man' is shown on the display when at least one output is set in manual mode.

After a time set using parameter Mt, automatic operation resumes.



**Caution:** if Mt = 0 operation remains in manual mode until automatic operation resumes.

### Test outputs via BMS serial port

On iJF models with the BMS serial option, output test mode can also be activated via the BMS serial port. To activate test mode, a certain value needs to be sent within 60 s from controller power on, using the Modbus address assigned for enabling the test function (see the table). The value to be sent is 0x00A5, alternating with 0x005A every 30 s. When the iJF controller receives the value 0x00A5 alternating with 0x005A, the inputs are read and control is active as normal, however the outputs are overridden manually with the values set using parameters RelayActTestMode [1] to AoutActTestMode [2].

In test mode via BMS serial port, the display shows the message tSt.

Test mode ends when the value 0x00A5/0x005A is no longer updated within 30 s (in this case, the controller needs to be restarted) or when one of the following values is written:

- 0x0039: test mode ends and the controller is restarted.
- 0x0089: test mode ends without the controller restarting.

| Par.                | Description                                           | Modbus |     |      |        |          | Register (dec.) | Register (hex.) | Address (hex.) | Access (**) |
|---------------------|-------------------------------------------------------|--------|-----|------|--------|----------|-----------------|-----------------|----------------|-------------|
|                     |                                                       | Def.   | Min | Max  | UOM    | Type (*) |                 |                 |                |             |
| RelayActTestMode[1] | Test via BMS serial port activate relay 1             | 0      | 0   | 1    | -      | CS       | 5               | 0x0005          | 0x0004         | R/W         |
| RelayActTestMode[2] | Test via BMS serial port activate relay 2             | 0      | 0   | 1    | -      | CS       | 6               | 0x0006          | 0x0005 R       | /W          |
| RelayActTestMode[3] | Test via BMS serial port activate relay 3             | 0      | 0   | 1    | -      | CS       | 7               | 0x0007          | 0x0006         | R/W         |
| RelayActTestMode[4] | Test via BMS serial port activate relay 4             | 0      | 0   | 1    | -      | CS       | 8               | 0x0008          | 0x0007         | R/W         |
| RelayActTestMode[5] | Test via BMS serial port activate relay 5             | 0      | 0   | 1    | -      | CS       | 9               | 0x0009          | 0x0008         | R/W         |
| RelayActTestMode[6] | Test via BMS serial port activate relay 6             | 0      | 0   | 1    | -      | CS       | 10              | 0x000A          | 0x0009         | R/W         |
| CompFreqActTestMode | Test via BMS serial port VCC compressor frequency     | 0      | 0   | 255  | hz     | HR       | 49              | 0x0031          | 0x0030         | R/W         |
| AoutActTestMode[1]  | Test via BMS serial port value of analogue output Y1: | 0      | 0   | 1000 | % x 10 | HR       | 83              | 0x0053          | 0x0052         | R/W         |
| AoutActTestMode[2]  | Test via BMS serial port value of analogue output Y2: | 0      | 0   | 1000 | % x 10 | HR       | 84              | 0x0054          | 0x0053         | R/W         |
| TestMode            | Enable test via BMS serial port                       | 0      | 0   | 255  | -      | HR       | 60              | 0x003C          | 0x003B         | R/W         |

Tab. 6.g

(\*) CS= Coil Status; HR = Holding Register

(\*\*) R = read; W = write

## 6.6 Control

Various modes are available for controlling the air temperature for the preservation of foodstuffs, depending on which probes are installed and their position. The following figure shows the position of the intake probe (air on)  $S_r$  and the outlet probe (air off)  $S_m$ . The virtual probe  $S_v$  is a weighted average of these two probes, based on parameter /4, according to the following formula:

$$S_v = \frac{S_m \cdot (100 - /4) + S_r \cdot (/4)}{100}$$

| Par. | Description                                                                     | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| /4   | Virtual probe composition:<br>0 = Outlet probe $S_m$ ; 100 = Intake probe $S_r$ | 0   | 0   | 100 | %   | S    | NO            |

For example, if /4=50,  $S_v=(S_m+S_r)/2$  represents an estimated value of the air temperature around the refrigerated food.

**Notice:** HACCP: parameter /4 can be set to change the temperature used for control and for display. This operation may be prohibited by HACCP procedures or require record keeping and authorisation.

Example: vertical showcase

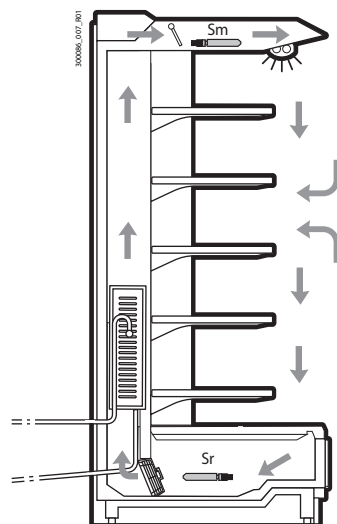


Fig. 6.b

| Ref.  | Description   |
|-------|---------------|
| $S_m$ | Outlet probe  |
| $S_r$ | Intake probe  |
| $S_v$ | Virtual probe |

During the day, most of the load in a refrigerated showcase is due to warm air that enters from the outside and mixes with the cold air inside. Control based on the intake probe, due to high temperature outside the showcase and the mixing of the air, may not manage to reach the set point. Displaying the intake temperature would show a temperature that is too high. Setting a set point that is too low for the intake probe  $S_r$  may cause the food to freeze. On the other hand, displaying the outlet temperature would show a temperature that is too low. Consequently, the display of the control probe, set point or virtual probe can be configured using parameter  $t1$ .

ON/OFF control on the outlet probe is defined by:

- set point;
- differential

These values determine the control request and consequently, allowing for the protection times, disabling functions or activation/deactivation delays, the activation/deactivation of the compressor.

| Par. | Description                      | Def    | Min     | Max        | UOM     | User | User terminal |
|------|----------------------------------|--------|---------|------------|---------|------|---------------|
| St   | Temperature control set point    | 50/122 | r1      | r2         | °C/°F   | U    | YES           |
| rd   | Temperature control differential | 2/3.6  | 0.1/0.2 | 99.9/179.2 | Δ °C/°F | S    | YES           |



**Notice HACCP:** the set point and differential are critical parameters for food storage.

Modifications to these settings may be prohibited by HACCP procedures or require record keeping and authorisation.

The minimum and maximum value of the set point can be set by parameter.

| Par. | Description       | Def     | Min        | Max     | UOM   | User | User terminal |
|------|-------------------|---------|------------|---------|-------|------|---------------|
| r1   | Minimum set point | -50/-58 | -99/-146.2 | r2      | °C/°F | S    | NO            |
| r2   | Maximum set point | 50/122  | r1         | 200/392 | °C/°F | S    | NO            |

### Control offset with probe error

| Par. | Description                     | Def | Min | Max   | UOM     | User | User terminal |
|------|---------------------------------|-----|-----|-------|---------|------|---------------|
| ro   | Control offset with probe error | 0   | 0   | 20/36 | Δ °C/°F | M    | NO            |

The iJF controller in standard mode uses the virtual probe  $S_v$  for control, that is, the weighted average of the outlet and intake probe (see parameter  $/4$ ). If one of the two probes making up the virtual probe is broken or has an error, parameter  $ro$  is used to continue normal control in controlled conditions, without the need for immediate intervention by maintenance personnel. The recommended value of  $ro$  is the temperature difference between the outlet probe and intake probe reading in steady operating conditions of the refrigeration unit:

$$ro = S_r - S_m$$

The following cases may occur:

- outlet probe  $S_m$  error: control starts based on the intake probe  $S_r$  alone, considering a new set point ( $St^*$ ) determined by the formula:

$$St^* = St + ro \cdot \frac{(100 - '/4')}{100}$$

- intake probe  $S_r$  error: based starts on the outlet probe  $S_m$  alone, considering a new set point ( $St^*$ ) determined by the formula:

$$St^* = St - ro \cdot \frac{'/4'}{100}$$



**Notice:**

- if  $ro = 0$  the function is not active;
- for night-time operation the new set point is added to the value defined by  $r4$  (= automatic night-time set point variation);
- in the event of errors on both probes, the controller switches to duty setting operation.

### Example

$S_m$  fault in daytime operation, with  $/4=50$ ,  $St=-4$ ,  $S_r=0$ ,  $S_m=-8$ ,  $ro$  (recommended) =  $0 - (-8) = 8$ .

Then the new control probe will be  $S_r$  with:

$$St^* = St + ro \cdot \frac{(100 - '/4')}{100}$$

$$St^* = -4 + 8 \cdot (100 - 50) / 100 = 0.$$

If the fault is on  $S_r$ , the new control probe will be  $S_m$  with:

$$St^* = St - ro \cdot \frac{'/4'}{100}$$

$$St^* = -4 - 8 \cdot 50 / 100 = -8.$$

### Duty setting operation

Duty setting is a special function used to maintain control in emergency situations with errors in the temperature control probes, until a service intervention.

In the event of a temperature probe error, the controller uses the other probe available and adjusts the set point according to the setting of parameter *ro*. In the event of errors on both probes, the controller switches to a special mode called "duty setting". Control is activated at regular intervals, operating for a time equal to the value set for the duty setting parameter *c4*, and off for a fixed time of 15 minutes.

| Par. | Description                                                                                                                                   | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| c4   | ON time for duty setting operation (Toff = 15 minutes, fixed value):<br>0 = compressor/valve always OFF;<br>100 = compressor/valve always ON. | 0   | 0   | 100 | min | M    | NO            |

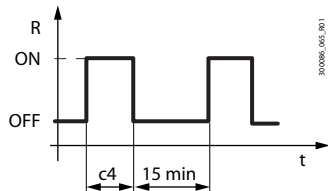


Fig. 6.c

| Ref. | Description |
|------|-------------|
| R    | Control     |
| c4   | ON time     |
| t    | Time        |

With duty setting active, during the ON time the solenoid/compressor icon remains on, while it flashes during the OFF time. The table below describes the possible fault situations relating to the control probes and the function that is activated.

| Type of system | Control probe fault |    | Control       | Parameter |
|----------------|---------------------|----|---------------|-----------|
|                | Sm                  | Sr |               |           |
| 1 probe        | ●                   |    | Duty setting  | c4        |
|                |                     | ●  | Duty setting  | c4        |
| 2 probes       | ●                   |    | control on Sr | ro(*)     |
|                |                     | ●  | control on Sm | ro(*)     |
|                | ●                   | ●  | Duty setting  | c4        |

Tab. 6.a

\* Only when *ro* > 0.

## 6.7 Control modes

Three control modes are available, based on the setting of parameter *r30*:

- *r30* = 0, direct with defrost control (default);
- *r30* = 1 direct;
- *r30* = 2 reverse; operation suitable for hot food showcases;

| Par. | Description                                                       | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| r30  | Control mode:<br>0 = direct with defrost; 1 = direct; 2 = reverse | 0   | 0   | 2   | -   | M    | NO            |

The figure shows the behaviour of direct and reverse mode. The difference between direct control and direct control with defrost control is that in the former case defrosting is disabled, while in the latter case it is enabled; defrosting is enabled by default.

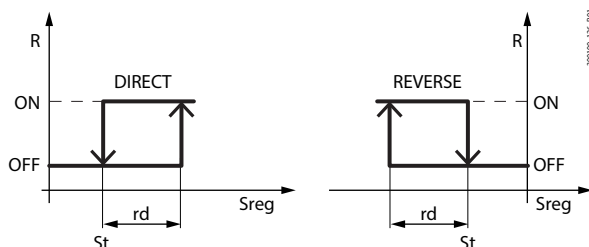


Fig. 6.d

| Ref. | Description     |
|------|-----------------|
| St   | Set point       |
| rd   | Differential    |
| Sreg | Control probe   |
| R    | Control request |

ON/OFF control depends on the capacity of the produce to absorb and release heat, as well as on the evaporator cooling time. The temperature therefore fluctuates above and below the set point, and this may cause a decline in the quality of food preservation. Decreasing the differential to make control more precise increases the frequency of compressor on/off cycles. Precision of the measurement is in any case limited by the tolerance of both the controller and the probe.

### 6.7.1 Control with auxiliary compressor

In addition to the main compressor, the iJF controller can manage a second compressor output that either acts as a second control step, with or without rotation, or in parallel with the main compressor:

- auxiliary compressor without rotation (parameter DOK)
- auxiliary compressor with rotation (parameter DOy)
- parallel compressor without rotation (parameter DOW)

#### Stepped control

Control with the auxiliary compressor enabled is illustrated in the figure. If the auxiliary compressor is configured without rotation (par. DOK), the main compressor is always activated first, while if the auxiliary compressor is configured with rotation (par. DOy), on each activation request the compressor that starts first is alternated, with FIFO rotation, so as to balance the operating hours of the two compressors.

The auxiliary compressor is activated with a delay that can be set using parameter c11, to avoid simultaneous starts.

| Par. | Description                                                                                                                | Def                     | Min | Max | UOM | User | User terminal |
|------|----------------------------------------------------------------------------------------------------------------------------|-------------------------|-----|-----|-----|------|---------------|
| c11  | Second compressor start delay                                                                                              | 4                       | 0   | 250 | s   | M    | NO            |
| DOA  | Assign solenoid/compressor digital output<br>0 = Function disabled<br>1 = NO1; 2 = NO2; 3 = NO3; 4 = NO4                   | 1 (small)/<br>5 (large) | 0   | 6   | -   | M    | NO            |
| DOK  | Assign auxiliary compressor without rotation digital output<br>0 = Function disabled<br>1 = NO1; 2 = NO2; 3 = NO3; 4 = NO4 | 0                       | 0   | 6   | -   | M    | NO            |
| DOy  | Assign auxiliary compressor with rotation digital output<br>0 = Function disabled<br>1 = NO1; 2 = NO2; 3 = NO3; 4 = NO4    | 0                       | 0   | 6   | -   | M    | NO            |

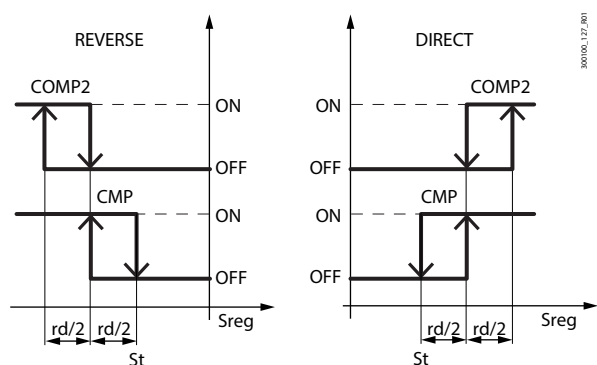


Fig. 6.e

| Ref.  | Description                  |
|-------|------------------------------|
| St    | Set point                    |
| rd    | Differential                 |
| Sreg  | Control probe                |
| CMP   | Compressor request           |
| COMP2 | Auxiliary compressor request |

#### Parallel control

If the second compressor is configured as an auxiliary parallel compressor, control behaviour and activation of the two outputs are shown in the figure. The delay set by parameter c11 is always observed.

| Par. | Description                                                   | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| c11  | Second compressor start delay                                 | 4   | 0   | 250 | s   | M    | NO            |
| DOW  | Assign auxiliary parallel compressor digital output - see DOA | 0   | 0   | 6   | -   | M    | NO            |

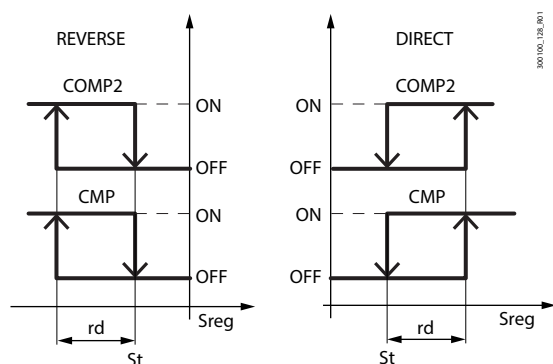


Fig. 6.f

| Ref.  | Description                           |
|-------|---------------------------------------|
| St    | Set point                             |
| rd    | Differential                          |
| Sreg  | Control probe                         |
| CMP   | Compressor request                    |
| COMP2 | Auxiliary parallel compressor request |

## 6.7.2 Dead band control

If a digital output has been configured for reverse control in the dead band (par. DOv), control takes into account a dead band around the set point, with an amplitude that can be set using parameter rn. The reverse output is activated with a differential set using parameter rr. Control with dead band varies according to the control mode selected using parameter r30 and whether or not the second auxiliary or parallel compressor is available. The figures show the different behaviour with or without an auxiliary compressor; the behaviour with parallel compressor is similar to when the main compressor only is used.

For the auxiliary compressor, the delay set by parameter c11 is always observed.

| Par. | Description                                                                                                 | Def | Min | Max        | UOM   | User | User terminal |
|------|-------------------------------------------------------------------------------------------------------------|-----|-----|------------|-------|------|---------------|
| r30  | Control mode:<br>0 = direct with defrost; 1 = direct; 2 = reverse                                           | 0   | 0   | 2          | -     | M    | NO            |
| rn   | Dead band                                                                                                   | 4.0 | 0.0 | 60.0 / 108 | °C/°F | S    | NO            |
| rr   | Reverse output differential                                                                                 | 2.0 | 0.0 | 20.0 / 36  | °C/°F | S    | NO            |
| DOv  | Assign reverse digital output with dead band<br>0 = Function disabled<br>1 = NO1; 2 = NO2; 3 = NO3; 4 = NO4 | 0   | 0   | 6          | -     | M    | NO            |

Direct control in dead band without auxiliary compressor

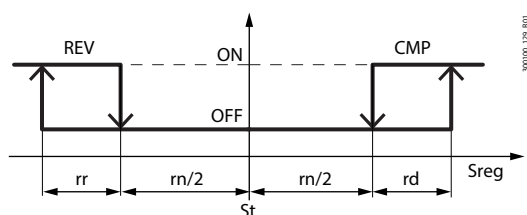


Fig. 6.g

| Ref.  | Description                                         |
|-------|-----------------------------------------------------|
| St    | Set point                                           |
| rd    | Differential                                        |
| rn    | Dead band                                           |
| rr    | Reverse output differential                         |
| Sreg  | Control probe                                       |
| CMP   | Compressor request                                  |
| REV   | Reverse output request in dead band                 |
| COMP2 | Auxiliary compressor request (par. DOk or par. DOy) |

Direct control in dead band with auxiliary compressor

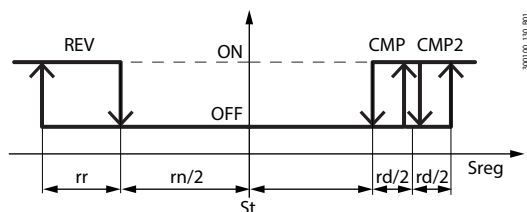


Fig. 6.h

| Ref.  | Description                                         |
|-------|-----------------------------------------------------|
| St    | Set point                                           |
| rd    | Differential                                        |
| rn    | Dead band                                           |
| rr    | Reverse output differential                         |
| Sreg  | Control probe                                       |
| CMP   | Compressor request                                  |
| REV   | Reverse output request in dead band                 |
| COMP2 | Auxiliary compressor request (par. DOk or par. DOy) |

Reverse control in dead band without auxiliary compressor

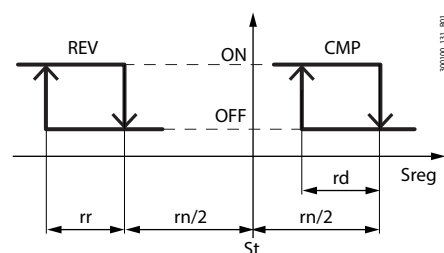


Fig. 6.i

| Ref.  | Description                                         |
|-------|-----------------------------------------------------|
| St    | Set point                                           |
| rd    | Differential                                        |
| rn    | Dead band                                           |
| rr    | Reverse output differential                         |
| Sreg  | Control probe                                       |
| CMP   | Compressor request                                  |
| REV   | Reverse output request in dead band                 |
| COMP2 | Auxiliary compressor request (par. DOk or par. DOy) |

Reverse control in dead band with auxiliary compressor

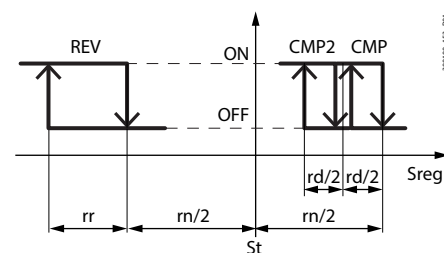


Fig. 6.j

| Ref.  | Description                                         |
|-------|-----------------------------------------------------|
| St    | Set point                                           |
| rd    | Differential                                        |
| rn    | Dead band                                           |
| rr    | Reverse output differential                         |
| Sreg  | Control probe                                       |
| CMP   | Compressor request                                  |
| REV   | Reverse output request in dead band                 |
| COMP2 | Auxiliary compressor request (par. DOk or par. DOy) |

## 6.8 Night-time operation

During night-time operation there may be a decrease in thermal load. To avoid excessively low temperatures and high energy consumption, the set point needs to be increased at night by setting parameter r4. Parameter r6a can then be used to select the virtual probe Sv or intake probe Sr as the control probe.

|               | Daytime operation | Night-time operation |         |
|---------------|-------------------|----------------------|---------|
|               |                   | r6a = 0              | r6a = 1 |
| Control probe | Sv                | Sv                   | Sr      |
| Set point     | St                | St + r4              | St + r4 |

Tab. 6.h

Night-time operation can be activated by a digital input configured as a curtain switch, on the user interface, from the supervisor or time bands, with different priorities. If the digital input has been selected, this has the highest priority and the other actions are ignored, while if the digital input has not been selected, the other actions have the same priority and the last one controls the action.

To set the time bands, see "Setting the date/time and time bands".

| Par.        | Description                                                                                      | Def      | Min      | Max         | UOM     | User | User terminal |
|-------------|--------------------------------------------------------------------------------------------------|----------|----------|-------------|---------|------|---------------|
| DIG         | Assign curtain switch digital input - see DIA                                                    | 0        | 0        | 4           | -       | S    | NO            |
| H8          | Output switched with time bands 0 = Light; 1 = AUX.                                              | 0        | 0        | 1           | -       | M    | NO            |
| r4          | Automatic night set point variation                                                              | 0        | -50/-90  | 50/90       | °C/°F   | S    | NO            |
| r6          | Control probe for night-time operation:<br>0 = virtual probe Sv; 1 = intake temperature probe Sr | 0        | 0        | 1           | -       | S    | NO            |
| r4d         | Night control differential                                                                       | 4/7.2    | 0.1/0.2  | 99.9/ 179.2 | °C/°F   | S    | NO            |
| tS1..8-d    | Start time band 1 to 8 day: day - see (td1...8-d)                                                | 0        | 0        | 11          | day     | U    | NO            |
| tS1..8-hh   | Start time band 1 to 8 day: hours                                                                | 0        | 0        | 23          | hours   | U    | NO            |
| tS1..8-mm   | Start time band 1 to 8 day: minutes                                                              | 0        | 0        | 59          | minutes | U    | NO            |
| td1..8-time | Start time band 1 to 8: type of time data for Applica                                            | 00:00:00 | 00:00:00 | 23:59:59    | -       | U    | NO            |
| tE1..8-d    | End time band 1 to 8 day: day - see (td1...8-d)                                                  | 0        | 0        | 11          | day     | U    | NO            |
| tE1..8-hh   | End time band 1 to 8 day: hours                                                                  | 0        | 0        | 23          | hours   | U    | NO            |
| tE1..8-mm   | End time band 1 to 8 day: minutes                                                                | 0        | 0        | 59          | minutes | U    | NO            |

 **Notice HACCP:** verify that modification of the night-time set point (parameter /4) is permitted by site HACCP procedures. If required, obtain the required authorisation and record the changes.

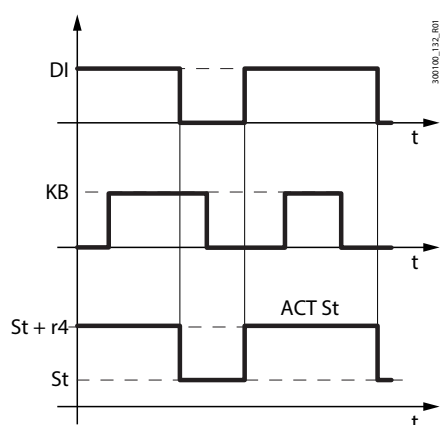


Fig. 6.k

| Ref.   | Description                |
|--------|----------------------------|
| St     | Set point                  |
| r4     | Night set point variation  |
| DI     | Control from digital input |
| ACT St | Effective set point        |
| t      | time                       |

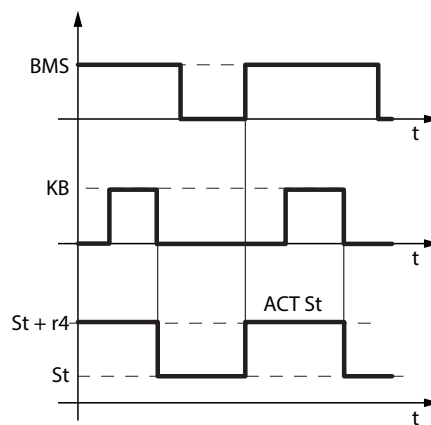


Fig. 6.l

| Ref. | Description               |
|------|---------------------------|
| St   | Set point                 |
| r4   | Night set point variation |
| BMS  | Control from supervisor   |
| KB   | Control from keypad       |
| t    | time                      |

By setting the time bands and setting the light as the switched output (H8 = 0), the set point follows the day/night settings of the time bands:



Fig. 6.m

During day status:

- Set point= St
- Regulation probe Sv
- light on

During night status:

- Set point= St + r4
- Regulation probe Sv or Sr, according r6a
- light on

## 6.9 ECO operation

During ECO operation, the iJF uses the same control set point  $St+r4$ , but with a different differential. This reduces the number of compressor starts/stops and reduces energy consumption.

ECO operation can be activated on the user interface, from the supervisor or time bands, with the same priority.

To set the time bands, see "Setting the date/time and time bands".



**Note:** the time bands for ECO operation and night operation are the same; the effect depends on the setting of parameters  $r4$  and  $r4d$ .

| Par.        | Description                                           | Def      | Min      | Max         | UOM     | User | User terminal |
|-------------|-------------------------------------------------------|----------|----------|-------------|---------|------|---------------|
| rd          | Temperature control differential                      | 2 / 3.6  | 0.1/0.2  | 99.9/ 179.2 | Δ °C/°F | S    | YES           |
| r4d         | Night control differential                            | 4/7,2    | 0.1/0.2  | 99.9/ 179.2 | Δ °C/°F | S    | NO            |
| tS1..8-d    | Start time band 1 to 8 day: day - see (td1...8-d)     | 0        | 0        | 11          | day     | U    | NO            |
| tS1..8-hh   | Start time band 1 to 8 day: hours                     | 0        | 0        | 23          | hours   | U    | NO            |
| tS1..8-mm   | Start time band 1 to 8 day: minutes                   | 0        | 0        | 59          | minutes | U    | NO            |
| td1..8-time | Start time band 1 to 8: type of time data for Applica | 00:00:00 | 00:00:00 | 23:59:59    | -       | U    | NO            |
| tE1..8-d    | End time band 1 to 8 day: day - see (td1...8-d)       | 0        | 0        | 11          | day     | U    | NO            |
| tE1..8-hh   | End time band 1 to 8 day: hours                       | 0        | 0        | 23          | hours   | U    | NO            |
| tE1..8-mm   | End time band 1 to 8 day: minutes                     | 0        | 0        | 59          | minutes | U    | NO            |

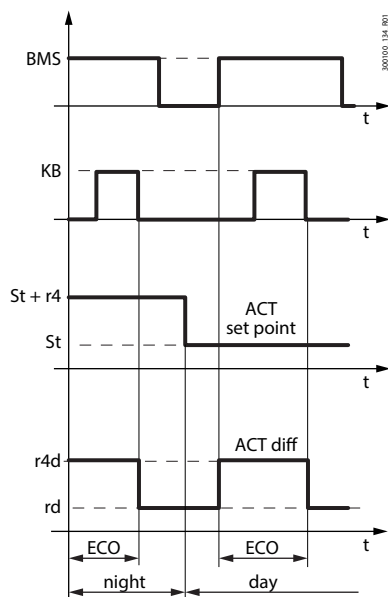


Fig. 6.n

**Notice:** if the door switch digital input is configured, opening the door causes the changeover from ECO operation to normal operation.

| Ref.     | Description                   |
|----------|-------------------------------|
| r4d      | Differential in ECO operation |
| r4       | Night set point variation     |
| KB       | Control from keypad           |
| BMS      | Control from supervisor       |
| ACT Diff | Effective differential        |
| ECO      | ECO operation                 |
| night    | Night-time operation          |
| t        | Time                          |

## 6.10 Continuous cycle

Continuous cycle is a function used to keep the refrigeration cycle active continuously for a settable duration (parameter  $cc$ ), irrespective of the temperature inside the unit. This may be useful when requiring a rapid decrease in the temperature, even below the set point. Continuous cycle ends when the time set for  $cc$  is reached or when the temperature falls below the set point by the value set for parameter  $ccE$ .



**Caution:** the unit of measure of parameter  $cc$  is hours.

| Par. | Description                                                                             | Def       | Min | Max      | UOM     | User | User terminal |
|------|-----------------------------------------------------------------------------------------|-----------|-----|----------|---------|------|---------------|
| c7   | Defrost priority over continuous cycle:<br>0 = same priority; 1 = defrost has priority. | 0         | 0   | 1        | -       | M    | NO            |
| cc   | Continuous cycle running time, 0 = disabled                                             | 0         | 0   | 15       | h       | M    | NO            |
| ccE  | Set point delta to end continuous cycle                                                 | 1.5 / 2.7 | 0.0 | 9.9/17.8 | Δ °C/°F | M    | NO            |

Continuous cycle can be activated by digital input, from the supervisor, on reaching the high temperature threshold  $AH$  or from the user interface. When the continuous cycle is running:

- the icon comes on (see "User interface" for details)
- the solenoid valve/compressor output (with icon) is activated;
- the low temperature alarm with threshold  $AL$  is enabled.



**Notice:**

- the continuous cycle cannot be activated if:
  - the duration of the continuous cycle is set to 0 ( $cc = 0$ );
  - the temperature is below the control set point
  - the device is OFF.

2. The continuous cycle remains in standby if:
  - the compressor is waiting for the times to elapse (c1, c3);
  - the immediate or delayed alarm from external digital input is active;
  - defrost, dripping, post-dripping are running;
  - the door is open. When the door is opened, the continuous cycle is interrupted. It restarts for the remaining time when the door is closed.
3. The continuous cycle ends:
  - when deactivating the direct function from the user terminal (see "Direct functions");
  - when reaching the low temperature threshold (AL or AL2 with double thermostat), whichever is reached first;
  - at the end of the time cc;
  - when the controller is switched off from the supervisor (logical OFF);
  - from the supervisor.

The continuous cycle ends:

- on deactivation by digital input, from the supervisor or user interface;
- on reaching the time cc;
- on reaching the threshold St-ccE;
- when there is a defrost request (if c7 = 1);
- when the iJF controller is placed in OFF status.

#### Defrost priority over continuous cycle

| Par. | Description                                                                             | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| c7   | Defrost priority over continuous cycle:<br>0 = same priority; 1 = defrost has priority. | 0   | 0   | 1   | -   | M    | NO            |

If c7 = 0, the continuous cycle has priority over defrosting: any defrost requests remain on hold while the continuous cycle is running. If c7=1, defrost requests that are activated when the continuous cycle is running terminate the latter and the defrost starts.

## 6.11 Custom set points

On the iJF controller the temperature and humidity set points can be selected from sets of preset values. This is done using the Applica app or the commissioning tools, by setting parameter St\_idx. Furthermore, on some iJF models the set points can be changed directly by pressing a button or activating a direct function on the display. The preset set point values can be changed by setting parameters Sc1, Sc2, Sc3, Sh1, Sh2, Sh3 in the Applica app or commissioning tools.

| Par.   | Description                    | Def | Min | Max | UOM   | User | User terminal |
|--------|--------------------------------|-----|-----|-----|-------|------|---------------|
| Sc1    | Custom temperature set point 1 | 0   | r1  | r2  | °C/°F | M    | NO            |
| Sc2    | Custom temperature set point 2 | 0   | r1  | r2  | °C/°F | M    | NO            |
| Sc3    | Custom temperature set point 3 | 0   | r1  | r2  | °C/°F | M    | NO            |
| St_idx | Custom set point index         | 0   | 0   | 3   | -     | M    | NO            |
| Sh1    | Custom humidity set point 1    | 0   | 0   | 100 | %RH   | M    | NO            |
| Sh2    | Custom humidity set point 2    | 0   | 0   | 100 | %RH   | M    | NO            |
| Sh3    | Custom humidity set point 3    | 0   | 0   | 100 | %RH   | M    | NO            |

## 6.12 Compressor

The iJF controller can manage both On/Off and modulating compressors (VCC - Variable Capacity Compressors, with serial command in the models with VCC option, or directly via the analogue output, appropriately configured). The control request is sent to the main compressor and the auxiliary compressor, as described in "Control".

## 6.13 Compressor protection times

The controller features the following compressor protection parameters.

| Par. | Description                                                                                                                                                                                                                               | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| c0   | Delay to enable solenoid/compressor and evaporator fans at power on                                                                                                                                                                       | 0   | 0   | 240 | min | M    | NO            |
| c1   | Min time between consecutive compressor starts                                                                                                                                                                                            | 0   | 0   | 15  | min | M    | NO            |
| c2   | Min compressor OFF time                                                                                                                                                                                                                   | 0   | 0   | 15  | min | M    | NO            |
| c3   | Min compressor ON time                                                                                                                                                                                                                    | 0   | 0   | 15  | min | M    | NO            |
| d9   | Defrost priority over compressor protection times:<br>0 = compressor (the protection times are observed);<br>1 = defrost (the protection times are ignored, therefore defrosting has higher priority and overrides the compressor times). | 10  | 0   | 1   | -   | M    | NO            |

- c0 is used to delay the start of control when the device is powered on. This function is useful for protecting the compressor and the driving relay from repeated on cycles in the event of frequent voltage drops.
- c1 sets the minimum time between two successive starts of the compressor, irrespective of the request. This parameter can be used to limit the maximum number of starts per hour;
- c2 sets the minimum compressor off time. The compressor will not be started again until the minimum time set has elapsed;
- c3 sets the minimum compressor running time. The compressor will not be started again until the minimum time set has elapsed;
- d9 disables the compressor protection times when defrosting:
  - d9 = 0: the compressor protection times are observed;
  - d9 = 1: the compressor protection times are ignored, therefore defrosting has higher priority over the compressor protection times.

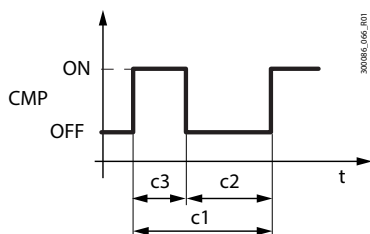


Fig. 6.o

| Ref. | Description |
|------|-------------|
| CMP  | Compressor  |
| t    | time        |

**Notice:** in the event of duty setting operation (see the corresponding paragraph), if the on time c4 is less than c3, the compressor remains on for the time c3.

## 6.14 Variable capacity compressor (VCC)

The iJF controller calculates the optimum compressor speed based on the value read by the control probe, and sends this data to the VCC inverter, which then drives the compressor, based on the model, in one of two modes: frequency or serial protocol.

### 6.14.1 VCC with frequency control

For frequency-controlled inverters, some iJF models are equipped with a dedicated analogue output. The output signal is a digital square wave, with a voltage amplitude from 0 to +10 Vdc and a range defined as described below. The duty cycle is 50%.

| Par. | Description                                                | Def | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| /AG  | Assign analogue output for modulating compressor - see /AA | 0   | 0   | 2   | -   | S    | NO            |
| /P5  | Configuration of analogue output Y1: 7 = 0-10 V; 8 = PWM.  | 8   | 7   | 8   | -   | S    | NO            |
| /P6  | Configuration of analogue output Y2: 7 = 0-10 V; 8 = PWM.  | 8   | 7   | 8   | -   | S    | NO            |

The analogue output to be used, Y1 or Y2, is selected by parameter /AG, with the corresponding parameter /P5 or /P6 then set as a PWM output.

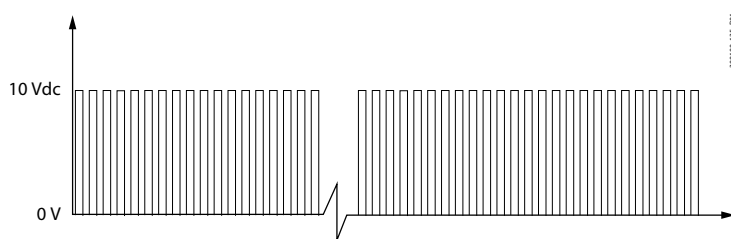


Fig. 6.p

The compressor speed follows the input frequency signal, with a relationship such as the one shown in the figure.

**Notice:** the reference frequencies and speeds vary according to the type of compressor and the parameter settings (see below).

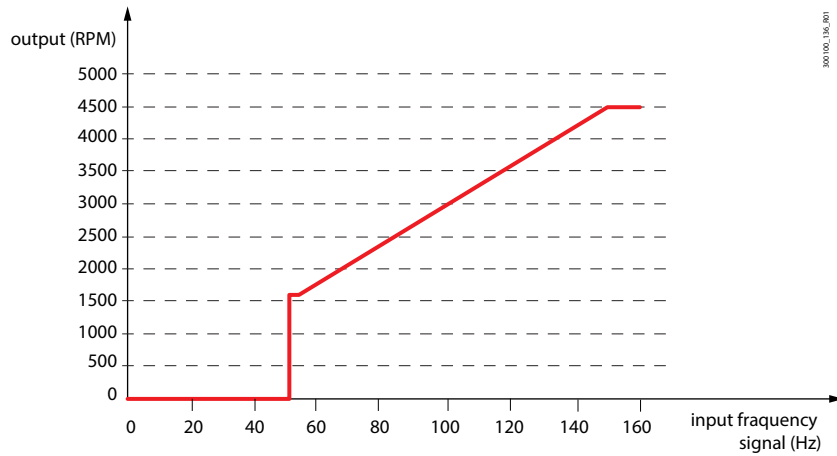


Fig. 6.q

The following diagrams show two examples of connection to the Embraco and Secop inverters. It is recommended to refer to the inverter manufacturer's user manual for more detailed instructions and installation instructions.

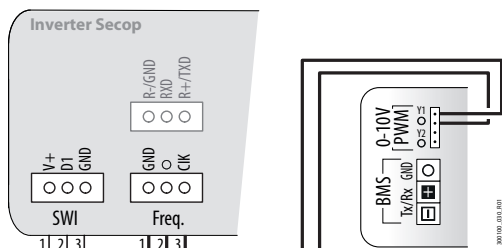


Fig. 6.r

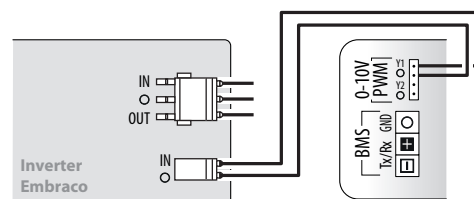


Fig. 6.s

### 6.14.2 VCC with serial control

For inverters with serial control, some iJF models feature a dedicated serial port. The inverter is connected directly, as shown in the following table. The following diagrams show two examples of connection to the Embraco and Secop inverters. It is recommended to refer to the inverter manufacturer's user manual for more detailed instructions and installation instructions.

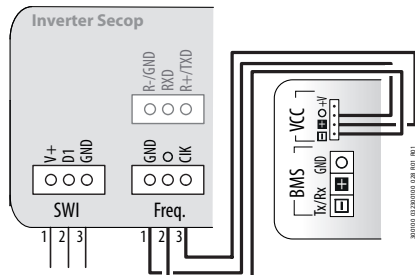


Fig. 6.t

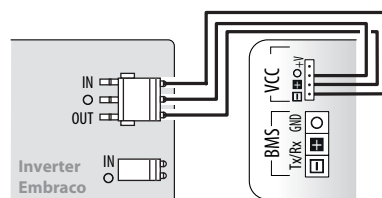


Fig. 6.u

#### Correspondence of terminals for serial connection

| iJF VCC | Secop    | Embraco  |
|---------|----------|----------|
| +V      | Not used | Not used |
| GND     | GND      | O        |
| -       | O        | IN       |
| +       | CIK      | OUT      |

Tab. 6.i

The serial communication protocol complies with the following technical specifications:

#### Asynchronous communication (start-stop)

|              |                 |
|--------------|-----------------|
| Baud rate    | 600 baud        |
| Start bits   | 1               |
| Data bits    | 8               |
| Stop bits    | 1               |
| Parity       | None            |
| Flow control | None            |
| Unit size    | 5 bytes 5 bytes |

Tab. 6.j

The compressor speed is sent to the inverter via a specific serial protocol command. The compressor speed follows the sent value, with a relationship such as the one shown in the figure:



**Notice:** the reference frequencies and speeds vary according to the type of compressor and the parameter settings (see below).

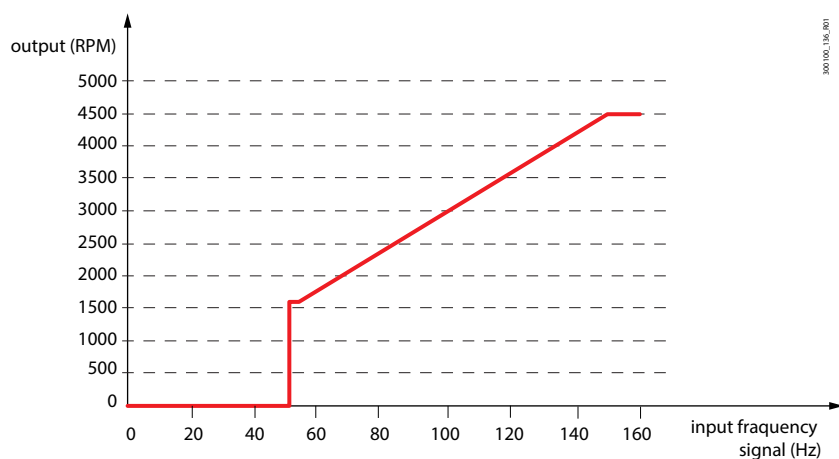


Fig. 6.v

### 6.14.3 VCC compressor configuration

All of the VCC configuration parameters are expressed in units of frequency (Hz). The corresponding compressor rotation speed (rpm) depends on the relationship:

$$\text{Compressor speed (rpm)} = \text{Frequency (Hz)} * \text{cuF}$$

where cuF is the conversion factor between frequency and compressor speed.

| Par. | Description                                                     | Def. | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| cdf  | VCC compressor frequency for hot gas defrost                    | 140  | 0   | 255 | hz  | M    | NO            |
| cMA  | Maximum VCC compressor rotation frequency                       | 150  | 0   | 250 | hz  | M    | NO            |
| cMf  | Maximum VCC compressor control frequency                        | 100  | 0   | 255 | hz  | M    | NO            |
| cMi  | VCC compressor switch-off frequency                             | 30   | 0   | 250 | hz  | M    | NO            |
| cnf  | Minimum VCC compressor control frequency                        | 100  | 0   | 255 | hz  | M    | NO            |
| cuF  | Conversion factor from frequency (Hz) to compressor speed (rpm) | 30   | 0   | 999 | -   | M    | NO            |
| cSc  | Soft start frequency                                            | 53   | 0   | 255 | hz  | M    | NO            |
| cSt  | Soft start time                                                 | 5    | 0   | 999 | s   | M    | NO            |

Each VCC model works between two operating limit frequencies, the switch-off frequency and the maximum rotation frequency. The iJF controller uses the following preset values:

- cMi = switch-off frequency = 30 Hz (thermostat present signal, but VCC is off, 0 rpm)
- cMA = maximum rotation frequency = 150 Hz (4500 rpm)

For VCCs that use values other than those shown previously, see "Advanced VCC configuration".

To adapt the cooling capacity of the VCC to the actual needs of the application, set the following parameters:

- cnf = minimum control frequency; preset value = 52 Hz (1560 rpm);
- cMf = maximum control frequency; preset value = 100 Hz (3000 rpm).

During normal control, when the conditions require the VCC to restart, the compressor runs at the soft-start frequency for the soft-start time (a few seconds). To adapt this frequency to the VCC oil recovery specifications, set the following parameters:

- cSc = soft-start frequency; preset value = 53 Hz (1590 rpm);
- cSt = soft-start time; preset value = 5 s.

When defrosting, if set in hot gas mode, the compressor runs at a fixed frequency, defined by the following parameter:

- cdf = hot gas defrost frequency; preset value = 140 Hz (4200 rpm).

### 6.14.4 VCC compressor control

The VCC compressor speed is controlled using a PID algorithm. The compressor remains off until the control temperature exceeds the value  $St + rd$ , at which point the compressor starts at the soft-start frequency cSc. After the soft-start time cSt, the PID algorithm manages the compressor speed within the operating range defined by cnf and cMf.

| Par. | Description                   | Def. | Min | Max | UOM | User | User terminal |
|------|-------------------------------|------|-----|-----|-----|------|---------------|
| cct  | VCC compressor off time       | 1    | 0   | 250 | min | M    | NO            |
| cdt  | PID control derivative term   | 1    | 0   | 255 | s   | M    | NO            |
| cPr  | PID control proportional term | 2    | 0   | 800 | -   | M    | NO            |
| ctl  | PID control integral term     | 120  | 0   | 999 | s   | M    | NO            |

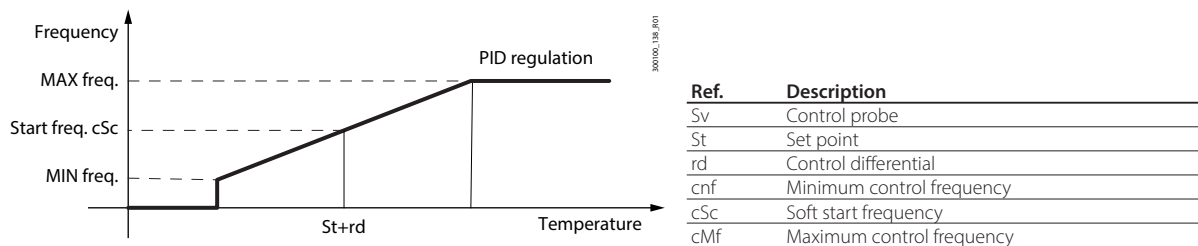


Fig. 6.w

The PID control algorithm can be adapted to the needs of the application by setting the following parameters:

- cPr = PID control proportional term;
- cti = PID control integral term;
- cdt = PID control derivative term.

The preset values are suitable and safe for starting any application the first time. When making adaptations, it is recommended to modify one parameter at a time and check the behaviour of the application in a controlled environment.

If the compressor is on, the controller switches it off when the temperature read by the control probe Sv reaches the low temperature alarm threshold or the set point St for a time equal to cct:

- if cct is set to 0, the compressor stops immediately when Sv = St.
- if cct is set to 255, the compressor never stops.

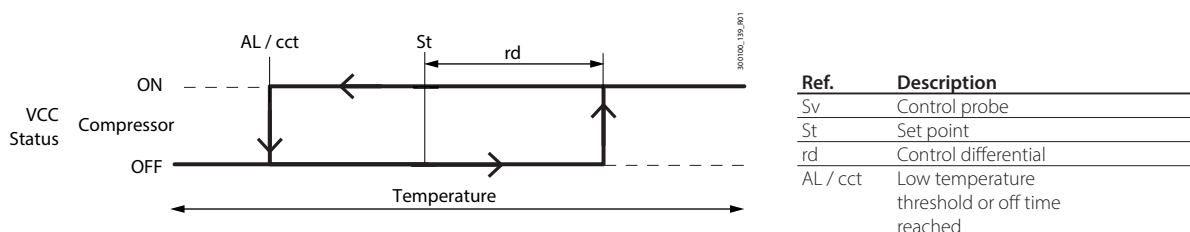


Fig. 6.x

To protect the refrigerated products, management of the two alarm thresholds overlaps normal control:

- AL = low temperature alarm threshold; when the temperature read by the control probe Sv is lower than the threshold AL, the controller immediately stops the compressor.
- AH = high temperature alarm threshold; when the temperature read by the control probe Sv is higher than the threshold AH, the controller activates the continuous cycle for the compressor (if cc > 0). See "Continuous cycle".

| Par. | Description                               | Def.      | Min       | Max     | UOM     | User | User terminal |
|------|-------------------------------------------|-----------|-----------|---------|---------|------|---------------|
| AH   | High temperature alarm threshold          | 0         | 0         | 555/999 | Δ °C/°F | U    | YES           |
| AHA  | Absolute high temperature alarm threshold | 537/999   | -100/-148 | 537/999 | °C/°F   | U    | YES           |
| AL   | Low temperature alarm threshold           | 0         | 0         | 200/360 | Δ °C/°F | U    | YES           |
| ALA  | Absolute low temperature alarm threshold  | -100/-148 | -100/-148 | 537/999 | °C/°F   | U    | YES           |

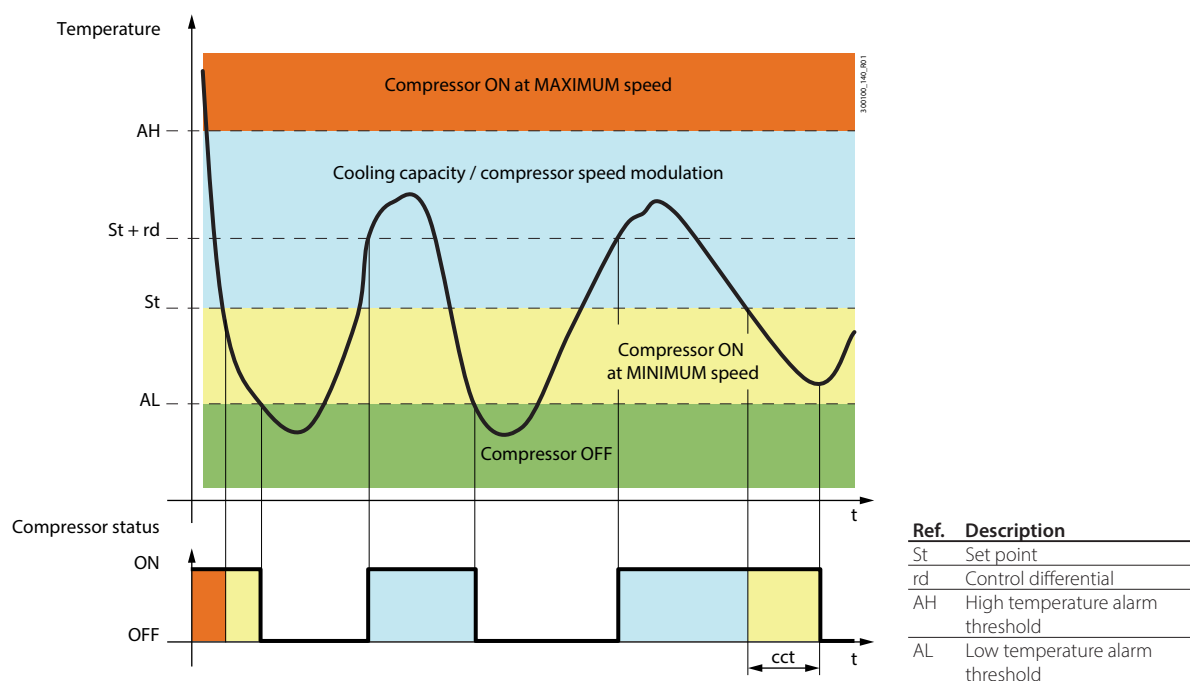


Fig. 6.y

### 6.14.5 Defrost with VCC compressor

When there is a hot gas defrost request, the variable speed compressor operates at the speed set by  $cdF$ . The defrost relay is delayed by the drain heater activation time  $dHA$ . At the end of the defrost, the compressor switches back to normal control and the drain heater remains on for the post-heating time  $dHE$ .

**Notice:** if at the end of the defrost the temperature is higher than the alarm threshold  $AH$  or  $AHA$ , and parameter  $cc > 0$ , the compressor is activated at the maximum frequency  $cMA$  to bring the temperature down in the shortest possible time.

The following diagram describes hot gas defrost with drain heater management.

| Par.  | Description                                    | Def. | Min   | Max | UOM | User | User terminal |
|-------|------------------------------------------------|------|-------|-----|-----|------|---------------|
| $cdF$ | VCC compressor frequency for hot gas defrost   | 140  | 0     | 255 | hz  | M    | NO            |
| $ddF$ | VCC compressor frequency for dripping          | 140  | $cMi$ | 255 | hz  | M    | NO            |
| $dHA$ | Drain heater activation time before defrosting | 3    | 1     | 120 | min | M    | NO            |
| $dHE$ | Drain heater activation time after defrosting  | 3    | 1     | 120 | min | M    | NO            |

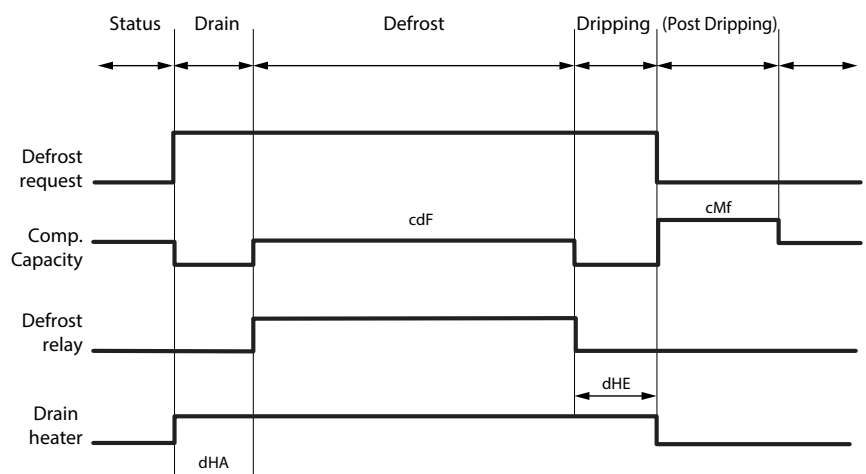


Fig. 6.z

### 6.14.6 Continuous cycle with VCC compressor

When the continuous cycle is activated, the compressor is switched on (if off, otherwise it stays on). The compressor runs at the speed set by parameter  $cMA$  until the end of the continuous cycle.

| Par.  | Description                               | Def. | Min | Max | UOM | User | User terminal |
|-------|-------------------------------------------|------|-----|-----|-----|------|---------------|
| $cMA$ | Maximum VCC compressor rotation frequency | 150  | 0   | 250 | hz  | M    | NO            |

### 6.14.7 Dead band and VCC compressor

If the reverse output is set for dead band control, the VCC compressor starts when  $St + rn/2 + rd$ , as described in "Dead band control". To activate the reverse output, the compressor must be off.

| Par.  | Description             | Def. | Min | Max | UOM | User | User terminal |
|-------|-------------------------|------|-----|-----|-----|------|---------------|
| $cct$ | VCC compressor off time | 1    | 0   | 255 | min | M    | NO            |

Note the following:

- The compressor stops when the control temperature  $Sv < St$  and the time  $cct$  elapses.
- If  $cct$  is set to 0, the compressor stops immediately when the temperature reaches the set point  $St$
- If  $cct$  is set to 255, the compressor never stops and the reverse output can never be activated.

### 6.14.8 On/Off compressor and VCC compressor

If the auxiliary compressor without rotation is configured, the first compressor to be activated is the VCC, as described in "VCC compressor control". The On/Off compressor will be activated second.

| Par. | Description                                    | Def. | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------|------|-----|-----|-----|------|---------------|
| $c1$ | Min time between consecutive compressor starts | 0    | 0   | 15  | min | M    | NO            |
| $c2$ | Min compressor OFF time                        | 0    | 0   | 15  | min | M    | NO            |
| $c3$ | Min compressor ON time                         | 0    | 0   | 15  | min | M    | NO            |

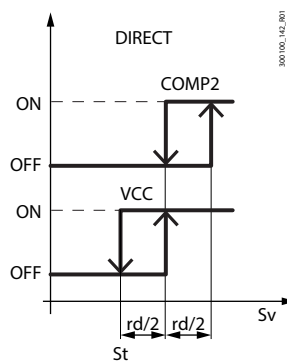


Fig. 6.aa

| Ref.  | Description                  |
|-------|------------------------------|
| Sv    | Control probe                |
| St    | Set point                    |
| rd    | Control differential         |
| VCC   | VCC compressor request       |
| COMP2 | Auxiliary compressor request |

The time set by parameter c11 is always observed between activation of the VCC compressor and activation of the On/Off compressor.

If the auxiliary compressor is configured as a parallel compressor, the auxiliary compressor is activated together with the VCC compressor, after the delay time c11.

## 6.15 Pump down

When the compressor stops, the pump down procedure can be performed to empty the evaporator. The pump down procedure can end by pressure or by time, as set by parameter c10.

| Par. | Description                                                                                                  | Def. | Min | Max | UOM | User | User terminal |
|------|--------------------------------------------------------------------------------------------------------------|------|-----|-----|-----|------|---------------|
| cPt  | Maximum pump down time (0 = pump down disabled)                                                              | s    | 0   | 900 | 0   | M    | NO            |
| c8   | Compressor start delay after opening the pump down valve                                                     | s    | 0   | 60  | 5   | M    | NO            |
| c9   | Restart during pump down:<br>0 = disabled; 1 = enabled.                                                      | -    | 0   | 1   | 1   | M    | NO            |
| c10  | Pump down by pressure or time:<br>0 = pressure; 1 = time.                                                    | 0    | 1   | 1   | -   | M    | NO            |
| Dlt  | Assign low pressure switch digital input:<br>0 = disabled; 1 = ID1; 2 = ID2; 3 = D1H; 4 = D2H                | -    | 0   | 4   | 0   | M    | NO            |
| DOn  | Assign liquid valve digital output:<br>0 = disabled;<br>1 = NO1; 2 = NO2; 3 = NO3; 4 = NO4; 5 = NO5; 6 = NO6 | -    | 0   | 6   | 0   | M    | NO            |

The pump down procedure can be activated if the liquid valve digital output is configured and parameter cPt > 0. When there is a request to stop the compressor, the liquid valve is closed until the low pressure switch is activated or the time cPt elapses, based on the setting of parameter c10.

If pump down is set to end by pressure and the pressure switch is not activated before the time cPt, the procedure is terminated when the time expires, and the Pump down ended after maximum time alarm Pd is generated.



**Notice:** for VCC compressors, during pump down the compressor is operated at the minimum frequency cnf.

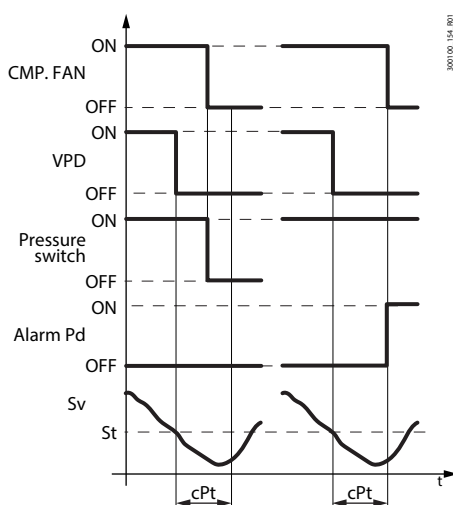


Fig. 6.ab

| Ref.            | Description                              |
|-----------------|------------------------------------------|
| St              | Set point                                |
| rd              | Control differential                     |
| Sv              | Control threshold                        |
| PRESSURE SWITCH | Low pressure switch                      |
| CMP, FAN        | Compressor request                       |
| VPD             | Liquid valve output                      |
| ALARM Pd        | Pump down ended after maximum time alarm |
| cPt             | Pump down time                           |

**Notice:** for VCC compressors, take care when setting parameter cct for stopping the compressor. To perform the pump down procedure, set cct = 0.

If during pump down the status of the low pressure switch changes again and restart during pump down is enabled by setting parameter c9 = 1, the procedure ends, the compressor restarts and a Restart in pump down alarm Ats is generated. Alarm Ats is reset when a pump down procedure is completed correctly.

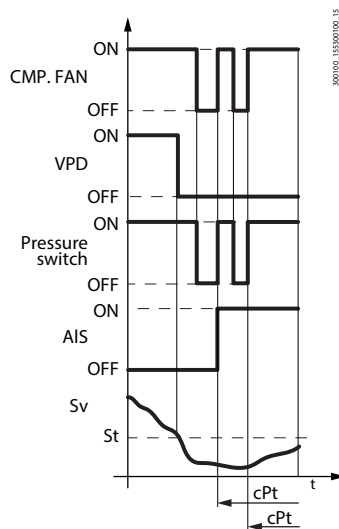


Fig. 6.ac

| Ref.            | Description                |
|-----------------|----------------------------|
| St              | Set point                  |
| rd              | Control differential       |
| Sv              | Control threshold          |
| PRESSURE SWITCH | Low pressure switch        |
| CMP, FAN        | Compressor request         |
| VPD             | Liquid valve output        |
| Ats             | Restart in pump down alarm |
| cPt             | Pump down time             |

When the compressor starts, the liquid valve is opened for the time set by parameter c8, to allow the pressure to equalise. If c8 = 0 pump down at power on is disabled.

## 6.16 Defrost

### Introduction

The iJF controller can manage different types of defrosts, based on the setting of parameter d0.

The defrost can end by temperature, in which case the defrost probe Sd must be installed, or by time. At the end of the defrost the dripping phase may begin (if dd>0), during which the compressor and the fans are off, followed by the post-dripping phase (if Fd>0), during which control resumes and the fans work based on the setting of parameter Fpd. The type of display on user terminal during the defrost can be selected by setting parameter d6.

| Code | Description                                                            | Def       | Min       | Max      | UOM   | User | User terminal                |
|------|------------------------------------------------------------------------|-----------|-----------|----------|-------|------|------------------------------|
| Dlc  | Assign enable defrost digital input - see DIA                          | 0         | 0         | 4        | -     | S    | NO                           |
| Dld  | Assign start defrost digital input - see DIA                           | 0         | 0         | 4        | -     | S    | NO                           |
| /d1  | Assign end defrost probe:                                              | 2         | 1         | 16       | -     | M    | YES                          |
|      | 1 outlet temperature (Sm)                                              | 9         |           |          |       |      | ambient temperature          |
|      | 2 defrost temperature (Sd)                                             | 10        |           |          |       |      | not used                     |
|      | 3 intake temperature (Sr)                                              | 11        |           |          |       |      | glass temperature            |
|      | 4 not used                                                             | 12        |           |          |       |      | not used                     |
|      | 5 not used                                                             | 13        |           |          |       |      | condensing temperature       |
|      | 6 auxiliary evaporator                                                 | 14        |           |          |       |      | humidity                     |
|      | defrost temperature (Sd2)                                              | 15        |           |          |       |      | frost protection temperature |
|      | 7 auxiliary probe 1                                                    | 16        |           |          |       |      | product temperature          |
|      | 8 auxiliary probe 2                                                    |           |           |          |       |      |                              |
| /d2  | Assign auxiliary evaporator end defrost probe - see /d1                | 6         | 1         | 16       | -     | M    | YES                          |
| d0   | Type of defrost                                                        | 0         | 0         | 4        | -     | M    | NO                           |
|      | 0 heater by temperature                                                | 3         |           |          |       |      | hot gas by time              |
|      | 1 hot gas by temperature                                               | 4         |           |          |       |      | heater by time               |
|      | 2 heater by time                                                       |           |           |          |       |      | with temperature control     |
| dt1  | End defrost temperature (read by Sd)                                   | 4/ 39.2   | -50/ -58  | 50/122   | °C/°F | S    | YES                          |
| dt2  | Auxiliary evaporator end defrost temperature (read by Sd2)             | 4/ 39.2   | -50/ -58  | 50/122   | °C/°F | S    | YES                          |
| dP1  | Maximum defrost duration                                               | 45        | 1         | 240      | min   | S    | YES                          |
| dP2  | Max auxiliary evaporator defrost duration                              | 45        | 1         | 240      | min   | S    | YES                          |
| d6   | Display on terminals during defrosts:                                  | 1         | 0         | 2        | -     | S    | YES                          |
|      | 0 = temperature alternating with 'dEF'; 1 = freeze display; 2 = 'dEF'. |           |           |          |       |      |                              |
| dd   | Dripping time after defrost (fans off)                                 | 2         | 0         | 15       | min   | M    | NO                           |
|      | 0 = no dripping                                                        |           |           |          |       |      |                              |
| d7   | Skip defrost: 0 = Disabled - 1 = Enabled                               | 0         | 0         | 1        | -     | M    | NO                           |
| d8   | Bypass high temperature alarm time after defrost                       | 1         | 1         | 240      | hours | S    | SI                           |
| d10  | Compressor on time for defrost running time mode                       | 0         | 0         | 240      | min   | M    | NO                           |
|      | 0 = function disabled                                                  |           |           |          |       |      |                              |
| d11  | Defrost temperature threshold in running time mode                     | -50 / -58 | -50 / -58 | 50 / 122 | °C/°F | M    | NO                           |
| d15  | Start defrost delay                                                    | 0         | 0         | 240      | min   | M    | NO                           |

| Code | Description                                                               | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| dn   | Nominal defrost duration for skip defrost                                 | 75  | 0   | 100 | %   | M    | NO            |
| dnM  | Maximum defrost duration for skip defrost                                 | 45  | 0   | 240 | min | M    | NO            |
| F2   | Evaporator fans with compressor off:<br>0 = see F0; 1 = always off        | 1   | 0   | 1   | -   | M    | YES           |
| F3   | Evaporator fans during defrosts: 0 = on - 1 = off                         | 1   | 0   | 1   | -   | M    | NO            |
| Fd   | Post-dripping time after defrost<br>(fans off with control active)        | 2   | 0   | 15  | min | M    | NO            |
| Fpd  | Evaporator fans during post-dripping<br>0/1 = On/Off                      | 1   | 0   | 1   | -   | M    | NO            |
| Fsh  | Modulating evaporator fan speed in dehumidification                       | 40  | 0   | 100 | %   | S    | NO            |
| A3   | Defrost terminated after maximum time signal:<br>0 = Disabled 1 = Enabled | 0   | 0   | 0   | -   | S    | YES           |

Below is the trend of the defrost output based on the setting of parameter d0.

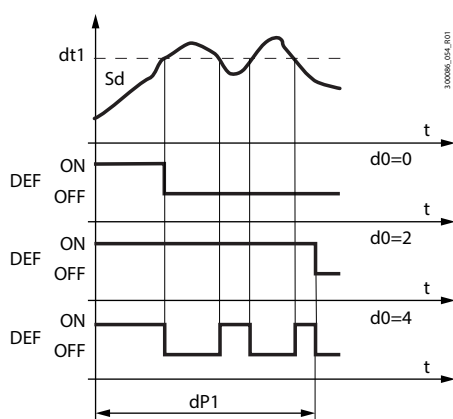


Fig. 6.ad

| Ref. | Description              |
|------|--------------------------|
| t    | time                     |
| dt1  | End defrost temperature  |
| dP1  | Maximum defrost duration |
| Sd   | Defrost probe            |
| DEF  | Defrost                  |
| d0   | Type of defrost          |

The heater defrost by time with temperature control (d0=4) activates the defrost output only if the evaporator temperature (Sd) is less than the value of parameter dt1, and ends after the time defined by dP1. This function is useful for energy saving and to prevent excessive temperatures on the evaporator.

Parameters td1 to td8 can be used to set up to 8 defrost events based on the controller's clock (RTC), on models where featured. To set parameters td1 to td8, use the supervisor, the configuration tool or the Applica app. See "Configuration tools".

| Code        | Description                                                                               | Def.     | Min      | Max      | UOM   | User | User terminal |
|-------------|-------------------------------------------------------------------------------------------|----------|----------|----------|-------|------|---------------|
| td1..8-d    | Defrost 1 to 8 - day<br>0 event disabled<br>1 to 7 Monday to Sunday<br>8 Monday to Friday | 0        | 0        | 11       | -     | S    | NO            |
| td1..8-hh   | Defrost 1 to 8 - hours                                                                    | 0        | 0        | 23       | hours | S    | NO            |
| td1..8-mm   | Defrost 1 to 8 - minutes                                                                  | 0        | 0        | 59       | min   | S    | NO            |
| td1..8-time | Defrost 1 to 8 - data type for Applica                                                    | 00:00:00 | 00:00:00 | 23:59:59 | -     | S    | NO            |

### Input and output settings

| Code | Description                                                           | Def.                     | Min     | Max   | UOM     | User | User terminal |
|------|-----------------------------------------------------------------------|--------------------------|---------|-------|---------|------|---------------|
| /Fb  | Assign defrost temperature probe (Sd) - see /FA                       | 0                        | 0       | 7     | -       | M    | NO            |
| /cb  | Defrost temperature probe (Sd) calibration                            | 0                        | -20/-36 | 20/36 | Δ °C/°F | S    | NO            |
| /FF  | Assign auxiliary evaporator defrost temperature probe (Sd2) - see /FA | 0                        | 0       | 7     | -       | M    | NO            |
| /cF  | Auxiliary evaporator defrost temperature probe (Sd2) calibration      | 0                        | -20/-36 | 20/36 | Δ °C/°F | S    | NO            |
| DOG  | Assign defrost digital output - see DOA                               | 2 (small) /<br>6 (large) | 0       | 6     | -       | M    | NO            |
| rOG  | Defrost digital output logic - see rOA                                | 0                        | 0       | 1     | -       | S    | NO            |
| DOH  | Assign auxiliary evaporator defrost digital output - see DOA          | 0                        | 0       | 6     | -       | M    | NO            |
| rOH  | Auxiliary evaporator defrost digital output logic - see rOA           | 0                        | 0       | 1     | -       | S    | NO            |

## Start defrost

The events that activate a defrost are shown in the table.

| Event                             | Defrosting                                                              |
|-----------------------------------|-------------------------------------------------------------------------|
| Interval between defrosts expired | Dependent on enabling (dI > 0)                                          |
| Time band                         | Dependent on enabling (time bands set) and presence of the RTC          |
| Compressor running time           | Dependent on enabling (d10 > 0)                                         |
| Start-up                          | Dependent on enabling (Sd < d11)                                        |
| At each compressor start          | Dependent on enabling (Sd < d11)                                        |
| Digital input                     | Dependent on enabling (DId > 0)                                         |
| Supervision                       | Always                                                                  |
| Keypad/Direct function            | Dependent on the presence of the button/enabling of the direct function |
| App/Commissioning tool            | Always                                                                  |
| Opening the door                  | Dependent on enabling (dCL > 0)                                         |

Tab. 6.k

## Start defrost

The iJF controller can manage the following types of defrosts, based on the setting of parameter d0:

1. heater (placed near the evaporator) by temperature;
2. hot gas by temperature;
3. heater by time;
4. hot gas by time;
5. heater by time with temperature control.

The details of each type of defrost are illustrated in the following paragraphs.

If defrost by temperature is selected, it is performed only if the value read by the evaporation temperature probe Sd is lower than the defrost end value (dt1 and dt2) or has an error. This also applies when there are two evaporators.

For heater defrosts:

- first the time d15 elapses;
- the compressor stops (performing pump down, if enabled);
- the main and secondary evaporator defrost relays are activated to switch on the heaters.

During hot gas defrost:

- first the time d15 elapses;
- then the compressor stops;
- the time dHG/2 elapses;
- the main and secondary evaporator defrost relays are activated to activate the hot gas valve.
- the time dHG/2 elapses;
- the compressor starts;



**Notice:** if parameter dHG has a value other than zero, pump down is not performed during hot gas defrost.



**Notice:** if the control temperature is lower than the low temperature alarm threshold (parameter AL or ALA), the compressor cannot start and therefore the hot gas defrost will not be performed. If the temperature falls below the alarm threshold during defrosting, the compressor will stop immediately.

## End defrost

The defrost ends by temperature when the values set by parameters dt1 and dt2 are reached, or by time, when the values dP1 and dP2 are reached, based on the setting of parameter d0. If defrost by temperature is selected, the defrost probe Sd needs to be installed; the defrost ends when the probe Sd measures a value greater than the setting of dt1 or by timeout after the maximum time dP1 has elapsed; in this case, based on the setting of parameter A3, Ed1 is displayed.

If set to end by time, the defrost ends after the time dP1.

The heater defrost by time with temperature control (d0=4) activates the defrost output only if the evaporator temperature Sd is less than the value of parameter dt1, and ends after the time defined by dP1. This function is useful for energy saving and to avoid excessively heating the evaporator.

For units with two evaporators, the defrost ends when both evaporators have reached the end defrost condition. If one evaporator ends defrosting (by time or by temperature) before the other, the corresponding defrost relay is de-energised, while the compressor remains in the status required by the defrost.

For hot gas defrost, when the defrost ends:

- the compressor stops;
- the time dHG/2 elapses;
- the main and secondary evaporator defrost relays are deactivated to deactivate the hot gas valve.
- the time dHG/2 elapses;
- the compressor starts;

At the end of the defrost, the controller can activate the dripping phase (if dd>0), during which the compressor and the fans are off, followed by the post-dripping phase (if Fd>0), during which control resumes with the fans off. If the defrost ends prematurely (e.g. interrupted by keypad/BMS), the dripping and post-dripping phases are skipped.

The type of display on the user terminal during defrosting can be selected by setting parameter d6.



**Notice:** high temperature alarms can be disabled after defrosting by setting par. d8.

### 6.16.1 Heater defrost (d0 = 0, 2, 4): duty cycle

The duty cycle refers to the default values of parameters F2 and F3.

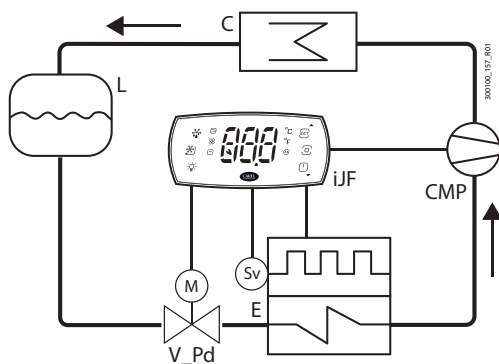


Fig. 6.ae

| Ref.      | Description   |
|-----------|---------------|
| t         | Time          |
| FAN       | Fan           |
| DEF       | Defrost       |
| DRIP      | Dripping      |
| CMP       | Compressor    |
| POST DRIP | Post-dripping |
| REFRIG    | Control       |

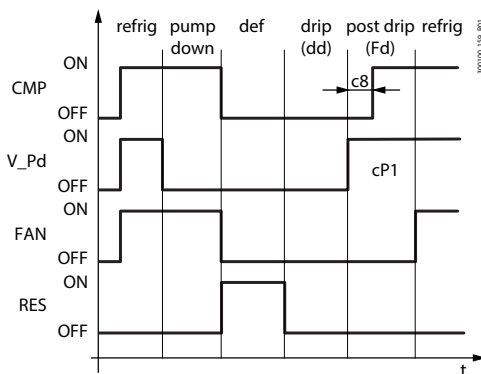


Fig. 6.af

| Ref.    | Description     |
|---------|-----------------|
| RES     | Defrost heater  |
| V_Pd    | Pump down valve |
| C       | Condenser       |
| E       | Evaporator      |
| L       | Liquid receiver |
| HOT GAS | Hot gas valve   |

### 6.16.2 Hot gas defrost (d0 = 1, 3): duty cycle

The duty cycle refers to the default values of parameters F2 and F3.

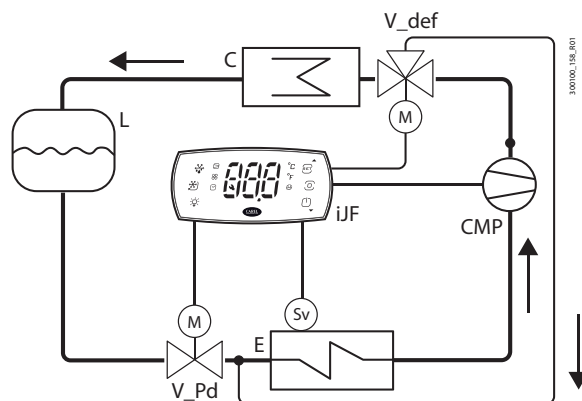


Fig. 6.ag

| Ref.      | Description   |
|-----------|---------------|
| t         | Time          |
| FAN       | Fan           |
| DEF       | Defrost       |
| DRIP      | Dripping      |
| CMP       | Compressor    |
| POST DRIP | Post-dripping |

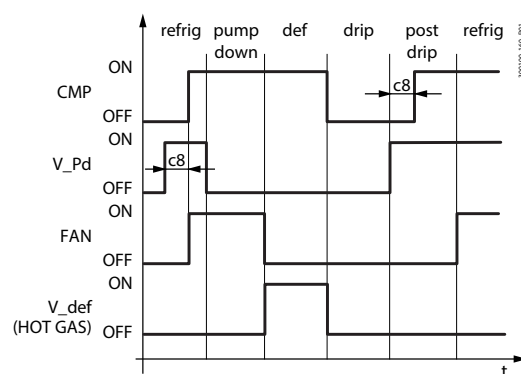


Fig. 6.ah

| Ref.    | Description     |
|---------|-----------------|
| REFRIG  | Control         |
| HOT GAS | Hot gas valve   |
| V_Pd    | Pump down valve |
| C       | Condenser       |
| E       | Evaporator      |
| L       | Liquid receiver |



**Notice:** the defrost output (DEF) is used to control the hot gas valve V\_def.

Pump down is the period in which the evaporator is emptied of liquid refrigerant, and can be disabled by setting cPt=0 (see "Pump down phase duration"). Operation of the fan during the pump down phase depends on parameters F2 and F3. During the dripping phase the fan is always off, while during the post-dripping phase operation depends on the setting of parameter Fpd.

| Code | Description                                                           | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| dd   | Dripping time after defrost (fans off)<br>0 = no dripping             | 2   | 0   | 15  | min | M    | NO            |
| cPt  | Pump down phase duration 0 = pump down disabled                       | 0   | 0   | 900 | s   | M    | NO            |
| F2   | Evaporator fans with compressor off:<br>0 = see F0; 1 = always off    | 1   | 0   | 1   | -   | M    | NO            |
| F3   | Evaporator fans during defrosts: 0 = on - 1 = off                     | 1   | 0   | 1   | -   | M    | NO            |
| Fd   | Post-dripping time after defrosting<br>(fans off with control active) | 2   | 0   | 15  | min | M    | NO            |

### 6.16.3 Advanced defrosting features

Maximum interval between consecutive defrosts (par. d1)

| Code | Description                                   | Def | Min | Max | UOM   | User | User terminal |
|------|-----------------------------------------------|-----|-----|-----|-------|------|---------------|
| d1   | Maximum interval between consecutive defrosts | 8   | 0   | 240 | hours | S    | YES           |

Tab. 6.i

Parameter d1 is a safety parameter used to perform cyclical defrosts every "d1" hours, event without the real time clock (RTC). At the start of each defrost, irrespective of the duration, an interval starts being counted. If this interval exceeds d1 without a defrost being performed, one is started automatically. The count is always active even if the controller is OFF.

#### Example.

If the defrost programmed by time td3 is not carried out due to a fault in the RTC, a new defrost starts after the safety time d1.

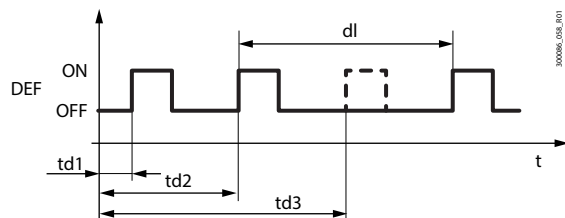


Fig. 6.ai



#### Notice:

- if the interval d1 expires when the controller is OFF, a defrost will be performed when it is switched ON;
- to ensure correct defrosting, the interval between defrosts must be greater than the maximum defrost duration, increased by the dripping and post-dripping times.



**Notice:** to avoid unwanted defrosts controlled by the timer, set parameter d1=0 (defrosts from keypad, RTC, compressor running time or digital input only).

| Ref.      | Description                                   |
|-----------|-----------------------------------------------|
| d1        | Maximum interval between consecutive defrosts |
| td1...td3 | Scheduled defrosts                            |
| t         | time                                          |
| DEF       | Defrost                                       |

#### Running time defrost (par. d10, d11)

Running time is a special function that determines when the refrigeration unit needs defrosting. In particular, it is assumed that if the compressor is on for a certain time (d10) and the evaporator temperature measured by probe Sd remains continuously below a certain set threshold (d11), the evaporator may be frozen and a defrost is activated. The time is reset if the temperature returns above the threshold.

| Code | Description                                                               | Def      | Min      | Max    | UOM   | User | User terminal |
|------|---------------------------------------------------------------------------|----------|----------|--------|-------|------|---------------|
| dt1  | End defrost temperature (read by Sd)                                      | 4/ 39.2  | -50 /-58 | 50/122 | °C/°F | S    | YES           |
| dt2  | Auxiliary evaporator end defrost temperature (read by Sd2)                | 4/ 39.2  | -50 /-58 | 50/122 | °C/°F | S    | YES           |
| d10  | Compressor on time for defrost running time mode<br>0 = function disabled | 0        | 0        | 240    | min   | M    | NO            |
| d11  | Defrost temperature threshold in running time mode                        | -50 /-58 | -50 /-58 | 50/122 | °C/°F | M    | NO            |

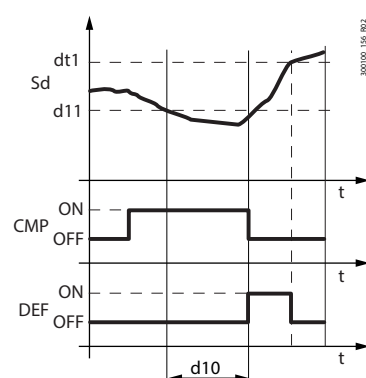


Fig. 6.aj

| Ref. | Description   |
|------|---------------|
| Sd   | Defrost probe |
| t    | time          |
| DEF  | Defrost       |
| CMP  | Compressor    |

#### Defrost at each compressor start

With defrosts controlled by temperature, if the evaporator temperature is lower than d11 when there is a cooling request, preventive defrosting is required before starting the compressor. This avoids starting the compressor and then stopping immediately afterwards, thus reducing the number of compressor starts.



**Notice:** this condition is not verified the first time the compressor is started after switching the unit on.

### Defrost after opening the door

Opening the door allows humid air into the showcase, which can condense and freeze on the evaporator. Consequently, the controller records the number of door openings that occur when the evaporation temperature is below zero. When the door is opened a number of times equal to the setting of DoL, a defrost is activated. The controller checks the defrost duration and adjusts the number of door openings that must be reached before the next defrost.

| Par. | Description                                                | Def | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| dCH  | Defrost after opening the door: maximum number of openings | 50  | dCL | 99  | -   | M    | NO            |
| dCL  | Defrost after opening the door: minimum number of openings | 0   | 0   | dCH | -   | M    | NO            |
| dPH  | Defrost after opening the door: maximum defrost duration   | 15  | dPL | dP1 | min | M    | NO            |
| dPL  | Defrost after opening the door: minimum defrost duration   | 5   | 0   | dPH | min | M    | NO            |

If the defrost duration:

- is less than dPL, the number of openings is increased by 10;
- is more than dPH, the number of openings is decreased by 5;
- is between dPL and dPH, the number of openings remains unchanged.

In any case, the number of door openings always remains between the minimum and maximum limits dCL and dCH.



**Notice:** the door opening counter is reset every time a defrost is performed.

### Skip defrost (par. d7, dn)

If defrosts ending by temperature are set, the skip defrost function evaluates whether the defrost duration is less than a certain threshold dn1 (dn2) and based on this establishes whether or not the following defrosts can be skipped.

| Code | Description                               | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------|-----|-----|-----|-----|------|---------------|
| dP1  | Maximum defrost duration                  | 45  | 1   | 240 | min | S    | YES           |
| dP2  | Max auxiliary evaporator defrost duration | 45  | 1   | 240 | min | S    | YES           |
| d7   | Skip defrost: 0 = Disabled - 1 = Enabled  | 0   | 0   | 1   | -   | M    | NO            |
| dn   | Nominal defrost duration for skip defrost | 75  | 0   | 100 | %   | M    | NO            |

Thresholds dn1 (evaporator 1) and dn2 (evaporator 2) are calculated based on the parameter settings:

$$dn1 = \frac{dn}{100} \cdot dP1 \quad dn2 = \frac{dn}{100} \cdot dP2$$

The algorithm keeps a counter of the defrosts to be skipped:

- when switching the controller on, the defrost is performed 7 times without increasing the counter, from the eighth on the counter is updated;
- if the defrost ends in a time less than dn1 (dn2), the counter of the defrosts to be skipped is increased by 1;
- when the counter reaches 1, the next defrost is skipped; if the next defrost ends in a time less than dn1 (dn2), the counter is increased to 2 and 2 defrosts are skipped; if also the next defrost ends in a time less than dn1 (dn2), the counter is increased to 3 and 3 defrosts are skipped, the counter is reset and the algorithm restarts (see table).

| Defrost sequence | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 |
|------------------|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|
| "short defrost"? | - | - | - | - | - | - | - | Y | - | Y  | -  | -  | Y  | -  | -  | -  | Y  | -  | Y  | -  | -  | Y  |
| Counted          | - | - | - | - | - | - | - | 1 | - | 2  | -  | -  | 3  | -  | -  | -  | 1  | -  | 2  | -  | -  | 3  |
| Defrost Skipped  | N | N | N | N | N | N | N | N | Y | N  | Y  | Y  | N  | Y  | Y  | Y  | N  | Y  | N  | Y  | Y  | N  |

Algorithm restart



**Notice:** whenever a defrost ends after dn1 (dn2), the next defrost is performed and the counter is reset.



**Nota:** the algorithm is applied only in case of defrosts programmed by scheduler or cyclic defrosts (par. dI), manual defrosts or defrosts started from the supervisory system are always performed and don't have effects on the counter.

### Auxiliary evaporator defrost

Up to two defrost probes and up to two evaporator outputs can be configured, activating a heater on the main evaporator and another on the auxiliary evaporator. The controller recognises the basic configuration shown in the following table.

| Defrost outputs | Evaporator probes | Start defrost                                                                                                       |
|-----------------|-------------------|---------------------------------------------------------------------------------------------------------------------|
| 1               | 1                 | Normal                                                                                                              |
| 2               | 1                 | Defrosting managed on two outputs with reference to the same evaporator probe                                       |
| 1               | 2                 | Defrosting managed on the same output with reference to the two evaporator probes (minimum evaporation temperature) |
| 2               | 2                 | Defrosting managed independently on the two evaporator circuits                                                     |

Tab. 6.m

## 6.16.4 Other defrost parameters

### End defrost signal by timeout (par. A3)

| Code | Description                                                | Def | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| A3   | End defrost signal by timeout<br>0 = disabled; 1 = enabled | 0   | 0   | 1   | -   | M    | NO            |

### Defrost at power on (par. d4)

| Code | Description                                             | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| d4   | Enable defrost at power on:<br>0 = Disabled 1 = Enabled | 0   | 0   | 1   | -   | M    | NO            |

The defrost request at power on has priority over the control request and activation of the continuous cycle.

### Defrost delay at power on (parameter d5)

| Code | Description                                                   | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| d5   | Defrost delay at power on or after command from digital input | 0   | 0   | 240 | min | M    | NO            |

Also active when d4=0. If the digital input is set to enable or start a defrost from an external contact, parameter d5 represents the delay between when the defrost is enabled or requested, and when it effectively starts.

### Dripping time after defrost (par. dd)

| Code | Description                                   | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------|-----|-----|-----|-----|------|---------------|
| dd   | Dripping time after defrost (0 = no dripping) | 2   | 0   | 15  | min | M    | NO            |

This parameter is used to stop the compressor and the evaporator fans following a defrost so as to allow the evaporator to drip. The value of the parameter indicates the off time in minutes. If dd=0 no dripping time is enabled, and at the end of the defrost control resumes immediately, without stopping the compressor and the fan, if active.

### Pump down phase duration (par. cPt)

| Code | Description                                     | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------|-----|-----|-----|-----|------|---------------|
| cPt  | Pump down phase duration 0 = pump down disabled | 0   | 0   | 999 | s   | M    | NO            |

The pump down phase is the period in which the evaporator is emptied of liquid refrigerant. Parameter cPt defines the duration of the pump down phase whenever control stops.

### Defrost priority over compressor protection (par. d9)

| Code | Description                                                                                                                                                                                                                                               | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| d9   | Defrost priority over compressor protection times:<br>0 = the compressor protection times are observed;<br>d9 = 1: the compressor protection times are ignored, therefore defrosting starts without waiting for the compressor protection times to elapse | 0   | 0   | 1   | -   | M    | NO            |

Parameter d9 is used to set the priority of defrosts over the compressor times c1, c2, c3 when there is a defrost request.

### Defrost priority over continuous cycle (par. c7)

| Code | Description                                                                                                | Def | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| c7   | Defrost priority over continuous cycle:<br>0 = continuous cycle has priority;<br>1 = defrost has priority. | 0   | 0   | 1   | -   | M    | NO            |

Parameter c7 is used to set the priority of defrosts over the continuous cycle:

- if c7 = 0, the continuous cycle has priority over the defrost requests;
- if c7 = 1, if the continuous cycle is in progress and there is a defrost request, the continuous cycle ends and the defrost starts.

### Defrost interval unit of measure (par. dC)

| Code | Description                                                                                                  | Def | Min | Max | UOM | User | User terminal |
|------|--------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| dC   | Time base for defrosts<br>0: dI in hours, dP1 and dP2 in minutes<br>1: dI in minutes, dP1 and dP2 in seconds | 0   | 0   | 1   | -   | S    | NO            |

Parameter dC is used to change the unit of measure (hours/minutes or minutes/seconds) used to count the times for parameters dI (defrost interval, hours or minutes), dP1 and dP2 (defrost duration). This feature is particularly useful when configuring the defrosts.

## 6.17 Evaporator fans

The evaporator fans can be fixed speed (On/Off) or variable speed (modulating 0-10 V).



**Notice:** variable speed fans are only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

To assign the On/Off or modulating output, use the parameters shown in the table.

| Par. | Description                                                                                                                             | Def                     | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------------------------------------------------------------------------|-------------------------|-----|-----|-----|------|---------------|
| DOI  | Assign evaporator fan digital output - see DOA                                                                                          | 3 (small)/<br>4 (large) | 0   | 6   | -   | S    | NO            |
| rOI  | Evaporator fan digital output logic - see rOA                                                                                           | 0                       | 0   | 1   | -   | S    | NO            |
| /AA  | Assign analogue output for modulating evaporator fan<br>0 = not configured;<br>1 = analogue output 1 (Y1)<br>2 = analogue output 2 (Y2) | 0                       | 0   | 2   | -   | S    | NO            |
| /P5  | Configuration of analogue output Y1:<br>7 = 0..10V; 8 = PWM                                                                             | 8                       | 7   | 8   | -   | S    | NO            |
| /P6  | Configuration of analogue output Y2:<br>7 = 0-10 V; 8 = PWM                                                                             | 8                       | 7   | 8   | -   | S    | NO            |



**Notice:** if an analogue output is assigned to the variable-speed evaporator fan function and the evaporator fan is also assigned to a relay output, both outputs will be active at the same time; if the speed is greater than 0, the relay will remain active (closed):

- if speed (Y1) > 0 → "FAN" relay ON (NO\* closed)
- if speed (Y1) = 0 → "FAN" relay OFF (NO\* open)

### 6.17.1 Fixed-speed evaporator fans

To activate the algorithm, simply assign a relay output to the evaporator fan function (on some models this is already assigned by default, see the product label). In addition, the defrost probe needs to be configured if this is required for control. See "Inputs and outputs". The parameters used to manage fixed-speed fans are shown below (see the connection diagram).

| Par. | Description                                                                                                                                                   | Def    | Min     | Max    | UOM   | User | User terminal |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|---------|--------|-------|------|---------------|
| F0   | Evaporator fan management:<br>0 = always on;<br>1 = activation based on Sd - Sv;<br>2 = activation based on Sd;<br>3 = activation based on Sv.                | 0      | 0       | 3      | -     | S    | NO            |
| F1   | Evaporator fan activation threshold (only if F0 = 1, 2, 3)                                                                                                    | 5/ 41  | -50/-58 | 50/122 | °C/°F | S    | NO            |
| F2   | Evaporator fans with compressor off:<br>0 = see F0;<br>1 = always off with compressor off;<br>2 = on for anti-stratification;<br>3 = on for humidity control. | 1      | 0       | 3      | -     | S    | NO            |
| Frd  | Fan activation differential (including variable speed)                                                                                                        | 2/ 3.6 | 0.1/0.2 | 20/ 36 | °C/°F | S    | YES           |

iJF controller manages the evaporator fans as follows:

- F0 = 0 always on;
- F0 = 1 on/off based on difference between probes Sd and Sv;
- F0 = 2 on/off based on defrost probe Sd;
- F0 = 3 on/off based control probe Sv.

If parameter F0 = 0, the evaporator fans are on when the compressor is on (based on the setting of parameter F2), regardless of the defrost or control temperature.

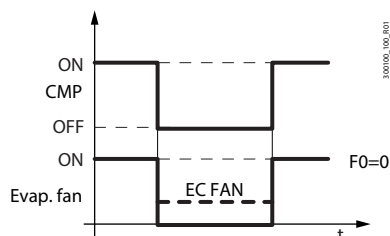
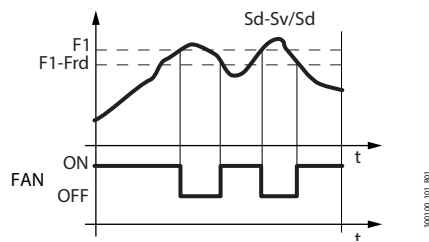


Fig. 6.ak

If parameter F0=1 or 2, the evaporator fans are on/off based on the difference between the defrost and control probe temperatures, or based on the defrost probe reading. The fans switch on when the control variable falls below the threshold F1 value minus the control differential Frd, and switch off when the control variable rises above the threshold F1.

If parameter F0=3, the evaporator fans are on/off based on the control probe reading. The fans switch on when the control variable falls below the threshold St minus the control differential rd, and switch off when the control variable rises above the threshold St.


**Fig. 6.al**

| Ref. | Description                           |
|------|---------------------------------------|
| Sd   | Defrost probe                         |
| Sv   | Control probe                         |
| F1   | Fan activation threshold (St if F0=3) |
| Frd  | Differential (rd if F0=3)             |
| t    | time                                  |
| FAN  | Evaporator fans                       |

The fans can be switched off in the following situations:

- when the compressor is off (parameter F2);
- during defrosts (parameter F3).

The evaporator fans can be forced on during control (parameter F2) and during defrosts (parameter F3).

### Evaporator fans during defrosts


When defrosting (parameter F3), the fans can be forced off. During the dripping time (parameter dd > 0) the fans are always off, while during the post-dripping time (parameter Fd > 0), the status of the fans can be defined by setting parameter Fpd. This is useful to allow the evaporator to return to temperature after defrosting, thus avoiding blowing warm hot and moist air into the refrigerated environment.

| Par. | Description                                                           | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| dd   | Dripping time after defrost (0 = no dripping)                         | 2   | 0   | 15  | min | M    | NO            |
| F3   | Evaporator fans during defrosts:<br>0 = on; 1 = off.                  | 1   | 0   | 1   | -   | S    | NO            |
| Fd   | Post-dripping time after defrosting<br>(fans off with control active) | 2   | 0   | 15  | min | M    | NO            |
| Fpd  | Evaporator fans during post-dripping:<br>0 = on; 1 = off.             | 1   | 0   | 1   | -   | M    | NO            |

### Anti-stratification

Set parameter F2 = 2 to prevent stratification of the air inside the showcase when the compressor is off. The fan performs a series of ON and OFF cycles with settable times that differ depending on the time (day or night). When the compressor is switched off, the fan remains ON.


| Par. | Description                                                                                                                                                   | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| F2   | Evaporator fans with compressor off:<br>0 = see F0;<br>1 = always off with compressor off;<br>2 = on for anti-stratification;<br>3 = on for humidity control. | 1   | 0   | 3   | -   | S    | NO            |
| Fd0  | Evaporator fan ON time for anti-stratification during the day                                                                                                 | 5   | 1   | 100 | min | M    | NO            |
| FdF  | Evaporator fan OFF time for anti-stratification during the day (0 = always ON during the day)                                                                 | 10  | 0   | 100 | min | M    | NO            |
| Fn0  | Evaporator fan ON time for anti-stratification at night                                                                                                       | 5   | 1   | 100 | min | M    | NO            |
| FnF  | Evaporator fan OFF time for anti-stratification at night (0 = always ON at night)                                                                             | 20  | 0   | 100 | min | M    | NO            |

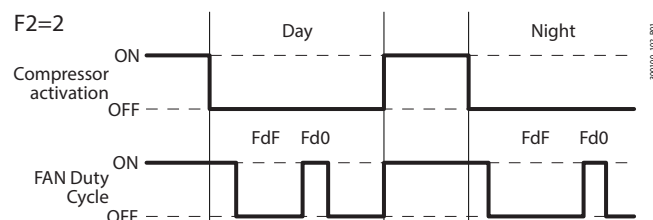
**Fig. 6.am**

### Humidity management with evaporator fan cycles

If F2 = 3, when the compressor is off, the fan is controlled based on the humidity level set by parameter HU, selected between three humidity levels: low, medium and high, which correspond to three different sets of fan on/off times and three different control temperature differentials for compressor activation.

| Par. | Description                                                                                                                                                   | Def      | Min     | Max   | UOM   | User | User terminal |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|---------|-------|-------|------|---------------|
| HU   | Humidity level: 0: low; 1: medium; 2: high.                                                                                                                   | 1        | 0       | 2     | -     | U    | NO            |
| F2   | Evaporator fans with compressor off:<br>0 = see F0;<br>1 = always off with compressor off;<br>2 = on for anti-stratification;<br>3 = on for humidity control. | 1        | 0       | 3     | -     | S    | NO            |
| F11  | Fan ON time with low humidity level                                                                                                                           | 60       | 0       | 600   | Sec   | M    | NO            |
| F12  | Fan OFF time with low humidity level                                                                                                                          | 120      | 0       | 600   | Sec   | M    | NO            |
| F13  | Fan ON time with medium humidity level                                                                                                                        | 120      | 0       | 600   | Sec   | M    | NO            |
| F14  | Fan OFF time with medium humidity level                                                                                                                       | 120      | 0       | 600   | Sec   | M    | NO            |
| F15  | Fan ON time with high humidity level                                                                                                                          | 180      | 0       | 600   | Sec   | M    | NO            |
| F16  | Fan OFF time with medium humidity level                                                                                                                       | 120      | 0       | 600   | Sec   | M    | NO            |
| F17  | Temperature control differential for compressor activation with low humidity level                                                                            | 2.0/ 3.6 | 0.1/0.2 | 20/36 | °C/°F | M    | NO            |
| F18  | Temperature control differential for compressor activation with medium humidity level                                                                         | 2.0/ 3.6 | 0.1/0.2 | 20/36 | °C/°F | M    | NO            |
| F19  | Temperature control differential for compressor activation with high humidity level                                                                           | 2.0/ 3.6 | 0.1/0.2 | 20/36 | °C/°F | M    | NO            |

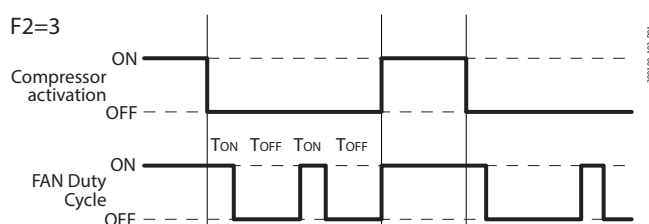

| Ref. | Description |
|------|-------------|
| TON  | F11/F13/F15 |
| TOFF | F12/F14/F16 |

Fig. 6.an

### 6.17.2 Variable-speed evaporator fans (EC fans)

Variable-speed fans may be useful for optimising energy consumption. In this case, the fans are powered by the mains, while the control signal may come via output Y1 or Y2 on the iJF controller, set as 0-10 Vdc.




**Notice:** variable speed fans are only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

To activate the algorithm, simply assign an analogue output to the variable-speed evaporator fan function by setting the type of output accordingly. In addition, the evaporation temperature probe needs to be configured if this is required for control. See "Inputs and outputs".

The maximum and minimum fan speed can be set using parameters F6 and F7 (as a percentage of the range 0-10 V). The fan speed varies proportionally across the range of modulation.

For example, considering the default values of the parameters, if F0 = 2 and  $S_d = F1 - Frd / 2 = 6^\circ\text{C} \rightarrow$  output Y1 corresponds to the percentage  $(F6 + F7) / 2 = 50\%$ . Nel caso si utilizzi il regolatore di velocità per i ventilatori, F5 rappresenta la temperatura sotto la quale si attivano i ventilatori, con un'isteresi fissa di  $1^\circ\text{C}$  per lo spegnimento.

| Par. | Description                                                                                                                                                | Def    | Min     | Max    | UOM   | User | User terminal |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|---------|--------|-------|------|---------------|
| F0   | Evaporator fan management:<br>0 = always on;<br>1 = activation based on $S_d - Sv$ ;<br>2 = activation based on $S_d$ ;<br>3 = activation based on $S_v$ . | 0      | 0       | 3      | -     | S    | NO            |
| F1   | Evaporator fan activation threshold (only if F0=1 or 2)                                                                                                    | 5/ 41  | -50/-58 | 50/122 | °C/°F | S    | NO            |
| F5   | Evaporator fan cut-off temperature (hyst. $1^\circ\text{C}$ )                                                                                              | 50     | F1      | 50     | °C/°F | M    | NO            |
| F6   | Maximum evaporator fan speed                                                                                                                               | 100    | F7      | 100    | %     | M    | NO            |
| F7   | Minimum evaporator fan speed                                                                                                                               | 0      | 0       | F6     | %     | M    | NO            |
| F8   | Evaporator fan start-up time (0 = function disabled)                                                                                                       | 0      | 0       | 240    | s     | M    | NO            |
| F10  | Evaporator fan forcing time at maximum speed (0 = function disabled)                                                                                       | 0      | 0       | 240    | min   | M    | NO            |
| Frd  | Evaporator fan activation differential (including variable speed)                                                                                          | 2/ 3.6 | 0.1/0.2 | 20/36  | °C/°F | S    | NO            |

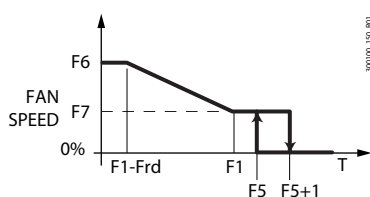

| Ref. | Description              |
|------|--------------------------|
| T    | temperature              |
| F1   | Fan activation threshold |
| Frd  | Differential             |
| F5   | Fan cut-off temperature  |
| F6   | Maximum speed            |
| F7   | Minimum speed            |

Fig. 6.a0

If parameter  $F0=0$ , the evaporator fans are on when the compressor is on (based on the setting of parameter  $F2$ ), regardless of the defrost or control temperature.

If parameter  $F0 = 1$ , the evaporator fan speed is modulated based on the evaporator temperature and the control temperature, with the speed increasing the further the temperature is below  $Sv-F1$ .

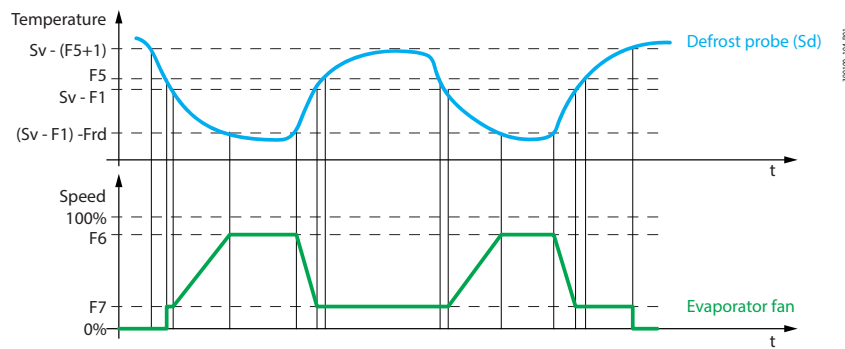


Fig. 6.ap

| Ref.  | Description                  |
|-------|------------------------------|
| Sv    | Control probe                |
| F1    | Fan activation threshold     |
| Frd   | Differential                 |
| F5    | Fan cut-off temperature      |
| F6    | Maximum evaporator fan speed |
| F7    | Minimum evaporator fan speed |
| t     | time                         |
| Speed | Evaporator fan speed         |

If parameter  $F0=2$ , the evaporator fan speed is modulated based on the evaporator temperature alone, with the speed increasing the further it falls below  $F1$ .

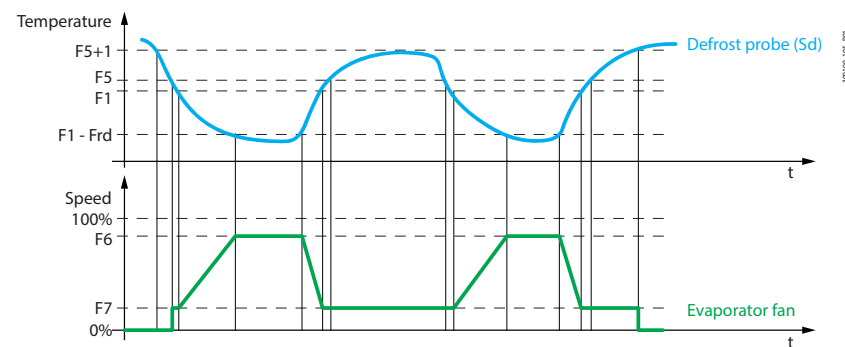


Fig. 6.aq

| Ref.  | Description                  |
|-------|------------------------------|
| Sv    | Control probe                |
| F1    | Fan activation threshold     |
| Frd   | Differential                 |
| F5    | Fan cut-off temperature      |
| F6    | Maximum evaporator fan speed |
| F7    | Minimum evaporator fan speed |
| t     | time                         |
| Speed | Evaporator fan speed         |

If parameter  $F0=3$ , the evaporator fan speed is modulated based on the control temperature alone, with the speed increasing the further it rises above the set point.

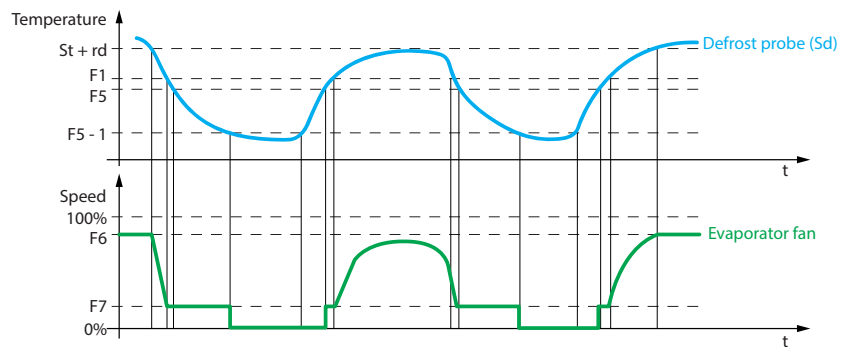


Fig. 6.ar

| Ref.  | Description                      |
|-------|----------------------------------|
| Sv    | Control probe                    |
| F1    | Fan activation threshold         |
| Frd   | Differential                     |
| St    | Temperature control set point    |
| rd    | Temperature control differential |
| F5    | Fan cut-off temperature          |
| F6    | Maximum evaporator fan speed     |
| F7    | Minimum evaporator fan speed     |
| t     | time                             |
| Speed | Evaporator fan speed             |

**Notice:** The behaviour of the variable speed fans can be influenced not only by the “cooling” request and by the temperature, but also by other control functions (dehumidification, humidification and heating), if available.

**Notice:** if two defrost probes are configured ( $Sd1$  and  $Sd2$ ), the fan speed is calculated in relation to the probe that measures the higher temperature (to limit the influx of warm air):

- if  $Sd > Sd2 \rightarrow$  control on  $Sd$ ;
- if  $Sd < Sd2 \rightarrow$  control on  $Sd2$ .

### Advanced evaporator fan parameters

Due to the mechanical inertia of the motor, some EC fans cannot start at the minimum speed set by parameter F7. To solve this problem, the fans can start at the maximum speed set by parameter F6 for a "start-up time", defined by parameter F8, regardless of the defrost temperature Sd. Vice-versa, if the fan operates too long at low speed, ice may form on the blades; to avoid this, at intervals of every F10 minutes, the fan is switched on at maximum speed for the time set for parameter F8.

| Code | Description                                                           | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| F6   | Maximum evaporator fan speed                                          | 100 | F7  | 100 | %   | M    | NO            |
| F7   | Minimum evaporator fan speed                                          | 0   | 0   | F6  | %   | M    | NO            |
| F8   | Evaporator fan start-up time 0 = Function disabled                    | 0   | 0   | 240 | s   | M    | NO            |
| F10  | Evaporator fan forcing time at maximum speed<br>0 = Function disabled | 0   | 0   | 240 | min | M    | NO            |

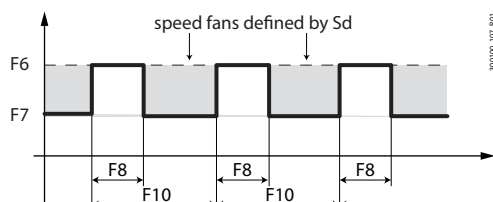


Fig. 6.as

### Variable-speed evaporator fans with humidity control

When the humidity control function is active, the fans will operate at maximum between the fixed speed set by parameter F7h and the speed calculated by the controller, for the entire duration of the process.

| Par. | Description                                        | Def | Min | Max | UOM | User | User terminal |
|------|----------------------------------------------------|-----|-----|-----|-----|------|---------------|
| F7h  | Minimum evaporator fan speed during humidification | 10  | 0   | 100 | %   | M    | NO            |

If F2 = 3, when the compressor is off, the fan is controlled based on the humidity level set by parameter HU, selected between three humidity levels: low, medium and high, which correspond to three different fan speeds.

| Par. | Description                                                                                                                                                   | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| F2   | Evaporator fans with compressor off:<br>0 = see F0;<br>1 = always off with compressor off;<br>2 = on for anti-stratification;<br>3 = on for humidity control. | 1   | 0   | 3   | -   | S    | NO            |
| F20  | Modulating evaporator fan speed with low humidity level                                                                                                       | 10  | 0   | 100 | %   | M    | NO            |
| F21  | Modulating evaporator fan speed with medium humidity level                                                                                                    | 10  | 0   | 100 | %   | M    | NO            |
| F22  | Modulating evaporator fan speed with high humidity level                                                                                                      | 10  | 0   | 100 | %   | M    | NO            |
| HU   | Humidity level:<br>0 = low;<br>1 = medium;<br>2 = high                                                                                                        | 1   | 0   | 2   | -   | U    | NO            |

During the dehumidification phase, when the compressor is off, the fan operates at the speed set for FSh.

| Par. | Description                                         | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------|-----|-----|-----|-----|------|---------------|
| FSh  | Modulating evaporator fan speed in dehumidification | 40  | 0   | 100 | %   | M    | NO            |

## 6.18 Condenser fans

The condenser fans can be fixed speed (On/Off) or variable speed (modulating 0-10 V).



**Notice:** variable speed fans are only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

To assign the On/Off or modulating output, use the parameters shown in the table.

| Par. | Description                                                   | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOt  | Assign condenser fan digital output - see DOA                 | 0   | 0   | 6   | -   | M    | NO            |
| ROt  | Condenser fan digital output logic - see ROA                  | 0   | 0   | 1   | -   | M    | NO            |
| /AE  | Assign analogue output for modulating condenser fan - see /AA | 0   | 0   | 2   | -   | M    | NO            |
| /P5  | Configuration of analogue output Y1:<br>7 = 0-10 V; 8 = PWM   | 8   | 7   | 8   | -   | M    | NO            |
| /P6  | Configuration of analogue output Y1:<br>7 = 0-10 V; 8 = PWM   | 8   | 7   | 8   | -   | M    | NO            |



**Notice:** if an analogue output is assigned to the variable-speed condenser fan function and the condenser fan is also assigned to a relay output, both outputs will be active at the same time; if the speed is greater than 0, the relay will remain active (closed):

- if speed (Y2) > 0 → "FAN" relay ON (NO\* closed)
- if speed (Y2) = 0 → "FAN" relay OFF (NO\* open)

### 6.18.1 Fixed-speed condenser fans

To activate the algorithm, simply assign a relay output to the condenser fan function. The condensing temperature probe also needs to be configured if required for control. See "Inputs and outputs".

The parameters used to manage fixed-speed fans are shown below (see the connection diagram).

| Par. | Description                                                                                                           | Def    | Min     | Max     | UOM   | User | User terminal |
|------|-----------------------------------------------------------------------------------------------------------------------|--------|---------|---------|-------|------|---------------|
| F00  | Condenser fan management:<br>0 = always on with compressor on<br>1 = activation based on Sc, off with compressor off. | 0      | 0       | 3       | -     | S    | NO            |
| F4   | Condenser fan deactivation temperature                                                                                | 40/104 | -50/-58 | 200/392 | °C/°F | S    | NO            |
| F5d  | Condenser fan activation differential                                                                                 | 5/9    | 0.1/0.2 | 60/108  | °C/°F | S    | NO            |

iJF manages the condenser fans as follows:

- F00 = 0 on when the compressor is on;
- F00 = 1 on/off based on the condensing temperature probe Sc; off with the compressor off.

If parameter F00 = 0, the condenser fans are on when the compressor is on, regardless of the condensing temperature.

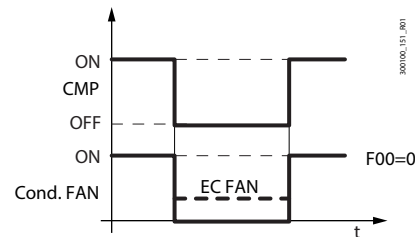


Fig. 6.at

If parameter F00 = 1, the condenser fans are on/off based on the condensing temperature. When the compressor is first started, the condenser fan will start at  $F4 + 0.2^{\circ}\text{C}$  ( $3.6^{\circ}\text{F}$ ) degrees to compensate for rapid increases in temperature that the probe reading cannot react to. Subsequently, the fan switches on and off at  $F4 + F5d$  and  $F4$ .

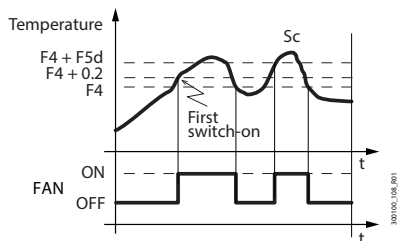


Fig. 6.au

| Ref. | Description                  |
|------|------------------------------|
| Sc   | Condensing temperature probe |
| F4   | Fan deactivation threshold   |
| F5d  | Differential                 |
| t    | time                         |
| FAN  | Condenser fans               |

### 6.18.2 Variable-speed condenser fans (EC fans)

Variable-speed fans may be useful for optimising energy consumption. In this case, the fans are powered by the mains, while the control signal may come via output Y1 or Y2 on the iJF controller, set as 0-10 Vdc.

**Notice:** variable speed fans are only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

To activate the algorithm, simply assign an analogue output to the variable-speed condenser fan function by setting the type of output accordingly. The condensing temperature probe also needs to be configured. See "Inputs and outputs".

The maximum and minimum fan speed can be set using parameters FCH and FCL (as a percentage of the range 0-10 V). The fan speed varies proportionally across the range of modulation. For example, if  $Sc = F4 - F5d/2$  → output Y2 corresponds to the percentage  $(FCH + FCL)/2$ .

If using the fan speed controller, F4 represents the temperature below which the fans are activated, with a deactivation hysteresis equal to FCC.

| Par. | Description                                  | Def   | Min | Max   | UOM   | User | User terminal |
|------|----------------------------------------------|-------|-----|-------|-------|------|---------------|
| FCC  | Modulating condenser fan cut-off temperature | 2/3.6 | 0   | 50/90 | °C/°F | M    | NO            |
| FCL  | Minimum modulating condenser fan speed       | 0     | 0   | 100   | %     | M    | NO            |
| FCH  | Maximum modulating condenser fan speed       | 100   | 0   | 100   | %     | M    | NO            |

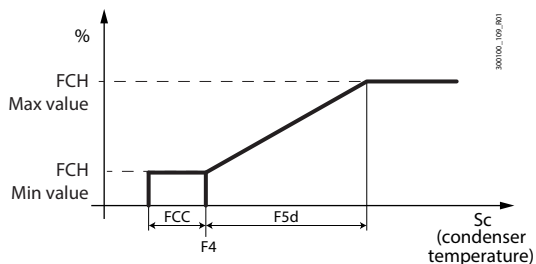


Fig. 6.av


| Ref. | Description                |
|------|----------------------------|
| Sc   | Condenser probe            |
| F4   | Fan deactivation threshold |
| F5d  | Differential               |
| FCC  | Fan cut-off temperature    |
| FCH  | Maximum speed              |
| FCL  | Minimum speed              |

## 6.19 Humidity management

iJF can manage humidity with or without a humidity probe.

If a probe is available, iJF can interact with external systems by managing the humidity level in combination with cooling control.

iJF is compatible with the CAREL humiSonic, MC Multizone and humiDisk humidification systems.

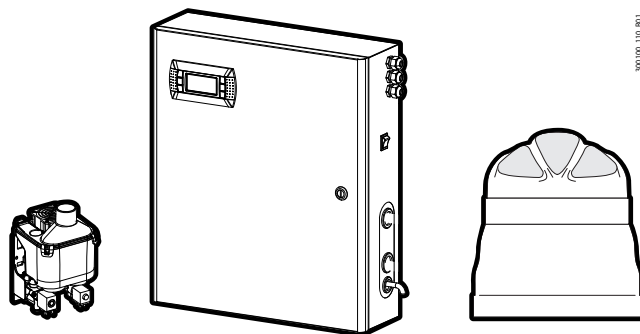

humiSonic

mc multizone

humiDisk

Fig. 6.aw

### 6.19.1 Humidity control without probe

If no humidity probe is available, humidity control can be performed in three levels, through evaporator fan duty cycles and changing the control temperature differential. See "Humidity management with evaporator fan cycles".

### 6.19.2 Humidity control with probe



**Notice:** the humidity probe is only available on models with an option that includes the 0-5 V analogue input, see "Introduction".

| Par. | Description                         | Def | Min | Max | UOM  | User | User terminal |
|------|-------------------------------------|-----|-----|-----|------|------|---------------|
| /FP  | Assign humidity probe (fixed on S5) | 5   | 5   | 5   | -    | M    | NO            |
| /cP  | Humidity probe calibration          | 0   | -20 | 20  | % rH | M    | NO            |

The probe reading can be shown on the display by setting parameter /t1 or can be read under item SHu in the direct functions menu. Furthermore, parameter /ta can be used to alternate the display of the temperature/humidity values.

### 6.19.3 Humidification output settings

To activate the humidifier, a relay needs to be assigned to the "humidifier" function.

| Par. | Description                                    | Def | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOu  | Assign humidification digital output - see DOA | 0   | 0   | 6   | -   | M    | NO            |
| ROu  | Humidification digital output logic - see rOA  | 0   | 0   | 1   | -   | M    | NO            |

### 6.19.4 Dehumidification output settings

To activate an external dehumidifier, a relay needs to be assigned to the "external dehumidifier" function, and in this case its logic will be completely uncoupled from the compressor logic.

| Par. | Description                                           | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOz  | Assign external dehumidifier digital output - see DOA | 0   | 0   | 6   | -   | M    | NO            |
| rOz  | External dehumidifier digital output logic - see rOA  | 0   | 0   | 1   | -   | M    | NO            |

As well as by an external dehumidifier, dehumidification can also be controlled through simultaneous action of the compressor and a heater; in this case, a relay needs to be assigned to the "heating for dehumidification" function.

To activate dehumidification, simultaneous cooling (compressor) and heating (heater resistance) are required. The effect of cooling is to lower the air relative humidity, while the heater then offsets the excessive cooling, so as to maintain a virtually constant temperature during the process.

| Par. | Description                                      | Def | Min | Max | UOM | User | User terminal |
|------|--------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOj  | Assign dehumidification digital output - see DOA | 0   | 0   | 6   | -   | M    | NO            |
| rOj  | Dehumidification digital output logic - see rOA  | 0   | 0   | 1   | -   | M    | NO            |

### 6.19.5 Humidity control

#### Humidification

The control logic for humidity control with probe is shown in the figure. When the humidity falls below the humidity set point Sth plus the humidity differential rdh, the humidification output is activated.

| Par. | Description                                                                                                        | Def | Min | Max   | UOM  | User | User terminal |
|------|--------------------------------------------------------------------------------------------------------------------|-----|-----|-------|------|------|---------------|
| Sth  | Humidity control set point                                                                                         | 90  | 0.0 | 100.0 | % rH | U    | YES           |
| rdh  | Humidity control differential                                                                                      | 5   | 0.1 | 99.9  | % rH | S    | YES           |
| F4r  | Humidification output during defrosts:<br>0 = active based on humidity control;<br>1 = deactivated during defrosts | 0   | 0   | 1     | -    | M    | YES           |

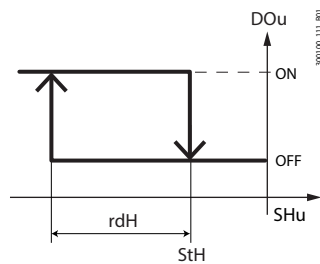


Fig. 6.ax

| Ref. | Description                   |
|------|-------------------------------|
| SHu  | Humidity control probe        |
| Sth  | Humidity control set point    |
| rdh  | Humidity control differential |
| DOu  | Humidification outlet         |

**Notice:** parameter F4r is used to decide whether or not to disable the humidification output during defrosts:

- F4r=0 -> humidification output active based on humidity control;
- F4r=1 -> humidification output disabled during defrosts, regardless of the request.

**Notice:** the humidification output is always deactivated in the event of an alarm that stops the compressor immediately.

Examples:

- Alarm CHt;
- Alarm IA (when A6 = 0).

#### Dehumidification

For humidity control with probe, the dehumidification function can also be managed. The control logic is shown in the figure. When the humidity rises above the humidity set point Sth plus the humidity differential rdh, the dehumidification output is activated.

| Par. | Description                   | Def | Min | Max   | UOM  | User | User terminal |
|------|-------------------------------|-----|-----|-------|------|------|---------------|
| Sth  | Humidity control set point    | 90  | 0.0 | 100.0 | % rH | U    | YES           |
| rdh  | Humidity control differential | 5   | 0.1 | 99.9  | % rH | S    | YES           |

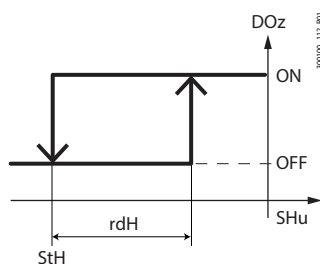


Fig. 6.ay

| Ref. | Description                   |
|------|-------------------------------|
| SHu  | Humidity control probe        |
| Sth  | Humidity control set point    |
| rdh  | Humidity control differential |
| DOz  | Dehumidification output       |

## Dead band

Humidity control in the dead band can be enabled by setting both the humidifier and dehumidifier outputs.

| Par. | Description                    | Def | Min | Max   | UOM    | User | User terminal |
|------|--------------------------------|-----|-----|-------|--------|------|---------------|
| Sth  | Humidity control set point     | 90  | 0.0 | 100.0 | % rH   | U    | YES           |
| rdh  | Humidity control differential  | 5   | 0.1 | 99.9  | % rH   | S    | YES           |
| rrH  | Dehumidification differential  | 5   | 0   | 50.0  | Δ % rH | S    | NO            |
| rnH  | Dead band for humidity control | 5   | 0   | 50.0  | Δ % rH | S    | NO            |

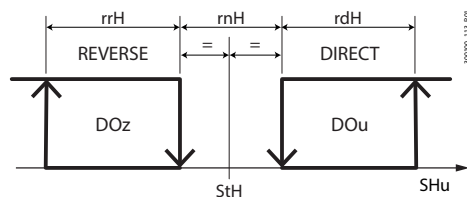


Fig. 6.az

| Ref. | Description                               |
|------|-------------------------------------------|
| SHu  | Humidity control probe                    |
| Sth  | Humidity control set point                |
| rdh  | Humidity control differential             |
| rrH  | Control differential for dehumidification |
| rnH  | Humidity dead band                        |
| DOu  | Humidification outlet                     |
| DOz  | Dehumidification output                   |



**Notice:** parameter F4r is used to decide whether or not to disable the humidification output during defrosts:

- F4r=0 -> humidification output active based on humidity control;
- F4r=1 -> humidification output disabled during defrosts, regardless of the request.

## 6.19.6 Simultaneous humidity and temperature control

With simultaneous humidity and temperature control, humidity control is generally independent of temperature control. Humidity control can be restricted to within a well-defined temperature range (parameters TLL and THL and the corresponding differential TdL), so as not to risk excessive temperature drift during humidity control.

| Par. | Description                                    | Def | Min     | Max    | UOM   | User | User terminal |
|------|------------------------------------------------|-----|---------|--------|-------|------|---------------|
| TLL  | Minimum temperature to enable humidity control | 0   | -60/-76 | 60/140 | °C/°F | S    | NO            |
| THL  | Maximum temperature to enable humidity control | 0   | -60/-76 | 60/140 | °C/°F | M    | NO            |
| TdL  | Differential to enable humidity control        | 0   | 0       | 20/36  | °C/°F | M    | NO            |



**Notice:** if parameters TLL and/or THL are set to 0, they are ignored for control purposes

### Case 1: Humidity control

#### independent of temperature (default)

The temperature is only controlled after the humidity reaches the set point. This is the default setting, with TLL and THL = 0

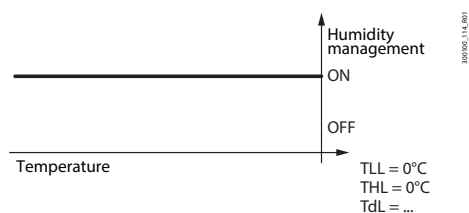


Fig. 6.ba

### Case 2: Humidity control

#### within a set range

Priority is given to temperature control: humidity is controlled in a series of cycles, while always keeping the temperature in the range TLL-THL.

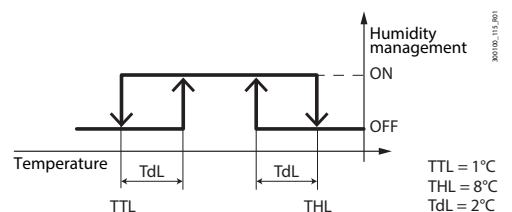


Fig. 6.bb

### Case 3: Humidity control

#### with high temperature limit

This configuration prevents the temperature from exceeding the limit (THL) during dehumidification, for example if the heater is oversized.

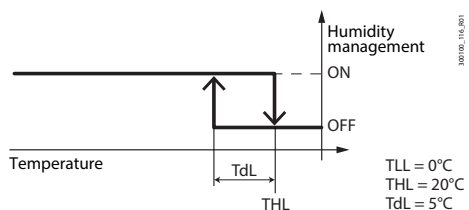


Fig. 6.bc

### Case 4: Humidity control

#### with low temperature limit

This configuration allows humidification to be stopped below the threshold TLL threshold to avoid excessive cooling and lowering the temperature, for example if the heater is undersized.

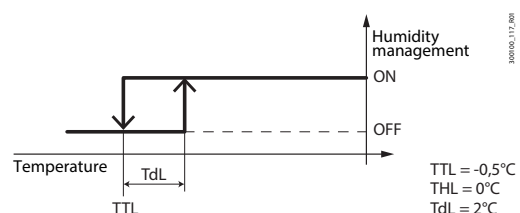


Fig. 6.bd

### 6.19.7 Humidity probe error

In the event of a humidity probe error, humidification and dehumidification are managed in duty cycles. This is only possible for humidification alone and dehumidification alone; with dead band control, both outputs remain off.

| Par. | Description                                  | Def | Min | Max | UOM | User | User terminal |
|------|----------------------------------------------|-----|-----|-----|-----|------|---------------|
| uof  | OFF time for humidity duty setting operation | 60  | c2  | 120 | min | M    | NO            |
| uon  | ON time for humidity duty setting operation  | 10  | c3  | 120 | min | M    | NO            |

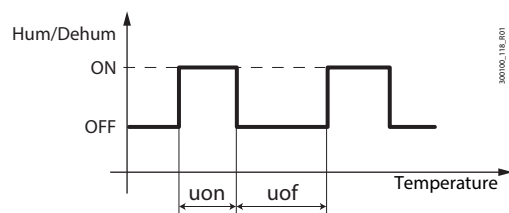


Fig. 6.be

| Ref   | Description             |
|-------|-------------------------|
| Hum   | Humidification outlet   |
| Dehum | Dehumidification output |

## 6.20 Light management

The light can be controlled by several sources: button, supervisor, door switch, curtain switch and time band.

The light is switched on or off based on an event:

| Light          | Action                                                     |
|----------------|------------------------------------------------------------|
| Button         | Pressing the button                                        |
| Supervisor     | Variation of the value from the supervisor (parameter Lht) |
| Door switch    | Contact transition (opening/closing)                       |
| Curtain switch | Contact transition (opening/closing)                       |
| Time band      | based on the on/off day, hours, minutes                    |

Tab. 6.n

When the digital inputs are stable (door switch or curtain switch), the light can be switched on and off from the keypad or supervisor.

| Par. | Description                                                                                   | Def                   | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------------------------------|-----------------------|-----|-----|-----|------|---------------|
| DOE  | Assign light digital output - see DOA                                                         | 4 (small) / 3 (large) | 0   | 6   | -   | S    | NO            |
| rOE  | Light digital output logic - see rOA                                                          | 0                     | 0   | 1   | -   | S    | NO            |
| /AF  | Assign analogue output for modulating lights - see /AA                                        | 0                     | 0   | 2   | -   | S    | NO            |
| HL   | Modulating light output activation percentage:<br>0 = 0%; 1 = 25%; 2 = 50%; 3 = 75%; 4 = 100% | 2                     | 0   | 4   | -   | U    | NO            |

By setting the analogue output as a light (on part numbers where available), the output can be modulated with four intensity levels, using parameter HL (0, 25, 50, 75 and 100%).

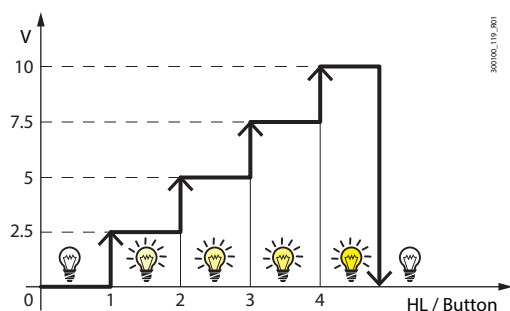


Fig. 6.bf

## 6.21 Door management

iJF can manage the opening of the door with or without stopping temperature control, based on the setting of the door switch.

| Par. | Description                                                       | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DIE  | Assign door switch with compressor OFF digital input - see DIA    | 0   | 0   | 4   | -   | M    | NO            |
| DIP  | Assign door switch without compressor OFF digital input - see DIA | 0   | 0   | 4   | -   | S    | NO            |
| rIE  | Door switch with compressor OFF digital input logic - see rIA     | 0   | 0   | 1   | -   | M    | NO            |
| rIP  | Door switch without compressor OFF digital input logic - see rIA  | 0   | 0   | 1   | -   | S    | NO            |

If the digital input is configured as a door switch with compressor off (parameter DIE), when the door is opened both the compressor and the evaporator fans are stopped; on the other hand, if configured as a door switch without compressor off (parameter DIP), when the door is opened only the evaporator fans are stopped.

| Par. | Description                                       | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------|-----|-----|-----|-----|------|---------------|
| H14  | Time light stays on after closing the door        | 0   | 0   | 240 | min | U    | NO            |
| Ad   | Delay time for high and low temp. alarms (AH, AL) | 120 | 0   | 240 | min | U    | YES           |
| Add  | High temp. alarm bypass time for door open        | 5   | 1   | 240 | min | U    | YES           |

When the door is open, the high temperature alarm is ignored for the time set using parameter Add, to avoid false alarms, and the service icon flashes to signal a warning condition. When time Add has elapsed, the following occur:

- the open door alarm (dor) is signalled;
- compressor and evaporator fan control resumes;
- the light stays on;
- after the delay time set by parameter Ad, the high temperature alarm is activated.

When closing the door:

- control resumes, restarting the compressor and evaporator fans if required;
- the light switches off after the time set by parameter H14 and the high temperature alarm is activated after the delay Ad.

When control resumes, the compressor safety times c1 and c2 are observed.

## 6.22 Door - light interactions

In the absence of time bands, opening the door always activates normal operating mode, which lasts until a different mode is selected via keypad or BMS. The light switches on when the door is opened and switches off when it closes, with a delay equal to H14, if set.

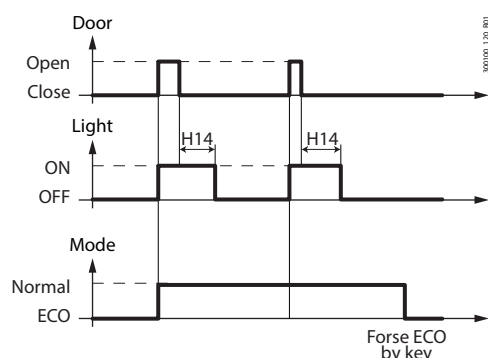


Fig. 6.bg

If time bands are set to define eco/normal mode, the light will follow these rules by switching on in normal mode and off in eco mode. Opening the door will switch back to normal mode and switch on the light.

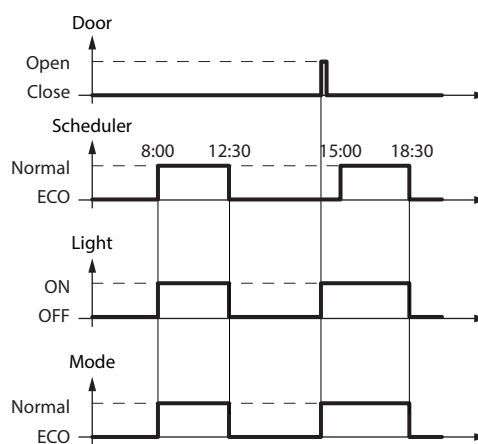


Fig. 6.bh

| Par. | Description                                           | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| H8   | Output switched with time bands<br>0 = Light; 1 = AUX | 0   | 0   | 1   | -   | S    | NO            |

The time bands can be associated with the AUX output rather than the light, by setting parameter H8. In this case, the light will reflect the position of the door, switching on and off respectively when the door is opened and closed.

## 6.23 Curtain management

| Par. | Description                                   | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------|-----|-----|-----|-----|------|---------------|
| DiG  | Assign curtain switch digital input - see DIA | 0   | 0   | 4   | -   | S    | NO            |
| rIG  | Curtain switch digital input logic - see rIA  | 0   | 0   | 1   | -   | S    | NO            |

If the digital input is associated with the curtain switch, when the curtain is closed the iJF controller activates eco mode and the set point is modified by adding the value of parameter r4. When the curtain is open, the light is always switched on.



**Notice:** in eco mode, the value  $St+r4$  is used for all of the functions that involve the set point (e.g. relative high and low temperature alarms, control with dead band, two-stage compressor control, etc.).

## 6.24 Generic functions

iJF can exploit unused inputs and outputs to configure a "generic function". Each generic function can be enabled/disabled in the Applica app or Spark program.



**Caution:** the generic functions available vary according to the model of controller.

The following can be activated (maximum configuration):

- 1 generic function with On/Off output;
- 1 generic function with modulating output (only for models where this is available);
- 1 generic alarm function (signal only).

The generic function can be controlled based on one of the following:

- 1 specific probe;
- difference between 2 suitably configured probes.



**Caution:** the controller cannot verify the consistency of the settings, if two analogue functions are mistakenly assigned to the same analogue inputs or the same digital output.

### 6.24.1 Enabling

The generic function can be enabled always, or when the unit is in a certain status.

| Par.  | Description                                     | Def | Min | Max                                   | UOM | User | User terminal |
|-------|-------------------------------------------------|-----|-----|---------------------------------------|-----|------|---------------|
| GFA_E | Generic alarm function: enable                  | 0   | 0   | 10                                    | -   | M    | NO            |
|       | 0 Always                                        |     |     | 6 Duty setting                        |     |      |               |
|       | 1 Unit ON                                       |     |     | 7 Standby                             |     |      |               |
|       | 2 Unit OFF                                      |     |     | 8 Compressor or reverse output active |     |      |               |
|       | 3 Defrost                                       |     |     | 9 Door open                           |     |      |               |
|       | 4 Not used                                      |     |     | 10 Alarm active                       |     |      |               |
|       | 5 Continuous cycle                              |     |     |                                       |     |      |               |
| GFM_E | Generic modulating function: enable - see GFA_E | 0   | 0   | 10                                    | -   | M    | NO            |
| GFS_E | Generic On/Off function: enable - see GFA_E     | 0   | 0   | 10                                    | -   | M    | NO            |

#### Assign control probe

Select the control probes for the generic function.

| Par.  | Description                                              | Def | Min | Max                             | UOM | User | User terminal |
|-------|----------------------------------------------------------|-----|-----|---------------------------------|-----|------|---------------|
| GFA_1 | Generic alarm function: control probe 1                  | 0   | 0   | 20                              | -   | M    | NO            |
|       | 0 Not configured                                         |     |     | 11 Glass temperature            |     |      |               |
|       | 1 Outlet temperature (Sm)                                |     |     | 12 Not used                     |     |      |               |
|       | 2 Defrost temperature (Sd)                               |     |     | 13 Condensing temperature       |     |      |               |
|       | 3 Intake temperature (Sr)                                |     |     | 14 Humidity                     |     |      |               |
|       | 4 Not used                                               |     |     | 15 Frost protection temperature |     |      |               |
|       | 5 Not used                                               |     |     | 16 Product temperature          |     |      |               |
|       | 6 Auxiliary evaporator defrost temperature (Sd2)         |     |     | 17 Not used                     |     |      |               |
|       | 7 Auxiliary probe 1                                      |     |     | 18 Power present                |     |      |               |
|       | 8 Auxiliary probe 2                                      |     |     | 19 Evaporator fan request       |     |      |               |
|       | 9 Ambient temperature                                    |     |     | 20 Control probe                |     |      |               |
|       | 10 Not used                                              |     |     |                                 |     |      |               |
| GFA_2 | Generic alarm function: control probe 2 - see GFA_1      | 0   | 0   | 20                              | -   | M    | NO            |
| GFM_1 | Generic modulating function: control probe 1 - see GFA_1 | 0   | 0   | 20                              | -   | M    | NO            |
| GFM_2 | Generic modulating function: control probe 2 - see GFA_1 | 0   | 0   | 20                              | -   | M    | NO            |
| GFA_1 | Generic On/Off function: control probe 1 - see GFA_1     | 0   | 0   | 20                              | -   | M    | NO            |
| GFS_2 | Generic On/Off function: control probe 2 - see GFA_1     | 0   | 0   | 20                              | -   | M    | NO            |

## 6.24.2 On/Off output

Assign the digital output for the generic function, the type (direct/reverse) and the activation logic (see parameter rOA).

| Par.  | Description                                             | Def | Min | Max  | UOM | User | User terminal |
|-------|---------------------------------------------------------|-----|-----|------|-----|------|---------------|
| DOS   | Assign generic On/Off function digital output - see DOA | 0   | 0   | 6    | -   | S    | NO            |
| rOS   | Generic On/Off function digital output logic - see rOA  | 0   | 0   | 1    | -   | S    | NO            |
| GFS_D | Generic On/Off function: differential                   | 0   | 0   | 99.9 | -   | S    | NO            |
| GFS_S | Generic On/Off function: set point                      | 0   | -99 | 999  | -   | M    | NO            |
| GFS_T | Generic On/Off function: type<br>0= Direct; 1= Reverse  | 0   | 0   | 1    | -   | M    | NO            |

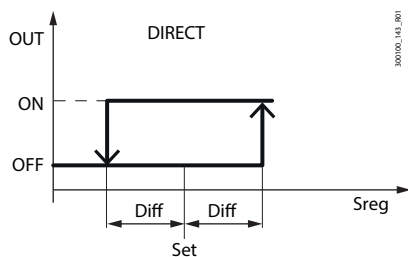


Fig. 6.bi

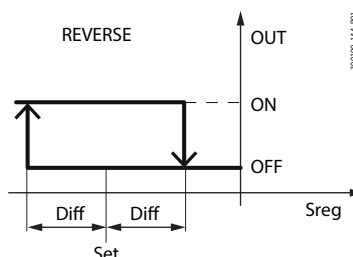


Fig. 6.bj

| Ref. | Description                                               |
|------|-----------------------------------------------------------|
| Set  | Set point (GFS_S)                                         |
| Diff | Differential (GFS_D)                                      |
| Sreg | Control probe 1<br>or<br>Control probe1 - Control probe 2 |
| OUT  | Digital output                                            |

## 6.24.3 Modulating output

**Notice:** the generic function with modulating output is only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

Assign the modulating output for the generic function and the type (direct/reverse). It is possible to use proportional control only or PID, as well as a cut-off differential with hysteresis.

| Par.    | Description                                                      | Def | Min | Max  | UOM | User | User terminal |
|---------|------------------------------------------------------------------|-----|-----|------|-----|------|---------------|
| /Ad     | Assign analogue output for generic modulating function - see /AA | 0   | 0   | 2    | -   | S    | NO            |
| /P5     | Configuration of analogue output Y1: 7 = 0-10 V; 8 = PWM         | 8   | 7   | 8    | -   | S    | NO            |
| /P6     | Configuration of analogue output Y2: 7 = 0-10 V; 8 = PWM         | 8   | 7   | 8    | -   | S    | NO            |
| GFM_CD  | Generic modulating function: cut-off differential                | 0   | 0   | 20   | -   | S    | NO            |
| GFM_D   | Generic modulating function: differential                        | 0   | 0   | 99.9 | -   | S    | NO            |
| GFM_H   | Generic modulating function: hysteresis                          | 0.1 | 0.1 | 20   | -   | M    | NO            |
| GFM_Kp  | Generic modulating function: proportional gain                   | 0   | 0   | 100  | -   | M    | NO            |
| GFM_Max | Generic modulating function: max output value                    | 0   | 0   | 100  | %   | M    | NO            |
| GFM_Min | Generic modulating function: min output value                    | 0   | 0   | 100  | %   | M    | NO            |
| GFM_S   | Generic modulating function: set point                           | 0   | -99 | 999  | -   | S    | NO            |
| GFM_T   | Generic modulating function: type<br>0=direct; 1=reverse         | 0   | 0   | 1    | -   | M    | NO            |
| GFM_Td  | Generic modulating function: derivative time                     | 0   | 0   | 100  | s   | S    | NO            |
| GFM_Ti  | Generic modulating function: integral time                       | 0   | 0   | 900  | s   | S    | NO            |

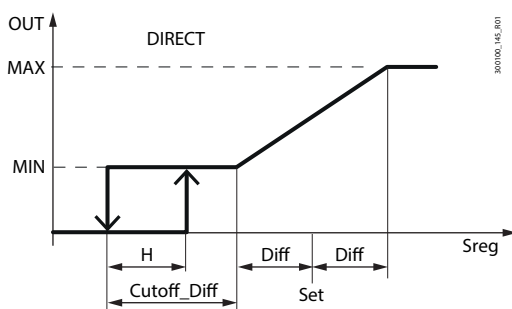


Fig. 6.bk

| Ref.        | Description                                               |
|-------------|-----------------------------------------------------------|
| Set         | Set point (GFM_S)                                         |
| Diff        | Differential (GFM_D)                                      |
| H           | Hysteresis (GFM_H)                                        |
| Sreg        | Control probe 1<br>or<br>Control probe1 - Control probe 2 |
| OUT         | Digital output                                            |
| CutOff_Diff | Cut-off differential (GFM_CD)                             |

### 6.24.4 Alarm signal

The alarm can be signalled for two reasons:

1. switching of the digital input, assigned by parameter DIS: the display shows "GHI"
2. if the difference between the values of the control probes exceeds the high or low threshold for a time longer than GFA\_De: the display shows GHI or GLO respectively.



**Notice:** check that the alarm is generated by only one of the two causes.

| Par.    | Description                                        | Def | Min     | Max    | UOM | User | User terminal |
|---------|----------------------------------------------------|-----|---------|--------|-----|------|---------------|
| GFA_D   | Generic alarm function: differential               | 0   | 0       | 99.9   | -   | S    | NO            |
| GFA_De  | General alarm function: delay                      | 0   | 0       | 30000  | s   | S    | NO            |
| GFA_Ht  | Generic alarm function: high temperature threshold | 0   | GFA_Lth | 999    | -   | S    | NO            |
| GFA_Lth | General alarm function: low temperature threshold  | 0   | -99     | GFA_Ht | -   | S    | NO            |

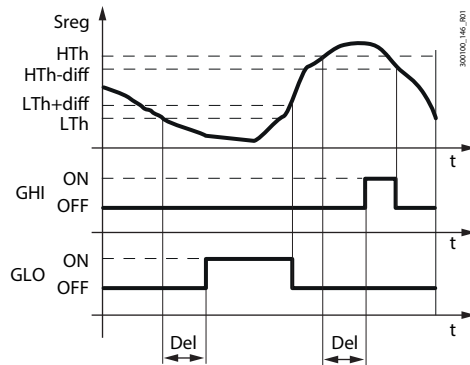


Fig. 6.bl

| Ref. | Description                                               |
|------|-----------------------------------------------------------|
| Lth  | Low temperature threshold (GFA_Lth)                       |
| HTh  | High temperature threshold (GFA_Hth)                      |
| diff | Differential (GFA_D)                                      |
| Del  | Delay (GFA_De)                                            |
| Sreg | Control probe 1<br>or<br>Control probe1 - Control probe 2 |
| t    | Time                                                      |
| GHI  | High temperature alarm message                            |
| GLO  | Low temperature alarm message                             |

### 6.25 Anti-sweat heater or fan

The anti-sweat function in iJF has fixed activation (not based on a glass temperature probe reading) and can control a heater or fan, with the purpose of demisting the showcase glass using the activation and deactivation times set for parameters rHU and rHt.

| Par. | Description                                                                             | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOQ  | Assign anti-sweat heater digital output - see DOA                                       | 0   | 0   | 6   | -   | S    | NO            |
| rOq  | Anti-sweat heater digital output logic - see rOA                                        | 0   | 0   | 1   | -   | S    | NO            |
| /Ac  | Assign analogue output for modulating anti-sweat heaters - see /AA                      | 0   | 0   | 2   | -   | S    | NO            |
| rHt  | Manual anti-sweat heater activation period (0 = function disabled)                      | 5   | 0   | 180 | min | M    | NO            |
| rHU  | Percentage of manual anti-sweat heater activation in period rHt (0 = function disabled) | 70  | 0   | 100 | %   | M    | NO            |

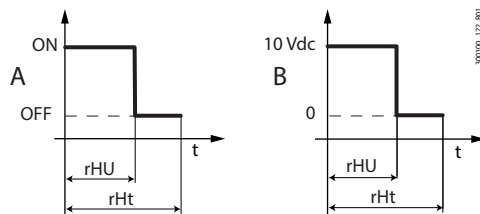


Fig. 6.bm

| Ref. | Description                                 |
|------|---------------------------------------------|
| A    | Relay output                                |
| B    | Modulating output (0-10V)                   |
| rHU  | Anti-sweat heater/fan activation percentage |
| rHt  | Anti-sweat heater/fan activation time       |
| t    | time                                        |

If either or both of the parameters rHu or rHt is set to zero, the function is disabled.

## 6.26 Gasket heater

The function activates gasket heating cycles to make it easier to open the door when the control temperature is very low.

| Par. | Description                                   | Def        | Min       | Max       | UOM     | User | User terminal |
|------|-----------------------------------------------|------------|-----------|-----------|---------|------|---------------|
| DOx  | Assign gasket heater digital output - see DOA | 0          | 0         | 6         | -       | S    | NO            |
| rOx  | Gasket heater digital output logic - see rOA  | 0          | 0         | 1         | -       | S    | NO            |
| OfT  | Gasket heater OFF time                        | 3          | 0         | 250       | min     | M    | NO            |
| OnT  | Gasket heater ON time                         | 5          | 0         | 250       | min     | M    | NO            |
| Rdrh | Gasket heater control differential            | 2 / 3.6    | 0.1 / 0.2 | 20 / 36   | Δ °C/°F | M    | NO            |
| Strh | Gasket heater control set point               | -18 / -0.4 | -50 / -58 | 200 / 392 | °C/°F   | S    | NO            |

When the control temperature reaches the set point Strh, the output is enabled and will start being activated cyclically based on the times set for parameters OnT and OfT.

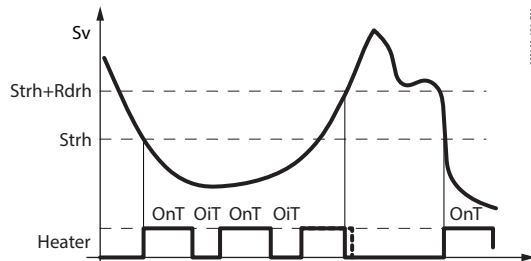


Fig. 6.bn

The output is deactivated when the temperature rises above Strh+Rdrh.

## 6.27 Drain heater

This function heats the water drained during defrosting to prevent the drain line from freezing.

| Par. | Description                                    | Def | Min | Max | UOM | User | User terminal |
|------|------------------------------------------------|-----|-----|-----|-----|------|---------------|
| DOP  | Assign drain heater digital output - see DOA   | 0   | 0   | 6   | -   | S    | NO            |
| rOP  | Drain heater digital output logic - see rOA    | 0   | 0   | 1   | -   | S    | NO            |
| dHA  | Drain heater activation time before defrosting | 3   | 1   | 120 | min | M    | NO            |
| dHE  | Drain heater activation time after defrosting  | 3   | 1   | 120 | min | M    | NO            |

If drain heating is configured, the output is activated for the time set by parameter dHA before defrosting, and remains active for a time set by parameter dHE after defrosting.

### 6.27.1 Anti-heating

This function keeps the light and AUX outputs deactivated until the control temperature falls below St+Hdh when the following conditions occur:


- controller powered on;
- switching from Off to On;
- after resetting alarms HI, IA, dA, CHt, rE.

| Par. | Description                     | Def    | Min | Max     | UOM     | User | User terminal |
|------|---------------------------------|--------|-----|---------|---------|------|---------------|
| Hdh  | Delta for anti-heating function | 0      | 0   | 200/360 | Δ °C/°F | M    | NO            |
| St   | Temperature control set point   | 50/122 | r1  | r2      | °C/°F   | U    | YES           |

## 6.28 Temperature monitoring

The iJF controller can record the minimum value rL and maximum value rH read by one of the probes, selected by setting parameter r5c, across a time interval rt spanning from the last reset by parameter rL to the present. The monitoring session can be reset at any time, after which the new maximum and minimum values are logged. Monitoring is active when parameter rM is set to 1.

| Par. | Description                                                 | Def | Min | Max                             | UOM | User | User terminal |
|------|-------------------------------------------------------------|-----|-----|---------------------------------|-----|------|---------------|
| rM   | Enable temperature monitoring:<br>0 = disabled; 1 = enabled | 0   | 0   | 1                               | -   | S    | NO            |
| r5c  | Select probe to monitor                                     | 3   | 0   | 16                              | -   | M    | NO            |
|      | 0 not configured                                            |     |     | 8 auxiliary probe 2             |     |      |               |
|      | 1 outlet temperature (Sm)                                   |     |     | 9 ambient temperature           |     |      |               |
|      | 2 defrost temperature (Sd)                                  |     |     | 10 not used                     |     |      |               |
|      | 3 intake temperature (Sr)                                   |     |     | 11 glass temperature            |     |      |               |
|      | 4 not used                                                  |     |     | 12 not used                     |     |      |               |
|      | 5 not used                                                  |     |     | 13 condensing temperature       |     |      |               |
|      | 6 auxiliary evaporator                                      |     |     | 14 humidity                     |     |      |               |
|      | defrost temperature (Sd2)                                   |     |     | 15 frost protection temperature |     |      |               |
|      | 7 auxiliary probe 1                                         |     |     | 16 product temperature          |     |      |               |
| rtL  | Reset monitoring period                                     | 0   | 0   | 1                               | -   | U    | NO            |

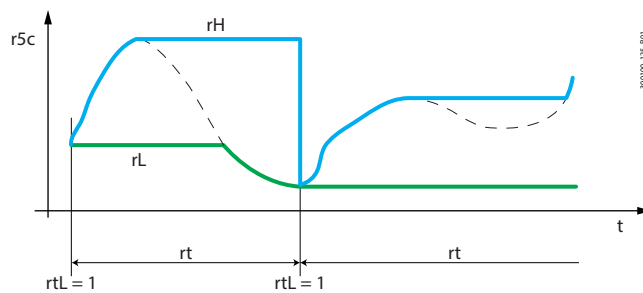

### Ref. Description

|     |                                                   |
|-----|---------------------------------------------------|
| rtL | reset, restart monitoring                         |
| rL  | minimum temperature value in the monitored period |
| rH  | maximum temperature value in the monitored period |
| rt  | Monitoring period                                 |
| r5c | Variable monitored                                |
| t   | time                                              |

Fig. 6.bo

**Notice:** temperature monitoring can only be activated on models fitted with RTC and with the clock set correctly.

## 6.29 High and low voltage protection (HLVP)

Some iJF models feature protection against high and low power supply voltages, allowing the compressor to operate only at voltages within the operating limits. This function stops the compressor if the mains voltage is outside of a range specified by parameters uHo and uLo. The compressor is switched off after a delay that can be set by parameter ucd. The compressor starts again when the voltage returns within the limits set by parameters uHI and uLI.

| Par. | Description                                                             | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| c1   | Min time between consecutive compressor starts                          | 0   | 0   | 15  | min | M    | NO            |
| c2   | Min compressor OFF time                                                 | 0   | 0   | 15  | min | M    | NO            |
| c3   | Min compressor ON time                                                  | 0   | 0   | 15  | min | M    | NO            |
| ucd  | Compressor stop delay after HLVP protection activated                   | 5   | 0   | 60  | s   | M    | NO            |
| uDE  | Enable display of HLVP protection alarms (EHI and ELO, see alarm table) | 0   | 0   | 1   | -   | M    | NO            |
| uHi  | High voltage protection start threshold                                 | 245 | 0   | 350 | V   | M    | NO            |
| uHo  | High voltage protection end threshold                                   | 255 | 0   | 350 | V   | M    | NO            |
| uEn  | Enable HLVP protection: 0 = disabled; 1 = enabled                       | 0   | 0   | 1   | -   | M    | NO            |
| uLi  | Low voltage protection start threshold                                  | 205 | 0   | 350 | V   | M    | NO            |
| uLo  | Low voltage protection end threshold                                    | 195 | 0   | 350 | V   | M    | NO            |

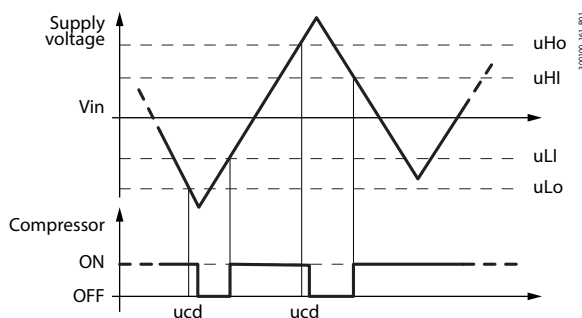


Fig. 6.bp

**Notice:** the compressor protection times c1 and c3 are ignored when the high or low voltage conditions occur, while c2 is always observed.

### Caution:

- this function cannot be considered a compressor safety function;
- operation of the controller outside of the rated operating voltage range described in the technical specifications is the customer's responsibility.

## 7. PARAMETER TABLE

Below is the table of the parameters that can be displayed on the terminal or can be modified using the configuration software or Applica app. The Applica app and configuration tools have three predefined parameter access levels: User (U), Service (S) and Manufacturer (M).

The default passwords to access the Service and Manufacturer parameters from the Applica app are 22 and 44 respectively. The Manufacturer level password also allows access to the Service parameters, and the level S password also allows access to the User parameters.

| Par. | Description                 | Def | Min | Max | UOM | User | User terminal |
|------|-----------------------------|-----|-----|-----|-----|------|---------------|
| PDM  | Manufacturer password (OEM) | 44  | 0   | 999 | -   | M    | NO            |
| PDS  | Service password            | 22  | 0   | 999 | -   | S    | NO            |
| PDU  | User password               | 0   | 0   | 999 | -   | U    | NO            |



### Notice:

- the read-only parameters are not visible from the Applica app using NFC, as NFC memory cannot be overwritten frequently;
- to avoid any fraudulent activities, the default password values should be changed at the end of the commissioning procedure. For example, with the Applica app, parameters PDM, PDS and PDU can be used to set new passwords, with a maximum length of 3 numbers.



**Caution:** the operation to reset the default values is not reversible, unless a user recipe has been previously saved for loading using the configuration tool/Applica app, see the paragraph on the configurations.

### 7.1 Parameter table

| Code                   | Description                                                                                                                                | Def. | Min      | Max    | UOM     | User | User term. |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|------|----------|--------|---------|------|------------|
| <b>Analogue inputs</b> |                                                                                                                                            |      |          |        |         |      |            |
| /2                     | Analogue probe measurement stability:<br>0 = probe reading not delayed;<br>...<br>15 = maximum probe reading delay.                        | 5    | 0        | 9      | -       | M    | NO         |
| /3                     | Display probe value:<br>0 = disabled;<br>1 = fast update;<br>...<br>15 = slow update.                                                      | 0    | 0        | 15     | -       | M    | NO         |
| /4                     | Virtual probe composition:<br>0 = Outlet probe Sm; 100 = Intake probe Sr                                                                   | 0    | 0        | 100    | %       | S    | NO         |
| /5                     | Unit of measure: 0 = °C; 1 = °F.                                                                                                           | 0    | 0        | 1      | -       | S    | YES        |
| /6                     | Display decimal point: 0 = Yes; 1 = No.                                                                                                    | 0    | 0        | 1      | -       | S    | YES        |
| /AA                    | Assign analogue output for modulating evaporator fan:<br>0 = not configured;<br>1 = analogue output 1 (Y1);<br>2 = analogue output 2 (Y2). | 0    | 0        | 2      | -       | S    | NO         |
| /Ac                    | Assign analogue output for modulating anti-sweat heaters - see /AA                                                                         | 0    | 0        | 2      | -       | S    | NO         |
| /Ad                    | Assign analogue output for generic modulating function - see /AA                                                                           | 0    | 0        | 2      | -       | S    | NO         |
| /AE                    | Assign analogue output for modulating condenser fan - see /AA                                                                              | 0    | 0        | 2      | -       | S    | NO         |
| /AF                    | Assign analogue output for modulating lights - see /AA                                                                                     | 0    | 0        | 2      | -       | S    | NO         |
| /AG                    | Assign analogue output for modulating compressor - see /AA                                                                                 | 0    | 0        | 2      | -       | S    | NO         |
| /cA                    | Outlet temperature probe (Sm) calibration                                                                                                  | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cb                    | Defrost temperature probe (Sd) calibration                                                                                                 | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cc                    | Intake temperature probe (Sr) calibration                                                                                                  | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cF                    | Auxiliary evaporator defrost temperature probe (Sd2) calibration                                                                           | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cG                    | Auxiliary temperature probe 1 calibration                                                                                                  | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cH                    | Auxiliary temperature probe 2 calibration                                                                                                  | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cl                    | Ambient temperature probe calibration                                                                                                      | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cM                    | Glass temperature probe calibration                                                                                                        | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /co                    | Condensing temperature probe calibration                                                                                                   | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cp                    | Humidity probe calibration                                                                                                                 | 0    | -20      | 20     | Δ %rh   | S    | NO         |
| /cq                    | Frost protection temperature probe calibration                                                                                             | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |
| /cr                    | Product temperature probe calibration                                                                                                      | 0    | -20/ -36 | 20/ 36 | Δ °C/°F | S    | NO         |

| Code               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Def.      | Min       | Max     | UOM     | User | User term. |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-----------|---------|---------|------|------------|
| /d1                | Assign end defrost probe:<br>1 = outlet temperature (Sm);<br>2 = defrost temperature (Sd);<br>3 = intake temperature (Sr);<br>4 = not used;<br>5 = not used;<br>6 = auxiliary evaporator defrost temperature (Sd2);<br>7 = auxiliary probe 1;<br>8 = auxiliary probe 2;<br>9 = ambient temperature;<br>10 = not used;<br>11 = glass temperature;<br>12 = not used;<br>13 = condensing temperature;<br>14 = humidity;<br>15 = frost protection temperature;<br>16 = product temperature | 2         | 1         | 16      | -       | M    | NO         |
| /d2                | Assign auxiliary evaporator end defrost probe - see /d1                                                                                                                                                                                                                                                                                                                                                                                                                                | 6         | 1         | 16      | -       | M    | NO         |
| /FA                | Assign outlet temperature probe (Sm)<br>0 = Function disabled<br>1 = Probe S1<br>2 = Probe S2<br>3 = Probe S3                                                                                                                                                                                                                                                                                                                                                                          | 1         | 0         | 7       | -       | S    | NO         |
|                    | 4 = Probe S4<br>5 = Reserved<br>6 = Probe S1H<br>7 = Probe S2H                                                                                                                                                                                                                                                                                                                                                                                                                         |           |           |         |         |      |            |
| /Fb                | Assign defrost temperature probe (Sd) - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                        | 0         | 0         | 7       | -       | S    | NO         |
| /Fc                | Assign intake temperature probe (Sr) - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0         | 0         | 7       | -       | S    | NO         |
| /FF                | Assign auxiliary evaporator defrost temperat. probe (Sd2) - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                    | 0         | 0         | 7       | -       | S    | NO         |
| /FG                | Assign auxiliary temperature probe 1 (Saux1) - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                 | 0         | 0         | 7       | -       | S    | NO         |
| /FH                | Assign auxiliary temperature probe 2 (Saux1) - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                 | 0         | 0         | 7       | -       | S    | NO         |
| /FI                | Assign ambient temperature probe (SA) - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                        | 0         | 0         | 7       | -       | S    | NO         |
| /FM                | Assign glass temperature probe (Svt) - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0         | 0         | 7       | -       | S    | NO         |
| /Fo                | Assign condensing temperature probe - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                          | 0         | 0         | 7       | -       | S    | NO         |
| /FP                | Assign humidity probe (fixed on S5)                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 5         | 5         | 5       | -       | S    | NO         |
| /Fq                | Assign frost protection temperature probe - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0         | 0         | 7       | -       | S    | NO         |
| /FR                | Assign product temperature probe - see /FA                                                                                                                                                                                                                                                                                                                                                                                                                                             | 0         | 0         | 7       | -       | S    | NO         |
| /Lb                | Status LEDs on in standby (including ON/OFF):<br>0 = off; 1 = on.                                                                                                                                                                                                                                                                                                                                                                                                                      | 0         | 0         | 1       | -       | M    | NO         |
| /nE                | Enable user terminal navigation:<br>0 = enabled; 1 = disabled.                                                                                                                                                                                                                                                                                                                                                                                                                         | 0         | 0         | 1       | -       | M    | NO         |
| /P1                | Configuration of probes S1, S2, S3, S4, B5<br>0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT.                                                                                                                                                                                                                                                                                                                                                                                    | 2         | 0         | 4       | -       | M    | NO         |
| /P2                | Configuration of multifunction input S3/ DI1:<br>0, 1, 2, 3, 4 = S3; 5 = DI1.                                                                                                                                                                                                                                                                                                                                                                                                          | 5         | 0         | 5       | -       | M    | NO         |
| /P5                | Configuration of analogue output Y1:<br>7 = 0-10 V; 8 = PWM.                                                                                                                                                                                                                                                                                                                                                                                                                           | 8         | 7         | 8       | -       | S    | NO         |
| /P6                | Configuration of analogue output Y2:<br>7 = 0-10 V; 8 = PWM.                                                                                                                                                                                                                                                                                                                                                                                                                           | 8         | 7         | 8       | -       | S    | NO         |
| /P7                | Configuration of multifunction input S2H/ DIH:<br>0 = S2H; 5 = DI1.                                                                                                                                                                                                                                                                                                                                                                                                                    | 2         | 0         | 2       | -       | M    | NO         |
| /P8                | Configuration of probe S1H, S2H:<br>0 = not used; 1 = not used; 2 = NTC;<br>3 = not used; 4 = not used                                                                                                                                                                                                                                                                                                                                                                                 | 2         | 0         | 4       | -       | M    | NO         |
| /Sb                | PRG button always ON in standby: 0 = off; 1 = on.                                                                                                                                                                                                                                                                                                                                                                                                                                      | 1         | 0         | 1       | -       | M    | NO         |
| /ta                | Alternating (temperature/humidity):<br>0 = disabled; 1 = enabled.                                                                                                                                                                                                                                                                                                                                                                                                                      | 0         | 0         | 1       | -       | S    | NO         |
| /t1                | Display on user terminal:<br>0 = Not configured; 1 = value of S1;<br>2 = value of S2; 3 = value of S3;<br>4 = value of S4; 5 = value of S1H; 6 to 8 = not available;<br>9 = control probe; 10 = virtual probe; 11 to 14 = not available; 15 = current control set point.                                                                                                                                                                                                               | 9         | 0         | 15      | -       | S    | YES        |
| A0                 | High and low temp. alarm reset differential                                                                                                                                                                                                                                                                                                                                                                                                                                            | 2/ 3.6    | 0.1/0.2   | 20/ 36  | Δ °C/°F | M    | NO         |
| A1                 | Alarm thresholds (AL, AH) relative to the set point St or absolute:<br>0 = relative; 1 = absolute.                                                                                                                                                                                                                                                                                                                                                                                     | 0         | 0         | 1       | -       | S    | NO         |
| A3                 | Defrost terminated after maximum time signal:<br>0 = disabled; 1 = enabled.                                                                                                                                                                                                                                                                                                                                                                                                            | 0         | 0         | 1       | -       | S    | NO         |
| A6                 | Stop compressor with external alarm (Toff = 15 minutes, fixed):<br>0 = compressor always OFF; 100 = compressor always ON.                                                                                                                                                                                                                                                                                                                                                              | 0         | 0         | 100     | min     | M    | NO         |
| A7                 | Delay time for delayed external alarm (0 = signal-only alarm)                                                                                                                                                                                                                                                                                                                                                                                                                          | 0         | 0         | 240     | min     | M    | NO         |
| Ac                 | Dirty condenser alarm threshold                                                                                                                                                                                                                                                                                                                                                                                                                                                        | 70/158    | 0/ 32     | 250/482 | °C/°F   | M    | NO         |
| Acd                | Dirty condenser alarm delay time                                                                                                                                                                                                                                                                                                                                                                                                                                                       | 0         | 0         | 240     | min     | M    | NO         |
| Ad                 | Delay time for high and low temp. alarms (AH, AL)                                                                                                                                                                                                                                                                                                                                                                                                                                      | 120       | 0         | 240     | min     | U    | YES        |
| Add                | High temp. alarm bypass time for door open                                                                                                                                                                                                                                                                                                                                                                                                                                             | 5         | 1         | 240     | min     | U    | YES        |
| AE                 | Dirty condenser alarm reset differential                                                                                                                                                                                                                                                                                                                                                                                                                                               | 5         | 0.1/0.2   | 20/ 36  | Δ °C/°F | S    | NO         |
| AF                 | Frost protection alarm threshold                                                                                                                                                                                                                                                                                                                                                                                                                                                       | -5/- 9    | -50/- 58  | 200/392 | °C/°F   | S    | NO         |
| AFd                | Frost protection alarm delay time                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 1         | 0         | 15      | min     | S    | NO         |
| AH                 | Relative high temperature alarm threshold                                                                                                                                                                                                                                                                                                                                                                                                                                              | 0         | 0         | 555/999 | Δ °C/°F | U    | YES        |
| AHA                | Absolute high temperature alarm threshold                                                                                                                                                                                                                                                                                                                                                                                                                                              | 537/999   | -100/-148 | 537/999 | °C/°F   | U    | YES        |
| AL                 | Relative low temperature alarm threshold                                                                                                                                                                                                                                                                                                                                                                                                                                               | 0         | 0         | 200/360 | Δ °C/°F | U    | YES        |
| ALA                | Absolute low temperature alarm threshold                                                                                                                                                                                                                                                                                                                                                                                                                                               | -100/-148 | -100/-148 | 537/999 | °C/°F   | U    | YES        |
| AoutActTestMode[1] | Test via BMS serial port, analogue output Y1 value                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0         | 0         | 1000    | % x 10  | (*)  | NO         |
| AoutActTestMode[2] | Test via BMS serial port, analogue output Y2 value                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0         | 0         | 1000    | % x 10  | (*)  | NO         |
| AuC                | Activate auxiliary output                                                                                                                                                                                                                                                                                                                                                                                                                                                              | 0         | 0         | 1       | -       | S    | NO         |

| Code                    | Description                                                                                                                                                                                                                                           | Def.     | Min      | Max       | UOM     | User | User term. |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------|-----------|---------|------|------------|
| BtE                     | Enable Bluetooth™ connection:<br>0 = disabled; 1 = enabled.                                                                                                                                                                                           | 1        | 0        | 1         | -       | M    | NO         |
| c0                      | Delay to enable compressor and evaporator fan at power on                                                                                                                                                                                             | 0        | 0        | 15        | min     | M    | NO         |
| c1                      | Min time between consecutive compressor starts                                                                                                                                                                                                        | 0        | 0        | 15        | min     | M    | NO         |
| c10                     | End pump down: 0 = time; 1 = pressure.                                                                                                                                                                                                                | 0        | 0        | 1         | -       | M    | NO         |
| c11                     | Second compressor start delay                                                                                                                                                                                                                         | 4        | 0        | 250       | s       | M    | NO         |
| c2                      | Min compressor OFF time                                                                                                                                                                                                                               | 3        | 0        | 15        | min     | M    | NO         |
| c3                      | Min compressor ON time                                                                                                                                                                                                                                | 0        | 0        | 15        | min     | M    | NO         |
| c4                      | ON time for duty setting operation<br>(Toff = 15 minutes, fixed value):<br>0 = compressor always OFF;<br>100 = compressor/valve always ON                                                                                                             | 0        | 0        | 100       | min     | M    | NO         |
| c7                      | Defrost priority over continuous cycle:<br>0 = continuous cycle has priority; 1 = defrost has priority.                                                                                                                                               | 0        | 0        | 1         | -       | M    | NO         |
| c8                      | Compressor start delay after opening the pump down valve                                                                                                                                                                                              | 5        | 0        | 60        | s       | M    | NO         |
| c9                      | Restart during pump down: 0 = disabled; 1 = enabled                                                                                                                                                                                                   | 0        | 0        | 1         | -       | M    | NO         |
| cc                      | Continuous cycle running time (0 = disabled)                                                                                                                                                                                                          | 0        | 0        | 72        | hours   | M    | NO         |
| ccE                     | Set point delta to end continuous cycle                                                                                                                                                                                                               | 1.5/ 2.7 | 0.0/ 0.0 | 9.9/ 17.8 | Δ °C/°F | M    | NO         |
| cct                     | VCC compressor off time                                                                                                                                                                                                                               | 1        | 0        | 255       | min     | M    | NO         |
| cdf                     | VCC compressor frequency for hot gas defrost                                                                                                                                                                                                          | 140      | 0        | 255       | hz      | M    | NO         |
| cdt                     | VCC compressor PID control derivative term                                                                                                                                                                                                            | 1        | 0        | 255       | s       | M    | NO         |
| cMA                     | Maximum VCC compressor rotation frequency                                                                                                                                                                                                             | 150      | 0        | 250       | hz      | M    | NO         |
| cMf                     | Maximum VCC compressor control frequency                                                                                                                                                                                                              | 100      | 0        | 255       | hz      | M    | NO         |
| cMi                     | VCC compressor switch-off frequency                                                                                                                                                                                                                   | 30       | 0        | 250       | hz      | M    | NO         |
| CnC                     | Continuous cycle request                                                                                                                                                                                                                              | 0        | 0        | 1         | -       | S    | NO         |
| cnf                     | Minimum VCC compressor control frequency                                                                                                                                                                                                              | 52       | 0        | 255       | hz      | M    | NO         |
| CoA                     | Display alarms detected by the inverter:<br>0 = display disabled; 1 = display enabled.                                                                                                                                                                | 1        | 0        | 1         | -       | U    | YES        |
| CompFreqAct<br>TestMode | Test via BMS serial port, VCC compressor frequency                                                                                                                                                                                                    | 0        | 0        | 255       | hz      | (*)  | NO         |
| cPr                     | VCC compressor PID control proportional term                                                                                                                                                                                                          | 2        | 0        | 800       | -       | M    | NO         |
| cPt                     | Maximum pump down time (0 = pump down disabled)                                                                                                                                                                                                       | 0        | 0        | 900       | s       | M    | NO         |
| cSc                     | Soft start frequency                                                                                                                                                                                                                                  | 53       | 0        | 255       | hz      | M    | NO         |
| cSt                     | Soft start time                                                                                                                                                                                                                                       | 5        | 0        | 240       | s       | M    | NO         |
| Ctd                     | Maximum VCC inverter communication failure time before alarm is shown on the display (0 = display disabled)                                                                                                                                           | 15       | 0        | 60        | s       | M    | NO         |
| ctl                     | VCC compressor PID control integral term                                                                                                                                                                                                              | 120      | 0        | 999       | s       | M    | NO         |
| cuF                     | Conversion factor from frequency (Hz) to compressor speed (rpm)                                                                                                                                                                                       | 30       | 0        | 999       | -       | M    | NO         |
| d0                      | Type of defrost: 0 = heater by temperature;<br>1 = hot gas by temperature;<br>2 = heater by time; 3 = hot gas by time;<br>4 = heater by time with temperature control.                                                                                | 0        | 0        | 4         | -       | M    | NO         |
| d10                     | Compressor on time for defrost running time mode<br>0 = function disabled                                                                                                                                                                             | 0        | 0        | 240       | min     | M    | NO         |
| d11                     | Defrost temperature threshold in running time mode                                                                                                                                                                                                    | -50/ -58 | -50/ -58 | 50/ 122   | °C/°F   | M    | NO         |
| d15                     | Start defrost threshold                                                                                                                                                                                                                               | 0        | 0        | 240       | min     | M    | NO         |
| d16                     | Time with no temperature decrease before starting defrost                                                                                                                                                                                             | 30       | Add      | 240       | min     | M    | NO         |
| d20                     | Sampling time for alarm rSF                                                                                                                                                                                                                           | 0        | 0        | 240       | min     | M    | NO         |
| d21                     | Number of defrosts allowed before signalling alarm rSF                                                                                                                                                                                                | 2        | 1        | 5         | -       | M    | NO         |
| d22                     | Temperature difference to verify decrease                                                                                                                                                                                                             | 0.1/ 0.2 | 0.1/ 0.2 | 0.5/ 0.9  | Δ °C/°F | M    | NO         |
| d4                      | Enable defrost at power on:<br>0 = disabled; 1 = enabled.                                                                                                                                                                                             | 0        | 0        | 1         | -       | M    | NO         |
| d5                      | Defrost delay at power on or after command from digital input                                                                                                                                                                                         | 0        | 0        | 240       | min     | M    | NO         |
| d6                      | Display on terminals during defrosts:<br>0 = temperature alternating with 'dEF';<br>1 = freeze display;<br>2 = 'dEF'.                                                                                                                                 | 1        | 0        | 2         | -       | S    | YES        |
| d7                      | Skip defrost:<br>0 = disabled; 1 = enabled.                                                                                                                                                                                                           | 0        | 0        | 1         | -       | M    | NO         |
| d8                      | Bypass high temperature alarm time after defrost                                                                                                                                                                                                      | 1        | 1        | 240       | hours   | S    | YES        |
| d9                      | Defrost priority over compressor protection times:<br>0 = the compressor protection times are observed;<br>1 = the compressor protection times are ignored, therefore defrosting starts without waiting for the compressor protection times to elapse | 0        | 0        | 1         | -       | M    | NO         |
| dAS                     | Activate ECO mode                                                                                                                                                                                                                                     | 0        | 0        | 1         | -       | S    | NO         |
| dC                      | Time base for defrosts:<br>0 = dI in hours, dP1 and dP2 in minutes;<br>1 = dI in minutes, dP1 and dP2 in seconds.                                                                                                                                     | 0        | 0        | 1         | -       | S    | NO         |
| dC1                     | Time base for d8: 0 = d8 in hours; 1 = d8 in minutes                                                                                                                                                                                                  | 0        | 0        | 1         | -       | S    | NO         |
| dCH                     | Defrost after opening the door:<br>maximum number of openings                                                                                                                                                                                         | 50       | dCL      | 99        | -       | M    | NO         |
| dCL                     | Defrost after opening the door:<br>minimum number of openings                                                                                                                                                                                         | 0        | 0        | dCH       | -       | M    | NO         |
| dd                      | Dripping time after defrosting<br>(0 = no dripping)                                                                                                                                                                                                   | 2        | 0        | 15        | min     | M    | NO         |
| ddF                     | VCC compressor frequency for dripping                                                                                                                                                                                                                 | 140      | cMi      | 255       | hz      | M    | NO         |
| dfM                     | Start defrost                                                                                                                                                                                                                                         | 0        | 0        | 1         | -       | S    | NO         |
| dHA                     | Drain heater activation time before defrosting                                                                                                                                                                                                        | 3        | 1        | 120       | min     | M    | NO         |
| dHE                     | Drain heater activation time after defrosting                                                                                                                                                                                                         | 3        | 1        | 120       | min     | M    | NO         |
| dHG                     | Waiting time for compressor start to reverse cycle                                                                                                                                                                                                    | 0        | 0        | 300       | s       | M    | NO         |
| dI                      | Maximum interval between consecutive defrosts                                                                                                                                                                                                         | 8        | 0        | 240       | hours   | S    | YES        |
| DIA                     | Assign immediate external alarm digital input:<br>0 = Disabled; 1 = ID1; 2 = ID2; 3 = D1H; 4 = D2H                                                                                                                                                    | 0        | 0        | 4         | -       | S    | NO         |
| Dlb                     | Assign delayed external alarm digital input - see DIA                                                                                                                                                                                                 | 0        | 0        | 4         | -       | S    | NO         |

| Code | Description                                                                                                                                                                                                                                               | Def.                       | Min     | Max    | UOM     | User | User term. |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|---------|--------|---------|------|------------|
| Dlc  | Assign enable defrost digital input - see DIA                                                                                                                                                                                                             | 0                          | 0       | 4      | -       | S    | NO         |
| Dld  | Assign start defrost digital input - see DIA                                                                                                                                                                                                              | 0                          | 0       | 4      | -       | S    | NO         |
| DIE  | Assign door switch with compressor OFF digital input - see DIA                                                                                                                                                                                            | 0                          | 0       | 4      | -       | S    | NO         |
| DIF  | Assign remote ON/OFF digital input - see DIA                                                                                                                                                                                                              | 0                          | 0       | 4      | -       | S    | NO         |
| DIG  | Assign curtain switch digital input - see DIA                                                                                                                                                                                                             | 0                          | 0       | 4      | -       | S    | NO         |
| DIH  | Assign start/stop continuous cycle digital input - see DIA                                                                                                                                                                                                | 0                          | 0       | 4      | -       | S    | NO         |
| Dlo  | Assign working parameter set changeover digital input - see DIA                                                                                                                                                                                           | 0                          | 0       | 4      | -       | S    | NO         |
| DIP  | Assign door switch without compressor OFF digital input - see DIA                                                                                                                                                                                         | 0                          | 0       | 4      | -       | S    | NO         |
| DIS  | Assign generic function alarm digital input logic - see DIA                                                                                                                                                                                               | 0                          | 0       | 4      | -       | S    | NO         |
| Dlt  | Assign low pressure switch digital input - see DIA                                                                                                                                                                                                        | 0                          | 0       | 4      | -       | S    | NO         |
| DIU  | Assign AUX output activation digital input - see DIA                                                                                                                                                                                                      | 0                          | 0       | 4      | -       | S    | NO         |
| dn   | Nominal defrost duration for skip defrost                                                                                                                                                                                                                 | 75                         | 0       | 100    | %       | M    | NO         |
| dnM  | Maximum defrost duration for skip defrost                                                                                                                                                                                                                 | 45                         | 0       | 240    | min     | M    | NO         |
| DOA  | Assign solenoid/compressor digital output<br>0 = not configured      4 = digital output 4 (NO4)<br>1 = digital output 1 (NO1)      5 = digital output 5 (NO5)<br>2 = digital output 2 (NO2)      6 = digital output 6 (NO6)<br>3 = digital output 3 (NO3) | 1 (small) / 0<br>5 (large) | 0       | 6      | -       | S    | NO         |
| DOb  | Assign alarm digital output - see DOA                                                                                                                                                                                                                     | 0 (small) / 0<br>2 (large) | 0       | 6      | -       | S    | NO         |
| DOC  | Assign AUX auxiliary digital output - see DOA                                                                                                                                                                                                             | 0 (small) / 0<br>1 (large) | 0       | 6      | -       | S    | NO         |
| DOE  | Assign light digital output - see DOA                                                                                                                                                                                                                     | 4 (small) / 0<br>3 (large) | 0       | 6      | -       | S    | NO         |
| DOG  | Assign defrost digital output - see DOA                                                                                                                                                                                                                   | 2 (small) / 0<br>6 (large) | 0       | 6      | -       | S    | NO         |
| DOH  | Assign auxiliary evaporator defrost digital output - see DOA                                                                                                                                                                                              | 0                          | 0       | 6      | -       | S    | NO         |
| DOI  | Assign evaporator fan digital output - see DOA                                                                                                                                                                                                            | 3 (small) / 0<br>4 (large) | 0       | 6      | -       | S    | NO         |
| DOj  | Assign dehumidification digital output - see DOA                                                                                                                                                                                                          | 0                          | 0       | 6      | -       | S    | NO         |
| DOn  | Assign pump down valve digital output - see DOA                                                                                                                                                                                                           | 0                          | 0       | 6      | -       | S    | NO         |
| DOP  | Assign drain heater digital output - see DOA                                                                                                                                                                                                              | 0                          | 0       | 6      | -       | S    | NO         |
| DOQ  | Assign anti-sweat heater digital output - see DOA                                                                                                                                                                                                         | 0                          | 0       | 6      | -       | S    | NO         |
| DOS  | Assign generic On/Off function digital output - see DOA                                                                                                                                                                                                   | 0                          | 0       | 6      | -       | S    | NO         |
| DOt  | Assign condenser fan digital output - see DOA                                                                                                                                                                                                             | 0                          | 0       | 6      | -       | S    | NO         |
| DOu  | Assign humidification digital output - see DOA                                                                                                                                                                                                            | 0                          | 0       | 6      | -       | S    | NO         |
| DOv  | Assign reverse digital output with dead band control - see DOA                                                                                                                                                                                            | 0                          | 0       | 6      | -       | S    | NO         |
| DOw  | Assign auxiliary parallel compressor digital output - see DOA                                                                                                                                                                                             | 0                          | 0       | 6      | -       | S    | NO         |
| DOx  | Assign gasket heater digital output - see DOA                                                                                                                                                                                                             | 0                          | 0       | 6      | -       | S    | NO         |
| DOy  | Assign auxiliary compressor with rotation digital output - see DOA                                                                                                                                                                                        | 0                          | 0       | 6      | -       | S    | NO         |
| DOz  | Assign external dehumidifier digital output - see DOA                                                                                                                                                                                                     | 0                          | 0       | 6      | -       | S    | NO         |
| dP1  | Maximum defrost duration                                                                                                                                                                                                                                  | 45                         | 1       | 240    | min     | S    | YES        |
| dP2  | Max auxiliary evaporator defrost duration                                                                                                                                                                                                                 | 45                         | 1       | 240    | min     | S    | YES        |
| dPH  | Defrost after opening the door: maximum defrost duration                                                                                                                                                                                                  | 15                         | dPL     | dP1    | min     | M    | NO         |
| dPL  | Defrost after opening the door: minimum defrost duration                                                                                                                                                                                                  | 5                          | 0       | dPH    | min     | M    | NO         |
| dS1  | Compressor off time in sequential stop defrost mode (0 = function disabled)                                                                                                                                                                               | 0                          | 0       | 45     | min     | M    | NO         |
| dS2  | Compressor operating time in sequential stop defrost mode                                                                                                                                                                                                 | 120                        | 0       | 240    | min     | M    | NO         |
| dt1  | End defrost temperature (read by Sd)                                                                                                                                                                                                                      | 4/39.2                     | -50/-58 | 50/122 | °C/°F   | S    | YES        |
| dt2  | Auxiliary evaporator end defrost temperature (read by Sd2)                                                                                                                                                                                                | 4/39.2                     | -50/-58 | 50/122 | °C/°F   | S    | YES        |
| F0   | Evaporator fan management:<br>0 = always on;<br>1 = activation based on Sd - Sv;<br>2 = activation based on Sd; 3 = activation based on Sv.                                                                                                               | 0                          | 0       | 3      | -       | S    | NO         |
| F00  | Condenser fan management:<br>0 = always on with compressor on<br>1 = activation based on Sc, off with compressor off.                                                                                                                                     | 0                          | 0       | 1      | -       | S    | NO         |
| F1   | Evaporator fan activation threshold (only if F0 = 1, 2, 3)                                                                                                                                                                                                | 5/41                       | -50/-58 | 50/122 | °C/°F   | S    | NO         |
| F10  | Evaporator fan forcing time at maximum speed (0 = function disabled)                                                                                                                                                                                      | 0                          | 0       | 240    | min     | M    | NO         |
| F11  | Fan ON time with low humidity level                                                                                                                                                                                                                       | 60                         | 0       | 600    | s       | M    | NO         |
| F12  | Fan OFF time with low humidity level                                                                                                                                                                                                                      | 120                        | 0       | 600    | s       | M    | NO         |
| F13  | Fan ON time with medium humidity level                                                                                                                                                                                                                    | 120                        | 0       | 600    | s       | M    | NO         |
| F14  | Fan OFF time with medium humidity level                                                                                                                                                                                                                   | 120                        | 0       | 600    | s       | M    | NO         |
| F15  | Fan ON time with high humidity level                                                                                                                                                                                                                      | 180                        | 0       | 600    | s       | M    | NO         |
| F16  | Fan OFF time with medium humidity level                                                                                                                                                                                                                   | 120                        | 0       | 600    | s       | M    | NO         |
| F17  | Temperature control differential for compressor activation with low humidity level                                                                                                                                                                        | 2.0/3.6                    | 0.1/0.2 | 20/36  | Δ °C/°F | M    | NO         |
| F18  | Temperature control differential for compressor activation with medium humidity level                                                                                                                                                                     | 2.0/3.6                    | 0.1/0.2 | 20/36  | Δ °C/°F | M    | NO         |

| Code            | Description                                                                                                                                                | Def.     | Min      | Max      | UOM      | User | User term. |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------|----------|----------|------|------------|
| F19             | Temperature control differential for compressor activation with high humidity level                                                                        | 2.0/ 3.6 | 0.1/ 0.2 | 20/ 36   | Δ °C/ °F | M    | NO         |
| F2              | Evaporator fans with compressor off:<br>0 = see F0; 1 = always off with compressor off;<br>2 = on for anti-stratification;<br>3 = on for humidity control. | 1        | 0        | 3        | -        | S    | NO         |
| F20             | Modulating evaporator fan speed with low humidity level                                                                                                    | 10       | 0        | 100      | %        | M    | NO         |
| F21             | Modulating evaporator fan speed with medium humidity level                                                                                                 | 20       | 0        | 100      | %        | M    | NO         |
| F22             | Modulating evaporator fan speed with high humidity level                                                                                                   | 30       | 0        | 100      | %        | M    | NO         |
| F3              | Evaporator fans during defrosts: 0 = on; 1 = off.                                                                                                          | 1        | 0        | 1        | -        | S    | NO         |
| F4              | Condenser fan deactivation temperature                                                                                                                     | 40/ 104  | -50/ -58 | 200/ 392 | °C/°F    | S    | NO         |
| F4r             | Humidification output during defrosts:<br>0 = active based on humidity control;<br>1 = deactivated during defrosts                                         | 1        | 0        | 1        | -        | M    | NO         |
| F5              | Evaporator fan cut-off temperature (hyst. 1°C)                                                                                                             | 5/41     | F1       | 200/392  | °C/°F    | M    | NO         |
| F5d             | Condenser fan activation differential                                                                                                                      | 5/ 9     | 0.1/ 0.2 | 60/ 108  | Δ °C/ °F | S    | NO         |
| F6              | Maximum evaporator fan speed                                                                                                                               | 100      | F7       | 100      | %        | M    | NO         |
| F7              | Minimum evaporator fan speed                                                                                                                               | 0        | 0        | F6       | %        | M    | NO         |
| F7h             | Minimum evaporator fan speed during humidification                                                                                                         | 10       | 0        | 100      | %        | M    | NO         |
| F8              | Evaporator fan start-up time<br>(0 = function disabled)                                                                                                    | 0        | 0        | 240      | s        | M    | NO         |
| FCC             | Modulating condenser fan cut-off temperature                                                                                                               | 2/ 3.6   | 0        | 50/ 90   | °C/°F    | M    | NO         |
| FCH             | Maximum modulating condenser fan speed                                                                                                                     | 100      | 0        | 100      | %        | M    | NO         |
| FCL             | Minimum modulating condenser fan speed                                                                                                                     | 0        | 0        | 100      | %        | M    | NO         |
| Fct_ALr_disable | Disable "Display alarms" direct function:<br>0 = direct function visible (if available);<br>1 = direct function not visible.                               | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Auc_disable | Disable "Activate auxiliary output" direct function - see Fct_ALr_disable                                                                                  | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_BtE_disable | Disable "Enable Bluetooth" direct function - see Fct_ALr_disable                                                                                           | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_CnC_disable | Disable "Activate continuous cycle" direct function - see Fct_ALr_disable                                                                                  | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_dFM_disable | Disable "Start defrost" direct function - see Fct_ALr_disable                                                                                              | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Ec1_disable | Disable "Load embedded configurazion 1" direct function - see Fct_ALr_disable                                                                              | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Ec2_disable | Disable "Load embedded configurazion 2" direct function - see Fct_ALr_disable                                                                              | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Eco_disable | Disable "Activate ECO mode" direct function - see Fct_ALr_disable                                                                                          | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Fr_disable  | Disable "Firmware version" direct function - see Fct_ALr_disable                                                                                           | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_HAC_disable | Disable "Direct access to HACCP menu" direct function - see Fct_ALr_disable                                                                                | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_HL_disable  | Disable "Dim Light" direct function - see Fct_ALr_disable                                                                                                  | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_HU_disable  | Disable "Set humidity level" direct function - see Fct_ALr_disable                                                                                         | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Lht_disable | Disable "Activate lights" direct function - see Fct_ALr_disable                                                                                            | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_nFE_disable | Disable "Enable NFC memory reading" direct function - see Fct_ALr_disable                                                                                  | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_OnF_disable | Disable "Unit On/Off" direct function - see Fct_ALr_disable                                                                                                | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Pd_disable  | Disable "Activate pull down" direct function - see Fct_ALr_disable                                                                                         | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_rH_disable  | Disable "Maximum value of control probe" direct function - see Fct_ALr_disable                                                                             | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_rL_disable  | Disable "Minimum value of control probe" direct function - see Fct_ALr_disable                                                                             | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_rTL_disable | Disable "Reset min/max control probe" direct function - see Fct_ALr_disable                                                                                | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_SAh_disable | Disable "Display alarm log" direct function - see Fct_ALr_disable                                                                                          | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Sc_disable  | Disable "Condenser probe" direct function - see Fct_ALr_disable                                                                                            | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Sc1_disable | Disable "Quick Set point 1" direct function - see Fct_ALr_disable                                                                                          | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Sc2_disable | Disable "Quick Set point 2" direct function - see Fct_ALr_disable                                                                                          | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Sc3_disable | Disable "Quick Set point 3" direct function - see Fct_ALr_disable                                                                                          | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Sd_disable  | Disable "Defrost probe" direct function - see Fct_ALr_disable                                                                                              | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_SHu_disable | Disable "Humidity probe" direct function - see Fct_ALr_disable                                                                                             | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Sm_disable  | Disable "Outlet probe" direct function - see Fct_ALr_disable                                                                                               | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_SPr_disable | Disable "Product probe" direct function - see Fct_ALr_disable                                                                                              | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_SrG_disable | Disable "Control probe" direct function - see Fct_ALr_disable                                                                                              | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_St_disable  | Disable "Set control set point" direct function - see Fct_ALr_disable                                                                                      | 0        | 0        | 1        | -        | (**) | NO         |
| Fct_Sth_disable | Disable "Set humidity set point" direct function - see Fct_ALr_disable                                                                                     | 0        | 0        | 1        | -        | (**) | NO         |
| Fd              | Post-dripping time after defrost<br>(fans off with control active)                                                                                         | 2        | 0        | 15       | min      | M    | NO         |

| Code          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Def.   | Min      | Max     | UOM     | User | User term. |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|----------|---------|---------|------|------------|
| Fd0           | Evaporator fan ON time for anti-stratification during the day                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 5      | 1        | 100     | min     | M    | NO         |
| FdF           | Evaporator fan OFF time for anti-stratification during the day<br>(0 = always ON during the day)                                                                                                                                                                                                                                                                                                                                                                                                                             | 10     | 0        | 100     | min     | M    | NO         |
| Fn0           | Evaporator fan ON time for anti-stratification at night                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 5      | 1        | 100     | min     | M    | NO         |
| FnF           | Evaporator fan OFF time for anti-stratification at night<br>(0 = always ON at night)                                                                                                                                                                                                                                                                                                                                                                                                                                         | 20     | 0        | 100     | min     | M    | NO         |
| Fpd           | Evaporator fans during post-dripping:<br>0 = on; 1 = off.                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 1      | 0        | 1       | -       | M    | NO         |
| Frd           | Evaporator fan activation differential<br>(including variable speed)                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 2/ 3.6 | 0.1/ 0.2 | 20/ 36  | Δ °C/°F | S    | NO         |
| FSh           | Modulating evaporator fan speed in dehumidification                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 40     | 0        | 100     | %       | M    | NO         |
| GFA_1         | Generic alarm function, control probe 1<br>0 = not configured;<br>1 = outlet temperature (Sm);<br>2 = defrost temperature (Sd);<br>3 = intake temperature (Sr);<br>4 = not used;<br>5 = not used;<br>6 = auxiliary evaporator defrost temperature (Sd2);<br>7 = auxiliary probe 1;<br>8 = auxiliary probe 2;<br>9 = ambient temperature;<br>10 = not used;<br>11 = glass temperature;<br>12 = not used;<br>13 = condensing temperature;<br>14 = humidity;<br>15 = frost protection temperature;<br>16 = product temperature. | 0      | 0        | 16      | -       | M    | NO         |
| GFA_2         | Generic alarm function, control probe 2 - see GFA_1                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 0      | 0        | 20      | -       | M    | NO         |
| GFA_D         | Generic alarm function, differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0.1    | 0.1      | 99.9    | -       | S    | NO         |
| GFA_De        | General alarm function, delay                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 0      | 0        | 30000   | S       | S    | NO         |
| GFA_E         | Generic alarm function, enable<br>0 = always; 1 = unit ON; 2 = unit OFF;<br>3 = defrost; 4 = not used;<br>5 = continuous cycle; 6 = duty setting; 7 = standby;<br>8 = compressor or reverse output active;<br>9 = door open; 10 = active alarm.                                                                                                                                                                                                                                                                              | 8      | 0        | 10      | -       | M    | NO         |
| GFA_Hth       | Generic alarm function, high temperature threshold                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 0      | GFA_Lth  | 999     | -       | S    | NO         |
| GFA_Lth       | General alarm function, low temperature threshold                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | 0      | -99      | GFA_Hth | -       | S    | NO         |
| GFM_1         | Generic modulating function, control probe 1 - see GFA_1                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0      | 0        | 20      | -       | M    | NO         |
| GFM_2         | Generic modulating function, control probe 2 - see GFA_1                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0      | 0        | 20      | -       | M    | NO         |
| GFM_CD        | Generic modulating function, cut-off differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | 0.1    | 0.1      | 20      | -       | S    | NO         |
| GFM_D         | Generic modulating function, differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0.1    | 0.1      | 99.9    | -       | S    | NO         |
| GFM_E         | Generic modulating function, enable - see GFA_E                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | 8      | 0        | 10      | -       | M    | NO         |
| GFM_H         | Generic modulating function, hysteresis                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 0.1    | 0.1      | 20      | -       | M    | NO         |
| GFM_Kp        | Generic modulating function, proportional gain                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | 0      | 0        | 100     | -       | M    | NO         |
| GFM_Max       | Generic modulating function, max output value                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 0      | 0        | 100     | %       | M    | NO         |
| GFM_Min       | Generic modulating function, min output value                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 0      | 0        | 100     | %       | M    | NO         |
| GFM_S         | Generic modulating function, set point                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | 0      | -99      | 999     | -       | S    | NO         |
| GFM_T         | Generic modulating function, type:<br>0 = direct; 1 = reverse.                                                                                                                                                                                                                                                                                                                                                                                                                                                               | 0      | 0        | 1       | -       | M    | NO         |
| GFM_Td        | Generic modulating function, derivative time                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | 0      | 0        | 100     | s       | S    | NO         |
| GFM_Ti        | Generic modulating function, integral time                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 0      | 0        | 900     | s       | S    | NO         |
| GFS_1         | Generic On/Off function, control probe 1 - see GFA_1                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0      | 0        | 16      | -       | M    | NO         |
| GFS_2         | Generic On/Off function, control probe 2 - see GFA_1                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0      | 0        | 16      | -       | M    | NO         |
| GFS_D         | Generic On/Off function, differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | 0      | 0        | 99.9    | -       | S    | NO         |
| GFS_E         | Generic On/Off function, enable - see GFA_E                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | 8      | 0        | 10      | -       | M    | NO         |
| GFS_S         | Generic On/Off function, set point                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 0      | -99      | 999     | -       | M    | NO         |
| GFS_T         | Generic On/Off function, type:<br>0 = direct; 1 = reverse.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 0      | 0        | 1       | -       | M    | NO         |
| H0            | Serial address                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | 1      | 1        | 247     | -       | S    | YES        |
| H10           | BMS serial port baud rate (bit/s)<br>0 = 1200                      3 = 9600                      6 = 57600<br>1 = 2400                      4 = 19200                      7 = 115200<br>2 = 4800                      5 = 38400                                                                                                                                                                                                                                                                                             | 4      | 0        | 8       | -       | S    | YES        |
| H11           | BMS serial port configuration (stop bits and parity)<br>0 = 1 stop bit, no parity; 1 = 2 stop bits, no parity;<br>2 = 1 stop bit, even parity; 3 = 2 stop bits, even parity;<br>4 = 1 stop bit, odd parity; 5 = 2 stop bits, odd parity;                                                                                                                                                                                                                                                                                     | 1      | 0        | 5       | -       | S    | YES        |
| H14           | Time light stays on after closing the door                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 0      | 0        | 240     | min     | U    | NO         |
| H8            | Output switched with time bands:<br>0 = Light;<br>1 = AUX.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 0      | 0        | 1       | -       | S    | NO         |
| HA1, HA2, HA3 | Activation date and time of the first, second and third type HA alarm                                                                                                                                                                                                                                                                                                                                                                                                                                                        | -      | -        | -       | -       | U    | NO         |
| HAn           | Number of type HA alarms                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0      | 0        | 6       | -       | U    | YES        |
| Hb            | Buzzer: 0 = disabled; 1 = enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 1      | 0        | 1       | -       | U    | YES        |
| Hdh           | Delta for anti-heating function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | 0      | 0        | 200/360 | Δ °C/°F | M    | NO         |
| HF1, HF2, HF3 | Activation date and time of the first, second and third type HF alarm                                                                                                                                                                                                                                                                                                                                                                                                                                                        | -      | -        | -       | -       | U    | NO         |
| HFn           | Number of type HF alarms                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0      | 0        | 6       | -       | S    | YES        |
| HL            | Modulating light output activation percentage:<br>0 = 0%; 1 = 25%; 2 = 50%; 3 = 75%; 4 = 100%.                                                                                                                                                                                                                                                                                                                                                                                                                               | 2      | 0        | 4       | -       | U    | NO         |
| HMP           | Operating hour threshold for maintenance alarm                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | hx1000 | 0        | 45      | 0       | M    | NO         |

| Code                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Def.    | Min        | Max        | UOM     | User | User term.      |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|------------|------------|---------|------|-----------------|
| HMr                 | Reset operating hours                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | -       | 0          | 1          | 0       | S    | NO              |
| Htd                 | HACCP alarm delay (0 = monitoring disabled)                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 0       | 0          | 240        | min     | S    | NO              |
| HU                  | Humidity level: 0: low; 1: medium; 2: high.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 1       | 0          | 2          | -       | U    | YES             |
| IS                  | Working configuration                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0       | 0          | IS_Max     | -       | S    | YES             |
| IS_max              | Number of embedded configurations                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | 0       | 0          | 999        | -       | M    | NO              |
| MA1                 | Test mode, activate analogue output 1:<br>0 = disabled; 1 = automatic; 2 = activated at the value of MAr1.                                                                                                                                                                                                                                                                                                                                                                                                    | 0       | 0          | 1          | -       | S    | NO              |
| MA2                 | Test mode, activate analogue output 2 - see MA1                                                                                                                                                                                                                                                                                                                                                                                                                                                               | 0       | 0          | 1          | -       | S    | NO              |
| MAr1                | Test mode, analogue output 1 request                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 0       | 0          | 100        | %       | S    | NO              |
| MAr2                | Test mode, analogue output 2 request                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 0       | 0          | 100        | %       | S    | NO              |
| Mr1                 | Test mode, activate relay 1:<br>0 = disabled; 1 = automatic; 2 = activated.                                                                                                                                                                                                                                                                                                                                                                                                                                   | 1       | 0          | 2          | -       | S    | NO              |
| Mr2                 | Test mode, activate relay 2 - see Mr1                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 1       | 0          | 2          | -       | S    | NO              |
| Mr3                 | Test mode, activate relay 3 - see Mr1                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 1       | 0          | 2          | -       | S    | NO              |
| Mr4                 | Test mode, activate relay 4 - see Mr1                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 1       | 0          | 2          | -       | S    | NO              |
| Mr5                 | Test mode, activate relay 5 - see Mr1                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 1       | 0          | 2          | -       | S    | NO              |
| Mr6                 | Test mode, activate relay 6 - see Mr1                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 1       | 0          | 2          | -       | S    | NO              |
| Mt                  | Manual mode duration (0 = manual mode always active)                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 10      | 0          | 90         | min     | S    | NO              |
| nFE                 | Enable NFC memory:<br>0 = copy parameters disabled; 1 = copy parameters enabled.                                                                                                                                                                                                                                                                                                                                                                                                                              | 1       | 0          | 1          | -       | M    | NO              |
| OfT                 | Gasket heater OFF time                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | 3       | 0          | 250        | min     | M    | NO              |
| On                  | On/Off command<br>0 = Off; 1 = On.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | 1       | 0          | 1          | -       | U    | YES<br>(button) |
| OnT                 | Gasket heater ON time                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 5       | 0          | 250        | min     | M    | NO              |
| PDM                 | Manufacturer password (OEM)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 44      | 0          | 999        | -       | M    | NO              |
| PDS                 | Service password                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | 22      | 0          | 999        | -       | S    | NO              |
| PDU                 | User password                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | 0       | 0          | 999        | -       | U    | NO              |
| r1                  | Minimum set point                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | -50/-58 | -99/-146.2 | r2         | °C/°F   | M    | NO              |
| r2                  | Maximum set point                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | 50/122  | r1         | 200/392    | °C/°F   | M    | NO              |
| r30                 | Control mode:<br>0 = direct with defrost; 1 = direct; 2 = reverse                                                                                                                                                                                                                                                                                                                                                                                                                                             | 0       | 0          | 2          | -       | M    | NO              |
| r4                  | Automatic night set point variation                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 3/5.4   | -50/-90    | 50/90      | Δ °C/°F | S    | NO              |
| r4d                 | Temperature control differential in ECO mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | 4/7.2   | 0.1/0.2    | 99.9/179.2 | Δ °C/°F | S    | NO              |
| r5c                 | Select probe to monitor:<br>0 = not configured;<br>1 = outlet temperature (Sm);<br>2 = defrost temperature (Sd);<br>3 = intake temperature (Sr);<br>4 = not used;<br>5 = not used;<br>6 = auxiliary evaporator defrost temperature (Sd2);<br>7 = auxiliary probe 1;<br>8 = auxiliary probe 2;<br>9 = ambient temperature;<br>10 = not used;<br>11 = glass temperature;<br>12 = not used;<br>13 = condensing temperature;<br>14 = humidity;<br>15 = frost protection temperature;<br>16 = product temperature. | 3       | 0          | 16         | -       | M    | NO              |
| r6a                 | Control probe for night-time operation:<br>0 = virtual probe Sv;<br>1 = intake temperature probe Sr                                                                                                                                                                                                                                                                                                                                                                                                           | 0       | 0          | 1          | -       | S    | NO              |
| rAL                 | Reset alarm log                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | 0       | 0          | 1          | -       | S    | YES             |
| rd                  | Temperature control differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | 2/3.6   | 0.1/0.2    | 99.9/179.2 | Δ °C/°F | S    | YES             |
| rdh                 | Humidity control differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | 5       | 0.1        | 99.9       | % rH    | S    | YES             |
| Rdrh                | Gasket heater control differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | 2/3.6   | 0.1/0.2    | 20/36      | Δ °C/°F | M    | NO              |
| RelayActTestMode[1] | Test via BMS serial port, activate relay 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0       | 0          | 1          | -       | (*)  | NO              |
| RelayActTestMode[2] | Test via BMS serial port, activate relay 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0       | 0          | 1          | -       | (*)  | NO              |
| RelayActTestMode[3] | Test via BMS serial port, activate relay 3                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0       | 0          | 1          | -       | (*)  | NO              |
| RelayActTestMode[4] | Test via BMS serial port, activate relay 4                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0       | 0          | 1          | -       | (*)  | NO              |
| RelayActTestMode[5] | Test via BMS serial port, activate relay 5                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0       | 0          | 1          | -       | (*)  | NO              |
| RelayActTestMode[6] | Test via BMS serial port, activate relay 6                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0       | 0          | 1          | -       | (*)  | NO              |
| rHP                 | Reset HACCP event log                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0       | 0          | 1          | -       | U    | YES             |
| rHt                 | Anti-sweat heater or fan activation time<br>(0 = function disabled)                                                                                                                                                                                                                                                                                                                                                                                                                                           | 5       | 0          | 180        | min     | M    | NO              |
| rHU                 | Anti-sweat heater or fan activation %<br>(0 = function disabled)                                                                                                                                                                                                                                                                                                                                                                                                                                              | 70      | 0          | 100        | %       | M    | NO              |
| rIA                 | Immediate external alarm digital input logic:<br>0 = direct logic;<br>1 = reverse logic.                                                                                                                                                                                                                                                                                                                                                                                                                      | 0       | 0          | 1          | -       | S    | NO              |
| rIb                 | Delayed external alarm digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 0       | 0          | 1          | -       | S    | NO              |
| rIc                 | Enable defrost digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | 0       | 0          | 1          | -       | S    | NO              |
| rId                 | Start defrost digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 0       | 0          | 1          | -       | S    | NO              |
| rIE                 | Door switch with compressor OFF digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                 | 0       | 0          | 1          | -       | S    | NO              |
| rIF                 | Remote ON/OFF digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 0       | 0          | 1          | -       | S    | NO              |
| rIG                 | Curtain switch digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | 0       | 0          | 1          | -       | S    | NO              |
| rIH                 | Start/stop continuous cycle digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0       | 0          | 1          | -       | S    | NO              |
| rIo                 | Working parameter set changeover digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                | 0       | 0          | 1          | -       | S    | NO              |
| rIP                 | Door switch without compressor OFF digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                              | 0       | 0          | 1          | -       | S    | NO              |
| rIS                 | Generic function alarm digital input logic - see rIA                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 0       | 0          | 1          | -       | S    | NO              |

| Code        | Description                                                                                                                                                      | Def.      | Min      | Max      | UOM     | User | User term. |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|----------|----------|---------|------|------------|
| rlt         | Low pressure switch digital input logic - see rIA                                                                                                                | 0         | 0        | 1        | -       | S    | NO         |
| rlU         | AUX output activation digital input logic - see rIA                                                                                                              | 0         | 0        | 1        | -       | S    | NO         |
| rM          | Enable temperature monitoring:<br>0 = disabled;<br>1 = enabled                                                                                                   | 0         | 0        | 1        | -       | S    | YES        |
| rn          | Dead band                                                                                                                                                        | 4/ 7.2    | 0        | 60/ 108  | Δ °C/°F | S    | NO         |
| rnH         | Dead band for humidity control                                                                                                                                   | 5         | 0        | 50.0     | Δ % rH  | S    | NO         |
| ro          | Control offset with probe error                                                                                                                                  | 0         | 0        | 20/ 36   | Δ °C/°F | M    | NO         |
| rOA         | Compressor digital output logic:<br>0=direct; 1=reverse                                                                                                          | 0         | 0        | 1        | -       | S    | NO         |
| rOb         | Alarm digital output logic - see rOA                                                                                                                             | 0         | 0        | 1        | -       | S    | NO         |
| rOc         | AUX auxiliary digital output logic - see rOA                                                                                                                     | 0         | 0        | 1        | -       | S    | NO         |
| rOE         | Light digital output logic - see rOA                                                                                                                             | 0         | 0        | 1        | -       | S    | NO         |
| rOG         | Defrost digital output logic - see rOA                                                                                                                           | 0         | 0        | 1        | -       | S    | NO         |
| rOH         | Auxiliary evaporator defrost digital output logic - see rOA                                                                                                      | 0         | 0        | 1        | -       | S    | NO         |
| rOI         | Evaporator fan digital output logic - see rOA                                                                                                                    | 0         | 0        | 1        | -       | S    | NO         |
| rOj         | Dehumidification digital output logic - see rOA                                                                                                                  | 0         | 0        | 1        | -       | S    | NO         |
| rOk         | Auxiliary compressor without rotation digital output logic - see rOA                                                                                             | 0         | 0        | 1        | -       | S    | NO         |
| rOn         | Pump down valve digital output logic - see rOA                                                                                                                   | 0         | 0        | 1        | -       | S    | NO         |
| rOP         | Drain heater digital output logic - see rOA                                                                                                                      | 0         | 0        | 1        | -       | S    | NO         |
| rOq         | Anti-sweat heater digital output logic - see rOA                                                                                                                 | 0         | 0        | 1        | -       | S    | NO         |
| rOS         | Generic On/Off function digital output logic - see rOA                                                                                                           | 0         | 0        | 1        | -       | S    | NO         |
| rOt         | Condenser fan digital output logic - see rOA                                                                                                                     | 0         | 0        | 1        | -       | S    | NO         |
| rOu         | Humidification digital output logic - see rOA                                                                                                                    | 0         | 0        | 1        | -       | S    | NO         |
| rOv         | Reverse digital output with dead band control logic - see rOA                                                                                                    | 0         | 0        | 1        | -       | S    | NO         |
| rOw         | Auxiliary parallel compressor digital output logic - see rOA                                                                                                     | 0         | 0        | 1        | -       | S    | NO         |
| rOx         | Gasket heater digital output logic - see rOA                                                                                                                     | 0         | 0        | 1        | -       | S    | NO         |
| rOy         | Auxiliary compressor with rotation digital output logic - see rOA                                                                                                | 0         | 0        | 1        | -       | S    | NO         |
| rOz         | External dehumidifier digital output logic - see rOA                                                                                                             | 0         | 0        | 1        | -       | S    | NO         |
| rr          | Reverse output differential                                                                                                                                      | 2/ 3.6    | 0        | 20/ 36   | Δ °C/°F | S    | NO         |
| rrH         | Dehumidification differential                                                                                                                                    | 5         | 0        | 50.0     | Δ % rH  | S    | NO         |
| rS1         | Working parameter set associated with open digital input<br>(see par. Dlo)                                                                                       | 1         | 0        | IS_max   | -       | M    | NO         |
| rS2         | Working parameter set associated with closed digital input<br>(see par. Dlo)                                                                                     | 2         | 0        | IS_max   | -       | M    | NO         |
| rSA         | Reset alarms                                                                                                                                                     | 0         | 0        | 1        | -       | S    | YES        |
| rSC         | Restore default values                                                                                                                                           | 0         | 0        | 1        | -       | S    | YES        |
| rtL         | Reset monitoring period                                                                                                                                          | 0         | 0        | 1        | -       | U    | YES        |
| Sc1         | Custom temperature set point 1                                                                                                                                   | 0         | r1       | r2       | °C/°F   | M    | NO         |
| Sc2         | Custom temperature set point 2                                                                                                                                   | 0         | r1       | r2       | °C/°F   | M    | NO         |
| Sc3         | Custom temperature set point 3                                                                                                                                   | 0         | r1       | r2       | °C/°F   | M    | NO         |
| Sh1         | Custom humidity set point 1                                                                                                                                      | 0         | 0        | 100      | % rH    | M    | NO         |
| Sh2         | Custom humidity set point 2                                                                                                                                      | 0         | 0        | 100      | % rH    | M    | NO         |
| Sh3         | Custom humidity set point 3                                                                                                                                      | 0         | 0        | 100      | % rH    | M    | NO         |
| St          | Temperature control set point                                                                                                                                    | 50/ 122   | r1       | r2       | °C/°F   | U    | YES        |
| St_idx      | Custom set point index                                                                                                                                           | 0         | 0        | 3        | -       | M    | NO         |
| Sth         | Humidity control set point                                                                                                                                       | 90        | 0.0      | 100.0    | % rH    | U    | YES        |
| Strh        | Gasket heater control set point                                                                                                                                  | -18/ -0.4 | -50/ -58 | 200/392  | °C/°F   | S    | NO         |
| td1..8-d    | Defrost 1 to 8 - day:<br>0 = event disabled; 1-7 = Monday to Sunday;<br>8 = Monday to Friday; 9 = Monday to Saturday;<br>10 = Saturday & Sunday; 11 = every day. | 0         | 0        | 11       | -       | S    | NO         |
| td1..8-hh   | Defrost 1 to 8 - hours                                                                                                                                           | 0         | 0        | 23       | hours   | S    | NO         |
| td1..8-mm   | Defrost 1 to 8 - minutes                                                                                                                                         | 0         | 0        | 59       | minutes | S    | NO         |
| td1..8-time | Defrost 1 to 8 (Applica)                                                                                                                                         | 0:00:00   | 0:00:00  | 23:59:59 | -       | S    | NO         |
| TDL         | Differential to enable humidity control                                                                                                                          | 0         | 0        | 20/ 36   | Δ °C/°F | S    | NO         |
| tE1..8-d    | End time band 1 to 8 - day, see (td1..8-d)                                                                                                                       | 0         | 0        | 11       | -       | U    | NO         |
| tE1..8-hh   | End time band 1 to 8 - hours                                                                                                                                     | 0         | 0        | 23       | hours   | U    | NO         |
| tE1..8-mm   | End time band 1 to 8 - minutes                                                                                                                                   | 0         | 0        | 59       | minutes | U    | NO         |
| tE1..8-time | End time band 1 to 8 (Applica)                                                                                                                                   | 0:00:00   | 0:00:00  | 23:59:59 | -       | U    | NO         |
| TestMode    | Enable test via BMS serial port                                                                                                                                  | 0         | 0        | 255      | -       | (*)  | NO         |
| THL         | Maximum temperature to enable humidity control                                                                                                                   | 0         | -60/ -76 | 60/ 140  | °C/°F   | M    | NO         |
| TLL         | Minimum temperature to enable humidity control                                                                                                                   | 0         | -60/ -76 | 60/ 140  | °C/°F   | M    | NO         |
| tS1..8-d    | Start time band 1 to 8 - day, see (td1..8-d)                                                                                                                     | 0         | 0        | 11       | -       | U    | NO         |
| tS1..8-hh   | Start time band 1 to 8 - hours                                                                                                                                   | 0         | 0        | 23       | hours   | U    | NO         |
| tS1..8-mm   | Start time band 1 to 8 - minutes                                                                                                                                 | 0         | 0        | 59       | minutes | U    | NO         |
| tS1..8-time | Start time band 1 to 8 (Applica)                                                                                                                                 | 0:00:00   | 0:00:00  | 23:59:59 | -       | U    | NO         |
| ucd         | Compressor stop delay after HLVP protection activated                                                                                                            | 5         | 0        | 60       | s       | M    | NO         |
| udE         | Enable display of HLVP protection alarms (EHI and ELO, see alarm table)                                                                                          | 0         | 0        | 1        | -       | M    | NO         |
| uHi         | High voltage protection start threshold                                                                                                                          | 245       | 0        | 350      | V       | M    | NO         |
| uHo         | High voltage protection end threshold                                                                                                                            | 255       | 0        | 350      | V       | M    | NO         |
| uEn         | Enable HLVP protection: 0 = disabled; 1 = enabled.                                                                                                               | 0         | 0        | 1        | -       | M    | NO         |
| uLi         | Low voltage protection start threshold                                                                                                                           | 205       | 0        | 350      | V       | M    | NO         |
| uLo         | Low voltage protection end threshold                                                                                                                             | 195       | 0        | 350      | V       | M    | NO         |
| uof         | OFF time for humidity duty setting operation                                                                                                                     | 60        | c2       | 120      | min     | M    | NO         |
| uon         | ON time for duty setting operation                                                                                                                               | 10        | c3       | 120      | min     | M    | NO         |

**Tab. 7.a**

(\*) Parameter only available via BMS serial.

(\*\*) Parameter only available via the configuration tool.

## 7.2 Configuring the iJF controller via the Applica app

The "Applica" app can be used to configure the controller from a mobile device (smartphone, tablet), via NFC (Near Field Communication) or BLE (Bluetooth Low Energy). The app is used to configure the commissioning parameters and set groups of preset parameters according to specific needs (configurations).

### Procedure:

1. download the CAREL "Applica" app;
2. (on the mobile device) start the app for commissioning the controller;
3. activate NFC and/or BLE;
4. If using an NFC connection: move the device near to the controller, maximum distance 10 mm, to upload the configuration parameters;
5. If using a BLE connection:
  - 1. select "BLUETOOTH SCAN" to view the iJF controller devices available within a range of 10 m.
  - 2. select the device to connect to

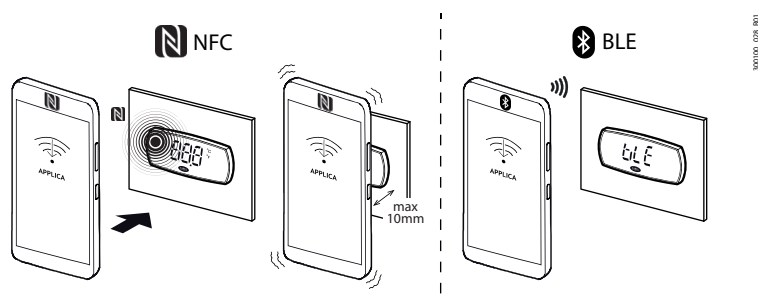


Fig. 7.a

**Notice:** during the first connection, the Applica app aligns itself with the software version on the iJF controller via a cloud connection; this means a mobile data connection is needed at least for this first connection. If the data connection is not available, the required packet can be retrieved from the cloud as soon as the connection is restored (access the "Packet Manager" section of Applica).

Applica makes it easy to set the parameters on the iJF controller and manage parameter configurations using the hamburger menu at the top left of the screen.

## 7.2.1 Configurations

Parameter configurations can be created and saved, and then uploaded to the iJF controller using the configuration software or Applica app. Configurations can be created either using the default values loaded by Carel, or starting from user-set values on the iJF controller, or alternatively only certain specific values can be modified.

To create a configuration using the SPARK configuration software - released under license directly by Carel - and starting from the default values on the controller, connect the PC to the BMS connector (RS485) using converter P/N CVSTDUMOR0, as shown in the figure:

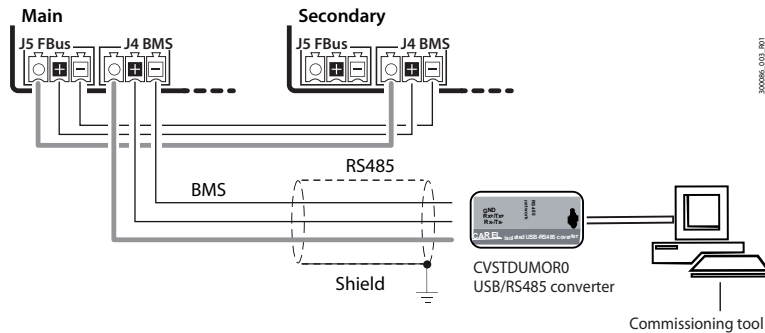


Fig. 7.b

Proceed as follows:

1. After starting the configuration software, from the "File" tab open the configuration file (workspace) provided by Carel;
2. In the "Target" tab add a "target", i.e. the iJF controller to communicate with.
3. Set the type of serial communication and change the connection parameters (default for the iJF baud rate 19200, parity None and 2 stop bit)
4. Select "Connect".
5. From the "Configurations" tab, select "Add configuration" (e.g. 1).
6. After having created and selected the chosen configuration, select "Copy values to configuration".
7. The "Configuration value" column will now be populated with the current values on the iJF controller. The values can now be modified to create a custom configuration.
8. The configuration created as above can be immediately uploaded to the iJF controller by selecting "Applica configuration" or saved for future use by selecting "Export configuration".



**Notice:** to create a configuration based on the default values loaded by Carel on the iJF controller, simply follow the same procedure as described above, and in step 6 select "Applica default values" rather than "Copy values to configuration".

## 7.2.2 Profiles

Different profiles can be created for displaying the parameters using the configuration software.

Proceed as follows:

1. After starting the configuration software, open the configuration file provided by Carel;
2. From the "Profiles" tab select "Add profile";
3. Select "Profiling";
4. Select the variables to assign to the profile. These will only be the variables that are visible via the configuration/commissioning software and the Applica app to any M-level user who has the password for profile MyProfile1;
5. Now, selecting profile MyProfile1, the variables to assign to the profile as read-only can be selected by checking the check box in the corresponding column;
6. Select "Edit" to set the password associated with the profile;
7. The profile is now ready to be exported; select "Export profile" and upload it to the cloud service used by the Applica app.

## 8. TECHNICAL SPECIFICATIONS

|                                  |                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------------|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Physical specifications</b>   | Case                                       | Polycarbonate                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                                  | Ball pressure test temperature             | 125 °C                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|                                  | Ingress protection                         | IEC:<br><ul style="list-style-type: none"> <li>• Rear: IP20</li> <li>• Front: IP65 (Panel small, Panel large with springs, Split small without HMI cable, HMI small, HMI large with springs); IP45 (Split large without HMI cable); IP43 (Panel large without springs, HMI large without springs); IP20 (Split with HMI cable)</li> </ul> UL:<br><ul style="list-style-type: none"> <li>• Type 1 (Panel small, Panel large from -5°C to 60°C, Split small without HMI cable, Split large, HMI small, HMI large from -5°C to 60°C)</li> <li>• Open type (Panel large from -20°C to 60°C, HMI large from -20°C to 60°C)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                                  | Front cleaning                             | Use soft, non-abrasive cloth and neutral detergent or water                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Environmental conditions</b>  | Operating temperature                      | -20T60 °C, <90% RH non-condensing                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                  | Storage temperature                        | -40T80 °C, <90% RH non-condensing;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                  |                                            | -20T80 °C, <90% RH non condensing for models with battery                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Electrical specifications</b> | Rated power supply                         | <ul style="list-style-type: none"> <li>• 100-240 Vac (Panel, Split);</li> <li>• 12 Vdc, supplied by Carel controller SELV/Class 2 (HMI)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                  | Operating power supply voltage             | <ul style="list-style-type: none"> <li>• 90-264 Vac (Panel, Split);</li> <li>• 12 Vdc, supplied by Carel controller SELV/Class 2 (HMI)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                  | Input frequency                            | 50/60Hz (Panel, Split)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|                                  | Maximum current draw                       | <ul style="list-style-type: none"> <li>• 100 mA rms (Panel small, Split small);</li> <li>• 220 mA rms (Panel large, Split large);</li> <li>• 200 mA, power supply supplied by Carel controller SELV/Class 2 (HMI)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                                  | Min power consumption                      | 700 mW (Small, HMI)<br>800 mW (Large)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                                  | Clock                                      | Precision: 20 ppm at 25°C;<br>100 ppm in the temperature range -20T60 °C.<br>Date/time storage with controller off up to 10 years for models with battery (-20T60°C).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                                  | Software class and structure               | A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                  | Environmental pollution class              | 2 (Panel small, Split small)<br>3 (Panel large, Split large, HMI)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                  | Class of protection against electric shock | To be incorporated in class I or II appliances                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                                  | Type of action and disconnection           | 1.C                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                                  | Rated impulse voltage                      | 100 - 240 Vac input and relay output: 2.5 kV (Small)<br>100 - 240 Vac input and relay output: 4 kV (Large)<br>0.5 kV (HMI)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|                                  | Surge immunity category                    | 100 - 240 Vac input and relay outputs: II (Small)<br>100 - 240 Vac input and relay outputs: III (Large)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                                  | Control device construction                | Device to be incorporated                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|                                  | Terminal block                             | NO1, C1, NO2, NO3, NO4, NO5, C5, C6, NC6, NO6, L, N:<br><ul style="list-style-type: none"> <li>• Removable male-female 30-12 AWG/0.05-3.3 mm²</li> <li>• Screw terminals 30-14 AWG/0.05-2 mm²</li> <li>• Faston connectors</li> </ul> S1, S2, S3, S4, DI1, DI2, S1H, S2H, D1H, D2H, GND (Small, HMI):<br><ul style="list-style-type: none"> <li>• Removable male-female 30-17 AWG/0.05-1 mm²</li> <li>• Screw terminals 30-17 AWG/0.05-1 mm²</li> </ul> S1, S2, S3, S4, DI1, DI2, GND (Large):<br><ul style="list-style-type: none"> <li>• Removable male-female 30-12 AWG/0.05-3.3 mm²</li> <li>• Screw terminals 30-14 AWG/0.05-2 mm²</li> </ul> BMS, 0-5 Vrat:<br><ul style="list-style-type: none"> <li>• Removable male-female 30-17 AWG/0.05-1 mm²</li> </ul> FieldBus, 0-10 V/PWM:<br><ul style="list-style-type: none"> <li>• JST ZH connector 32-26 AWG/0.03-0.13 mm²</li> </ul> Power supply and communication with Carel controller (HMI):<br><ul style="list-style-type: none"> <li>• JST ZH connector 32-26 AWG/0.03-0.13 mm²</li> <li>• Removable male-female 30-17 AWG/0.05-1 mm²</li> <li>• Screw terminals 30-17 AWG/0.05-1 mm²</li> </ul> |
|                                  | Purpose of the controller                  | Electrical control device                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>User interface</b>            | Buzzer                                     | Built-in (Panel, HMI)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                                  | Display                                    | 3 digits, decimal point and multifunction icons (Panel, HMI); external HMI (optional, Split)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                                  | Keypad                                     | Max 6 buttons (Panel small, HMI small); max 8 buttons (Panel large, HMI large); external HMI (optional, Split)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                                  | LEDs                                       | 1 red LED and 1 white LED (Split)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Connectivity</b>              | NFC                                        | Max distance 10 mm, variable according to the mobile device used                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                                  | Bluetooth Low Energy (opt.)                | Max distance 10 m, variable according to the mobile device used                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                                  | BMS serial interface (opt.)                | RS485 not optically-isolated                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                                  | FieldBUS serial interface (opt.)           | RS485, not opto-isolated, maximum number of devices that can be connected: 20                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                                  | HMI interface                              | RS485, not opto-isolated                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                                  | TTL serial interface (opt.)                | Not opto-isolated, 3.3 V power supply, maximum number of devices connected: 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

|                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Analogue inputs<br/>(Lmax=10m)</b> | S1, S2, S3, S4:<br>NTC/ NTC-HT/ NTC-LT/ PT1000/ PTC                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | NTC: resolution 0.1°C; 10 kΩ@25°C; beta 3435; error: ±1°C in the range -50T50°C, ±3°C in the range 50T90°C<br>NTC-HT: resolution 0.1°C; 50 kΩ@25°C; beta 3977; error: ±1.5°C in the range -15T115°C, ±4°C in the range 40T-15°C and 115T150°C:<br>NTC_LT: resolution 0.1°C; 750Ω@25°C; beta 3969; error: ±1.5°C in the range -20T10°C, ±4°C in the range 80T-20°C and 10T55°C<br>PT1000: resolution 0.1°C; 1 kΩ@0°C; error: ± 1°C in the range - 60T120°C<br>PTC: resolution 0.1°C; 985 Ω@25°C; error: ±2 °C in the range -50T50°C, ±4 °C in the range 50T150°C |
|                                       | 5: 0-5 Vrat (opt.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 0-5 Vrat: error 2% fs, typical 1%                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                                       | S1H: D1H configurable as NTC S2H:<br>NTC (models IJFHL*)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | NTC: resolution 0.1°C; 10 kΩ@25°C; beta 3435; error: ±1°C in the range -50T50°C, ±3°C in the range 50T90°C                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Digital inputs</b>                 | DI1, DI2 configurable as fast digital inputs                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Voltage-free contact, not optically-isolated, typical closing current 5 mA, voltage with contact open 12 V, max contact resistance 50 Ω Fast digital inputs: 0-10 V: error 2 % fs, typical 1 %                                                                                                                                                                                                                                                                                                                                                                  |
|                                       | D1H, D2H (HMI)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Voltage-free contact, not optically-isolated, typical closing current 5 mA, voltage with contact open 12 V, max contact resistance 50 Ω                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Analogue outputs</b>               | Y1, Y2, independently configurable as DC or PWM outputs (opt.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 0-10V: 1 kΩ, 10 mA max<br>PWM: 100 Hz, max amplitude 10 V, 10 mA max                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Digital outputs (Small)</b>        | NO1, NO2, NO3, NO4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | NO1 (2 hp):<br>EN60730: 10(6) A, 250 Vac; UL60730: 16A, 250 Vac; 8FLA, 48LRA, 250 Vac; Pilot duty B300, 250 Vac<br>NO2 (8 A): EN60730: 8(3) A, 240 Vac; UL60730: 8A, 240 Vac; 2FLA, 12LRA, 240 Vac; Pilot duty C300, 240 Vac<br>NO3, NO4 (5 A): EN60730: 5(1) A, 240 Vac; UL60730: 5A, 240 Vac; 1FLA, 6LRA, 240 Vac; Pilot duty C300, 240 Vac                                                                                                                                                                                                                   |
|                                       | <b>Notice:</b><br>with screw or removable terminals, NO1: max 12 A.<br>• NO1: max 12 A;<br>• NO2+NO3+NO4: max 12 A<br>With faston terminals:<br>• NO1: max 14 A;<br>• NO2+NO3+NO4: max 14 A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Digital outputs (Large)</b>        | NO1, NO2, NO3, NO4, NO5, NO6, NC6                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | NO1, NO2, NO3, NO4 (8 A):<br>IEC60730: 8(3) A, 250 Vac;<br>UL60730: 8 A, 250 Vac; 2FLA, 12LRA, 250 Vac;<br>Pilot duty C300, 250 Vac<br>NO5 (30 A):<br>IEC60730: 20(10) A, 250 Vac;<br>UL60730: 16 A, 250 Vac;<br>16FLA, 96LRA, 250 Vac<br>NO5 (2 hp):<br>IEC60730: 10(6) A, 250 Vac;<br>UL60730: 16A, 250 Vac; 8FLA, 48LRA, 250 Vac;<br>Pilot duty B300, 250 Vac                                                                                                                                                                                                |
|                                       | <b>Notice:</b><br>• NO1+NO2: max 10 A;<br>• NO3+NO4: max 10 A.<br>NO5: 30 A or 2 hp depending on the model, see label.<br>For 30 A version, NO5:<br>• with screw or removable terminals max 12 A.<br>• with faston terminals max 16 A.<br>For 2 hp version, NO5:<br>• with all terminals max 12 A.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Probe power supply</b>             | 5 V                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 5 Vdc ± 2 % to power the 0 to 5 V ratiometric probes.<br>Maximum current delivered: 10 mA                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                                       | +V                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 12 Vdc ± 10% to power the repeater terminal                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Cable lengths</b>                  | Analogue inputs/outputs, digital inputs/ outputs, probe power                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | < 10 m                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                       | BMS and Fieldbus serial cables                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | < 500 m with shielded cable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                                       | TTL serial cables                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | < 2 m                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                       | Controller-HMI                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | < 10 m. NOTICE: in domestic environments, for connections over 2 m, in applications where controller and HMI are not installed on the same chassis, shielded cable is recommended                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Conformity</b>                     | Electrical safety compliance - LVD directive and UL certification                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | IEC/EN/UL 60730-1, CSA E60730-1, IEC 60335-1 (sections 29 & 30)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                       | Electromagnetic compatibility - EMC directive                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | IEC/EN 61000-6-1, IEC/EN 61000-6-2, IEC/EN 61000-6-3, IEC/EN 61000-6-4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                       | For use with flammable refrigerants, the controllers described in this document have been tested and found to comply with the following requirements of the IEC 60335 series standards:<br>• Annex CC of IEC 60335-2-24: 2010, referred to in clause 22.109, and Annex BB of IEC 60335-2-89: 2010, referred to in clause 22.108; components that produce arcs or sparks during normal operation have been tested and found to comply with the requirements of UL/IEC 60079-15;<br>• IEC/EN/UL 60335-2-24 (clauses 22.109, 22.110) for household refrigerators and freezers;<br>• IEC/EN/UL 60335-2-40 (clauses 22.116, 22.117) for electric heat pumps, air conditioners and dehumidifiers;<br>• IEC/EN/UL 60335-2-89 (clauses 22.108, 22.109) for commercial refrigerating appliances. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                       | The controllers have been verified for the maximum temperatures of all components, which during the tests required by IEC 60335 cl. 11 and 19 do not exceed 272°C. The acceptability of these controllers in the final application where flammable refrigerants are used needs to be reviewed and verified depending on the final application.                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                       | Wireless compliance                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | RED directive (EN 301489-1), FCC (section 15, subsection B), IC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

**Tab. 8.a**

## 8.1 Connector/cable table

| Ref.                    | Description                    | Wiring terminals                                                                                                                                           | Wire cross-section (mm <sup>2</sup> ) | Lmax (m)                                                                                                                                                                         |
|-------------------------|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| L, N                    | Controller power supply        | Removable screw terminal, 2-pin, pitch 5 mm<br>(Small without options)/5.08 mm<br>(Small with options, Large)                                              | 0.05-3.3 (30-12 AWG)                  | 10                                                                                                                                                                               |
|                         |                                | Screw terminals, 2-pin, pitch 5 mm<br>(Small without options)/5.08 mm<br>(Small with options, Large)                                                       | 0.05-2 (30-14 AWG)                    |                                                                                                                                                                                  |
|                         |                                | Faston connectors                                                                                                                                          | -                                     |                                                                                                                                                                                  |
| S1 to S3, S4<br>(Large) | Probes                         | Removable terminal;<br>5-pin, pitch 3.81 mm (Small, without options)<br>2x3 pins, pitch 3.5 mm (Small, with options)<br>4+3 pins, pitch 5.08 mm (Large)    | 0.05-3.3 (30-12 AWG)                  | 10                                                                                                                                                                               |
|                         |                                | Screw terminals:<br>5-pin, pitch 3.81 mm (Small, without options)<br>2x3 pins, pitch 3.5 mm (Small, with options)<br>4+3 pins, pitch 5.08 mm (Large)       | 0.05-2 (30-14 AWG)                    |                                                                                                                                                                                  |
| S1H                     | HMI probe                      | Removable terminal<br>Screw terminal                                                                                                                       | 0.05-1 (30-17 AWG)                    | 10                                                                                                                                                                               |
| S5, 5 V                 | Ratiometric probe power supply | Removable screw terminal, 2-pin, pitch 3.5 mm                                                                                                              | 0.05-1 (30-17 AWG)                    | 10                                                                                                                                                                               |
| ID1, ID2                | Digital inputs                 | Removable screw terminal, 5-pin, pitch 5.08 mm (Small, without options)<br>2x3 pins, pitch 3.5 mm (Small, with options)<br>4+3 pins, pitch 5.08 mm (Large) | 0.05-3.3 (30-12 AWG)                  | 10                                                                                                                                                                               |
|                         |                                | Screw terminals, 5-pin, pitch 5.08 mm<br>(Small without options)<br>2x3 pins, pitch 3.5 mm (Small, with options)<br>4+3 pins, pitch 5.08 mm (Large)        | 0.05-2 (30-14 AWG)                    |                                                                                                                                                                                  |
| ID1H, ID2H              | HMI digital inputs             | Removable screw terminal, 5-pin, pitch 3.5 mm<br>Screw terminals, 5-pin, pitch 3.5 mm                                                                      | 0.05-1 (30-17 AWG)                    | 10                                                                                                                                                                               |
| NO1 to NO6              | Digital outputs                | Removable terminal, 5-pin (Small),<br>4x3-pin (Large), pitch 5.08 mm                                                                                       | 0.05-3.3 (30-12 AWG)                  | 10                                                                                                                                                                               |
|                         |                                | Screw terminal, 5-pin (Small),<br>4x3-pin (Large), pitch 5.08 mm                                                                                           | 0.05-2 (30-14 AWG)                    |                                                                                                                                                                                  |
|                         |                                | Faston connectors                                                                                                                                          | -                                     |                                                                                                                                                                                  |
| Y1, Y2                  | 0-10 V/PWM outputs             | JST ZH connector, 4-pin, pitch 2 mm<br>- Connection cable part number<br>(see "Introduction").                                                             | 0.03-13 (32-26 AWG)                   | 10                                                                                                                                                                               |
| BMS                     | BMS serial                     | Removable screw terminal, 3-pin, pitch 3.5 mm                                                                                                              | 0.05-1 (30-17 AWG)                    | 500, 6 with shielded cable                                                                                                                                                       |
| Fieldbus                | FieldBus serial (future uses)  | JST ZH connector, 4-pin, pitch 2 mm<br>- Connection cable part number<br>(see "Introduction").                                                             | 0.03-13 (32-26 AWG)                   | 500, 6 with shielded cable                                                                                                                                                       |
| TTL                     | TTL serial                     | JST ZH connector, 4-pin, pitch 2 mm<br>- Connection cable part number<br>(see "Introduction").                                                             | 0.03-13 (32-26 AWG)                   | 2                                                                                                                                                                                |
| VCC                     | VCC serial output              | JST ZH connector, 4-pin, pitch 2 mm<br>- Connection cable part number<br>(see "Introduction").                                                             | 0.03-13 (32-26 AWG)                   | 500, 6 with shielded cable                                                                                                                                                       |
| HMI                     | HMI remote terminal            | JST ZH connector, 4-pin, pitch 2 mm<br>- Connection cable part number<br>(see "Introduction").                                                             | 0.03-13 (32-26 AWG)                   | 10                                                                                                                                                                               |
|                         |                                | Removable screw terminal, 4-pin, pitch 5.08 mm<br>Screw terminals, 4-pin, pitch 5.08 mm                                                                    | 0.05-1 (30-17 AWG)                    | <b>Notice:</b> in domestic environments, for connections over 2 m, in applications where controller and HMI are not installed on the same chassis, shielded cable is recommended |

Tab. 8.b

## 9. ALARMS AND SIGNALS

### 9.1 Signals

Signals are messages shown on the display to notify the user of the control procedures in progress (e.g. defrost) or to confirm keypad input.

| Display code | Description                             |
|--------------|-----------------------------------------|
| Ble          | Bluetooth™ connection in progress       |
| dEF          | Defrost running                         |
| Loc          | Display locked                          |
| Off          | Switch OFF                              |
| On           | Switch ON                               |
| tSt          | Test outputs via BMS serial port active |

Tab. 9.a

### 9.2 Types of alarms

The iJF controller can display two types of malfunctions:

- **warning**, when this type of error occurs, the alarm code is shown on the display, alternating with the main value, the “Service” icon  is shown on the display, however the buzzer does not sound, no relay is activated; errors belonging to this category include defrost ended after maximum time, dirty condenser, HACCP alarms, configuration errors.
- **alarms**, when this type of error occurs, the alarm code is shown on the display, alternating with the main value, and the “Service” icon  comes on, the buzzer flashes and the relay is activated; this category includes alarms for which with the relay is configured as an alarm, probe errors, temperature alarms, frost protection, communication errors with the VCC compressor, power supply over and under voltage, etc.



**Notice:**

- the digital outputs can be configured to signal the alarm status, normally open or normally closed. See “Digital outputs”.
- An alarm can also be activated from an external contact, immediate or delayed. See “Digital inputs”.

The warning and alarm signals can be immediate or delayed by parameter (see the Alarm table).

Both warnings and alarms can be reset automatically, manually or semi-automatically:

- **automatic**, when the cause is no longer present, the alarm also ceases;
- **manual**, when the cause is no longer present, the alarm remains active until manually reset by parameter;
- **semi-automatic**, reset is automatic 3 times in an hour, after which manual reset is required.

Active alarms are signalled by the buzzer (see parameter Hb) and the flashing of the “Service” icon . The alarm code is shown on the display, alternating with the main value. Pressing any button mutes the buzzer. If more than one error occurs, these are displayed in sequence. When an alarm is cleared, it is stored in the alarm log containing a maximum of five alarms, in a FIFO list (the 6th alarm overwrites the 1st alarm, and so on). The error log can be accessed from the user terminal, via supervisor or Applica app (Bluetooth connection only).

**Example**

Display after HI error.

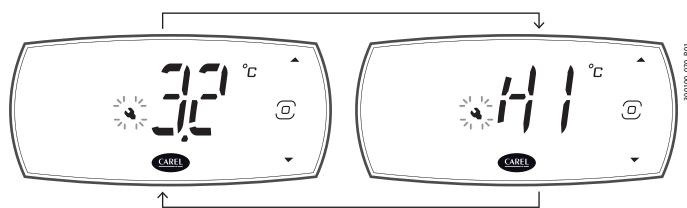


Fig. 9.a

The alarms can be reset manually using parameter rSA, from the user terminal or configuration tool, or in Applica (Bluetooth connection only) using the specific command on the Alarms page (“Service” or “Manufacturer” level access is required). If the condition that generated the alarm is still present, the alarm will be reactivated after resetting.

The alarm log can be deleted using parameter rAL, accessible from the user terminal, configuration tool or in Applica (Bluetooth connection only) using the specific command on the Alarms page (“Service” or “Manufacturer” level access is required).



**Notice:** deleting the alarm log is irreversible.

## 9.3 Alarm table

| Display code | Log code (*) | Description                                                | Delay (default) | Icon display | Alarm relay | Buzzer | Reset          | Effects on control                                                                              |
|--------------|--------------|------------------------------------------------------------|-----------------|--------------|-------------|--------|----------------|-------------------------------------------------------------------------------------------------|
| Afr          | 29           | Frost protection                                           | Afd (1 min)     | YES          | YES         | YES    | Automatic      | Compressor OFF                                                                                  |
| AtS          | 30           | Restart in pump down                                       | -               | NO           | NO          | NO     | Automatic      | -                                                                                               |
| CE           | 28           | Configuration write error                                  | -               | NO           | NO          | NO     | Automatic      | -                                                                                               |
| cht          | 17           | High condensing temperature warning                        | -               | NO           | NO          | NO     | Automatic      | -                                                                                               |
| CHt          | 18           | High condensing temperature alarm                          | Acd (0 min)     | NO           | NO          | NO     | Manual         | Compressor OFF                                                                                  |
| COM          | 34           | VCC communication error                                    | Ctd (15 s)      | YES          | YES         | YES    | Automatic      | -                                                                                               |
| dA           | 14           | Delayed alarm from external contact                        | A7 (1 min)      | YES          | YES         | YES    | Automatic      | Compressor operation in duty setting mode (par. A6); dead band, lights and auxiliary output OFF |
| dor          | 15           | Door open                                                  | Add (5 s)       | YES          | YES         | YES    | Automatic      | See "Door management"                                                                           |
| E1           | 1            | Probe 1 faulty or disconnected                             | -               | NO           | NO          | NO     | Automatic      | According to the associated function                                                            |
| E2           | 2            | Probe 2 faulty or disconnected                             | -               | NO           | NO          | NO     | Automatic      |                                                                                                 |
| E3           | 3            | Probe 3 faulty or disconnected                             | -               | NO           | NO          | NO     | Automatic      |                                                                                                 |
| E4           | 4            | Probe 4 faulty or disconnected                             | -               | NO           | NO          | NO     | Automatic      |                                                                                                 |
| E5           | 5            | Probe 5 faulty or disconnected                             | -               | NO           | NO          | NO     | Automatic      |                                                                                                 |
| E6           | 6            | Probe S1H faulty or disconnected                           | -               | NO           | NO          | NO     | Automatic      |                                                                                                 |
| E7           | 7            | Probe S2H faulty or disconnected                           | -               | NO           | NO          | NO     | Automatic      |                                                                                                 |
| Ed1          | 10           | Defrost terminated after maximum time                      | -               | NO           | NO          | NO     | Automatic      | -                                                                                               |
| Ed2          | 11           | Defrost on second evaporator terminated after maximum time | -               | NO           | NO          | NO     | Automatic      | -                                                                                               |
| EHI          | 36           | High power supply voltage alarm                            | -               | YES          | YES         | YES    | Automatic      | -                                                                                               |
| ELO          | 37           | Low power supply voltage alarm                             | -               | YES          | YES         | YES    | Automatic      | -                                                                                               |
| Etc          | 9            | Clock error                                                | -               | NO           | NO          | NO     | Manual         | Time bands disabled                                                                             |
| GHI          | 19           | Generic alarm high threshold                               | GFA_De (0 s)    | YES          | YES         | YES    | Automatic      | -                                                                                               |
| GLO          | 20           | Generic alarm low threshold                                | GFA_De (0 s)    | YES          | YES         | YES    | Automatic      | -                                                                                               |
| HA           | 21           | Type HA HACCP alarm (high temp. during operation)          | -               | NO           | NO          | NO     | Manual         | -                                                                                               |
| HF           | 22           | Type HF HACCP alarm (high temp. after blackout)            | -               | NO           | NO          | NO     | Manual         | -                                                                                               |
| HI           | 24           | High temperature                                           | Ad (120 s)      | YES          | YES         | YES    | Automatic      | -                                                                                               |
| IA           | 13           | Immediate alarm from external contact                      | -               | YES          | YES         | YES    | Automatic      | Compressor operation in duty setting mode (par. A6); dead band OFF                              |
| LO           | 23           | Low temperature                                            | Ad (120 s)      | YES          | YES         | YES    | Automatic      | -                                                                                               |
| LP           | 32           | Low pressure                                               | -               | YES          | YES         | YES    | Semi-automatic | Compressor OFF                                                                                  |
| MAn          | 38           | Output status overridden in manual mode                    | -               | YES          | YES         | YES    | Automatic      | -                                                                                               |
| Pd           | 26           | Maximum pump down time                                     | -               | YES          | YES         | YES    | Automatic      | -                                                                                               |
| rE           | 12           | Control probe faulty or disconnected                       | -               | YES          | YES         | YES    | Automatic      | Compressor operation in duty setting mode (par. c4); dead band OFF                              |
| rSF          | 31           | Refrigerant leak alarm                                     | -               | YES          | YES         | YES    | Manual         | Switch off all actuators                                                                        |
| SF           | 27           | Configuration not completed correctly                      | -               | NO           | NO          | NO     | Manual         | -                                                                                               |
| SrC          | 35           | Maintenance request                                        | -               | YES          | YES         | YES    | Manual         | -                                                                                               |
| UCF          | 33           | VCC operation error                                        | -               | YES          | YES         | YES    | Automatic      | -                                                                                               |

Tab. 9.b

(\*) This is the code used to record and display the alarm in Applca.

## 9.4 Low and high temperature alarms LO and HI

The high and low temperature alarm thresholds can be relative or absolute, depending on the value of parameter A1:

- A1 = 0: the relative thresholds AL and AH are considered and represent the deviation from the set point; the low temperature alarm is activated at set point - AL, and the high temperature alarm at set point + AH. If the set point changes, the alarm activation point also changes automatically.
- A1 = 1, the absolute thresholds ALA and AHA are considered, representing the absolute low temperature and high temperature alarm threshold, respectively. If the set point changes, the activation point remains the same.

| Par. | Description                                                                                                              | Def       | Min       | Max     | UOM     | User | User terminal |
|------|--------------------------------------------------------------------------------------------------------------------------|-----------|-----------|---------|---------|------|---------------|
| d8   | Bypass high temperature alarm time after defrost                                                                         | 30        | 1         | 240     | min     | S    | YES           |
| A0   | High and low temp. alarm reset differential                                                                              | 2         | 0.1       | 20      | °C/°F   | M    | NO            |
| A1   | Alarm thresholds (AL, AH) relative to the set point St or absolute:<br>0 = relative; 1 = absolute                        | 0         | 0         | 1       | -       | S    | YES           |
| A6   | Stop compressor with external alarm (Toff = 15 minutes, fixed):<br>0 = compressor always OFF; 100 = compressor always ON | 0         | 0         | 100     | min     | M    | NO            |
| Ad   | Delay time for high and low temp. alarms (AH, AL)                                                                        | 120       | 0         | 240     | min     | U    | YES           |
| Add  | High temp. alarm bypass time for door open                                                                               | 30        | 1         | 240     | min     | U    | YES           |
| AH   | Relative high temperature alarm threshold                                                                                | 0         | 0         | 555/999 | Δ °C/°F | U    | YES           |
| AHA  | Absolute high temperature alarm threshold                                                                                | 537/999   | -100/-148 | 537/999 | °C/°F   | U    | YES           |
| AL   | Relative low temperature alarm threshold                                                                                 | 0         | 0         | 200/360 | Δ °C/°F | U    | YES           |
| ALA  | Absolute low temperature alarm threshold                                                                                 | -100/-148 | -100/-148 | 537/999 | °C/°F   | U    | YES           |

Tab. 9.c

### Relative thresholds

Parameter AL is used to set the activation threshold for the low temperature alarm LO. The value measured by the control probe is continuously compared against the value of St-AL, and if it falls below this value for a time longer than Ad, the low temperature alarm LO is activated. The low temperature alarm LO ceases automatically when the temperature rises back above St-AL+A0. Similarly, parameter AH is used to set the activation threshold for the high temperature alarm HI. The value measured by the control probe is continuously compared against the value of St+AH, and if it rises above this value for a time longer than Ad, the high temperature alarm HI is activated. The high temperature alarm HI ceases automatically when the probe reading falls below St+AH-A0.

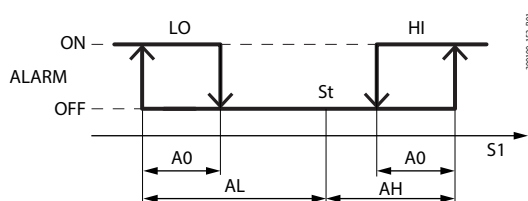


Fig. 9.b

#### Ref. Description

|    |                                           |
|----|-------------------------------------------|
| LO | Low temperature alarm                     |
| HI | High temperature alarm                    |
| S1 | Control probe                             |
| St | Set point                                 |
| AL | Relative low temperature alarm threshold  |
| AH | Relative high temperature alarm threshold |
| A0 | Return differential                       |

### Absolute thresholds

Parameter ALA is used to set the activation threshold for the low temperature alarm LO. The value measured by the control probe is continuously compared against the value of ALA, and if it falls below this value for a time longer than Ad, the low temperature alarm LO is activated. The low temperature alarm LO ceases automatically when the temperature rises back above ALA+A0. Similarly, parameter AHA is used to set the activation threshold for the high temperature alarm HI. The value measured by the control probe is continuously compared against the value of AHA, and if it rises above this value for a time longer than Ad, the high temperature alarm HI is activated.

The high temperature alarm HI ceases automatically when the probe reading falls below AHA-A0.

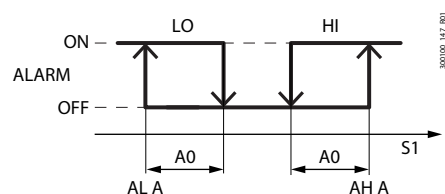


Fig. 9.c

#### Ref. Description

|    |                                 |
|----|---------------------------------|
| LO | Low temperature alarm           |
| HI | High temperature alarm          |
| S1 | Control probe                   |
| AL | Low temperature alarm threshold |
| AH | Low temperature alarm threshold |
| A0 | Return differential             |

The high temperature alarm is ignored for a time set by parameter Add after opening the door, and for parameter d8 after defrosting, to avoid false signals. Once the times set by parameter Add or d8 have elapsed, the delay set by parameter Ad starts counting and the alarm is signalled when it elapses.

The active low temperature alarm LO is signalled by the buzzer and the code LO shown on the display, while the active high temperature alarm HI is signalled by the buzzer and the code HI.

## 9.5 HACCP alarms (HACCP = Hazard Analysis and Critical Control Point)

These are specific alarms for controlling the operating temperature, recording any anomalies due to power failures or an increase in the temperature due to other causes (breakages, extreme operating conditions, user errors, etc.); see "HACCP alarm parameters and activating monitoring" for details.

Two types of potentially critical HACCP events are managed:

- type HA alarms, high temperature during operation;  
**Example:** The critical temperature was exceeded, the alarm was not managed and the temperature remained above the threshold for longer than the maximum tolerable time (thresholds defined by site HACCP procedures). The event is critical and potentially hazardous.
- type HF alarms, high temperature after power failure;  
**Example:** The unit was powered off. When restarted, the temperature is above the threshold and does not return to an acceptable level within an appropriate time (parameters defined by site HACCP procedures). The event is critical and potentially hazardous.

When an alarm occurs, the HACCP icon comes on (if featured), the display shows the alarm code, the alarm is logged and the alarm relay and buzzer are activated.

### 9.5.1 HACCP alarm parameters and activating monitoring

#### Type HA alarms

The type HA alarm is generated if during normal operation the temperature read by the control probe exceeds the high temperature threshold for the time Ad+Htd. Consequently, compared to the normal high temperature alarm already signalled by the controller, the type HA HACCP alarm is delayed by a further time Htd specifically for HACCP recording.

| Par. | Description                                  | Def | Min | Max | UOM | User | User terminal |
|------|----------------------------------------------|-----|-----|-----|-----|------|---------------|
| Htd  | HACCP alarm delay<br>0 = monitoring disabled | 0   | 0   | 240 | min | M    | NO            |

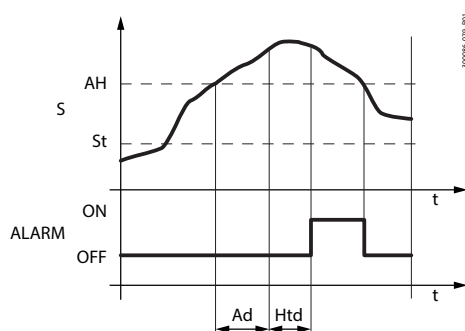


Fig. 9.d

| Ref.  | Description                                    |
|-------|------------------------------------------------|
| S     | Control probe                                  |
| St    | Set point                                      |
| ALARM | Type HA HACCP alarm                            |
| Ad    | Delay time for high and low temperature alarms |
| AH    | Low temperature alarm threshold                |
| Htd   | HACCP alarm delay - 0 = monitoring disabled    |
| t     | Time                                           |

| Code              | Description                                                           | Def | Min | Max | UOM | User | User terminal |
|-------------------|-----------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| HAn               | Number of type HA alarms                                              | 0   | 0   | 6   | -   | U    | YES           |
| HA1, HA2, HA3 (*) | Activation date and time of the first, second and third type HA alarm | ... | ... | ... | -   | U    | NO            |

#### Type HF alarms

The type HF HACCP alarm is generated following a power failure, if when power returns the temperature read by the control probe exceeds the AH high temperature threshold. HF<sub>n</sub> indicates the number of type HF alarms activated.

| Par.              | Description                                                           | Def | Min | Max | UOM | User | User terminal |
|-------------------|-----------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| HF <sub>n</sub>   | Number of type HF alarms                                              | 0   | 0   | 6   | -   | U    | YES           |
| HF1, HF2, HF3 (*) | Activation date and time of the first, second and third type HF alarm | ... | ... | ... | -   | U    | NO            |

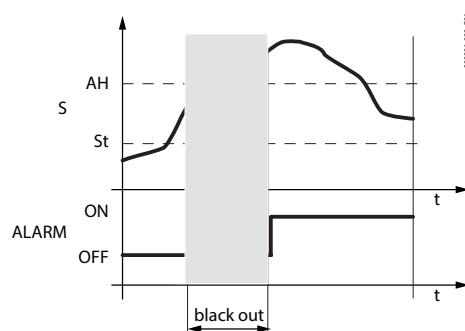


Fig. 9.e

(\*) Parameters visible in APPLICA.

| Ref.  | Description                     |
|-------|---------------------------------|
| S     | Control probe                   |
| St    | Set point                       |
| ALARM | Type HF HACCP alarm             |
| AH    | Low temperature alarm threshold |
| t     | Time                            |

The HA and HF alarms can be reset using parameter rSA.

The HACCP event log can be deleted using parameter rHP, from the configuration tool or in the Applica app (Bluetooth connection only).




**Notice:** deleting the HACCP event log is irreversible.

## 9.6 Dirty condenser alarm

If the condensing temperature probe is fitted, the iJF controller can monitor the reading so as to signal a dirty condenser alarm.

| Par. | Description                          | Def.   | Min      | Max     | UOM     | User | User terminal |
|------|--------------------------------------|--------|----------|---------|---------|------|---------------|
| /Fo  | Assign condensing temperature probe: | 0      | 0        | 7       | -       | S    | NO            |
|      | 0 disabled                           | 4      | S4       |         |         |      |               |
|      | 1 S1                                 | 5      | reserved |         |         |      |               |
|      | 2 S2                                 | 6      | S1H      |         |         |      |               |
|      | 3 S3                                 | 7      | S2H      |         |         |      |               |
| Ac   | Dirty condenser alarm threshold      | 70/158 | 0/32     | 250/482 | °C/°F   | S    | NO            |
| AE   | Dirty condenser alarm differential   | 5/9    | 0.1/0.2  | 20/36   | Δ °C/°F | S    | NO            |
| ACd  | Dirty condenser alarm delay          | 0      | 0        | 240     | min     | M    | NO            |

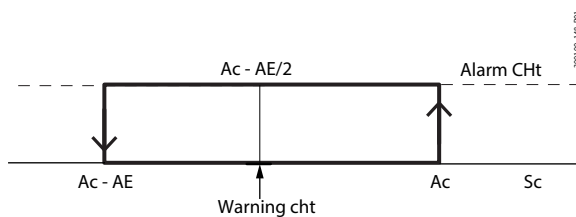

### Ref. Description

|     |                                      |
|-----|--------------------------------------|
| Sc  | Condensing temperature probe reading |
| Ac  | Dirty condenser alarm threshold      |
| AE  | Dirty condenser alarm differential   |
| ACd | Dirty condenser alarm delay          |
| cht | Dirty condenser warning              |
| CHT | Dirty condenser alarm                |


Fig. 9.f

When the temperature  $Ac - AE/2$  is exceeded, warning cht is generated to signal that the condenser is possibly obstructed. If the temperature subsequently returns below  $Ac - AE$ , the warning ceases automatically. If on the other hand the condensing temperature rises above the alarm threshold  $Ac$  for a time greater than the value set for parameter  $ACd$ , alarm CHT is generated and the compressor is stopped. Alarm CHT is reset manually; this is done by setting parameter rSA.

## 9.7 Frost protection alarm

If the frost protection temperature probe is fitted, the iJF controller can manage the frost protection alarm.

| Par. | Description                      | Def.  | Min      | Max     | UOM   | User | User terminal |
|------|----------------------------------|-------|----------|---------|-------|------|---------------|
| /Fq  | Assign frost protection probe:   | 0     | 7        | 1       | -     | S    | NO            |
|      | 0 disabled                       | 4     | S4       |         |       |      |               |
|      | 1 S1                             | 5     | reserved |         |       |      |               |
|      | 2 S2                             | 6     | S1H      |         |       |      |               |
|      | 3 S3                             | 7     | S2H      |         |       |      |               |
| AF   | Frost protection alarm threshold | -5/-9 | -50/-58  | 250/392 | °C/°F | S    | NO            |
| AFd  | Frost protection alarm delay     | 1     | 0        | 15      | min   | S    | NO            |

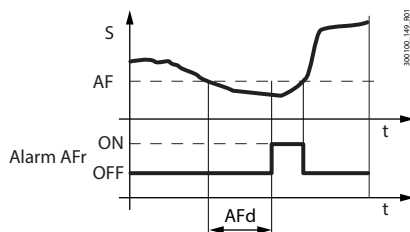

### Ref. Description

|     |                                  |
|-----|----------------------------------|
| t   | Time                             |
| AF  | Frost protection alarm threshold |
| AFd | Frost protection alarm delay     |
| AFr | Frost protection alarm           |
| S   | Frost protection temperature     |

Fig. 9.g

When the frost protection temperature falls below the alarm threshold  $AF$  for a time greater than the value set for parameter  $AFd$ , alarm  $Afr$  is generated and the compressor is stopped. Alarm  $Afr$  is reset automatically when the temperature rises above the threshold  $AF$ .

## 9.8 Refrigerant leak alarm rSF

The iJF controller manages an algorithm that checks if the temperature decreases after the compressor is switched on; if the temperature does not decrease sufficiently, the controller attempts to perform a number of defrosts. If even after defrosting the temperature still does not fall, it is assumed that there has been a refrigerant leak and manual-reset alarm rSF is generated, which stops the unit.

| Code | Description                                               | Def.    | Min     | Max     | UOM     | User | User terminal |
|------|-----------------------------------------------------------|---------|---------|---------|---------|------|---------------|
| d20  | Sampling time for alarm rSF                               | 0       | 0       | 240     | min     | M    | NO            |
| d16  | Time with no temperature decrease before starting defrost | 30      | Add     | 240     | min     | M    | NO            |
| d21  | Number of defrosts allowed before signalling alarm rSF    | 2       | 1       | 5       | -       | M    | NO            |
| d22  | Temperature difference to verify decrease                 | 0.1/0.2 | 0.1/0.2 | 0.5/0.9 | Δ °C/°F | M    | NO            |

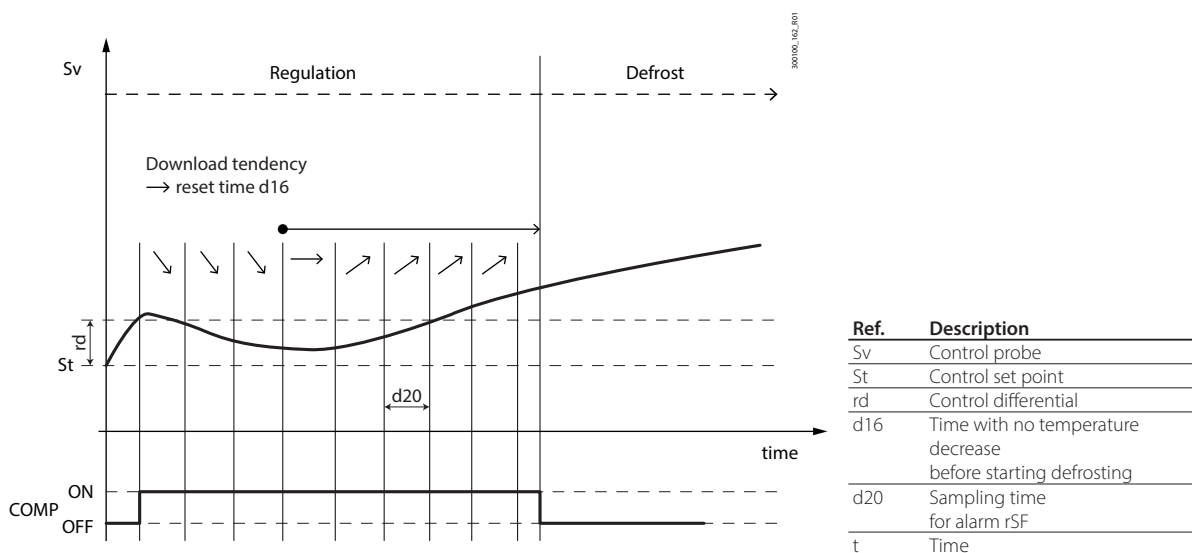


Fig. 9.h

After switching on the compressor, the iJF controller checks at the intervals set for d20 that the control temperature falls by at least by the value set for parameter d22; at the end of each interval, if the temperature decreases, the time with no temperature decrease is reset; on the other hand, if the temperature remains constant or increases, the controller starts counting the time with no temperature decrease, and on reaching the threshold set by parameter d16, a defrost is started. This operating cycle is repeated for a maximum number of defrosts set by parameter d21, after which alarm rSF is activated and the unit is switched off. Alarm rSF is reset manually using parameter rSA.

## 9.9 Maintenance alarm

The iJF controller can count the time that elapses since maintenance was last carried out, and signal a maintenance request alarm.

| Code | Description                                           | Def | Min | Max | UOM    | User | User terminal |
|------|-------------------------------------------------------|-----|-----|-----|--------|------|---------------|
| HMP  | Operating hour threshold for maintenance alarm hx1000 | 0   | 0   | 45  | h/1000 | M    | NO            |
| HMr  | Reset operating hours                                 | 0   | 0   | 1   | -      | S    | YES           |

If the RTC clock is available and working correctly, the iJF controller can count the number of hours that have elapsed since the last time the operating hours were reset. When the threshold set by parameter HMP is exceeded, the maintenance request alarm SrC is signalled. Alarm SrC is reset manually by resetting the operating hours using parameter HMr. Parameter HMr can be used to reset the count of operating hours since maintenance was last carried out even if the alarm has not been activated. If the operating hour threshold HMP=0 (default), the alarm is disabled.



**Notice:** the maintenance alarm can only be activated on models fitted with RTC and with the clock set correctly.

## 9.10 VCC compressor alarms with serial control

For VCC compressors with serial control, the iJF controller manages several additional alarms, either detected by the inverter or by the controller itself:

|                            | Description                 | Message on the display |
|----------------------------|-----------------------------|------------------------|
| Detected by the inverter   | Failed start-up             | UCF                    |
|                            | Overload condition          |                        |
|                            | Short circuit               |                        |
|                            | Incorrect rotor position    |                        |
|                            | Overtemperature             |                        |
| Detected by the controller | Serial communication errors | COM                    |
|                            | Offline                     |                        |

Tab. 9.d

| Par. | Description                                                                                                 | Def | Min | Max | UOM | User | User terminal |
|------|-------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| CoA  | Display alarms detected by the inverter:<br>0 = display disabled; 1 = display enabled.                      | 1   | 0   | 1   | -   | M    | NO            |
| Ctd  | Maximum VCC inverter communication failure time before alarm is shown on the display (0 = display disabled) | 15  | 0   | 60  | s   | M    | NO            |

To stop these alarms being shown on the display, set the following parameters:

- CoA = display alarms detected by the inverter; when the inverter detects a VCC malfunction, alarm UCF is shown on the display.
- Ctd = maximum time with no communication before the alarm is shown on the display; when the iJF controller detects no communication with the inverter for a time equal to Ctd, alarm COM is shown on the display.



**Notice:** to disable the alarms relating to VCC compressors on models with the VCC option yet without the inverter connected, set parameters cct and ctd to zero.

## 10. LOGS

The iJF controller can record both periodic and event logs, which can then be viewed and downloaded using the Applica app and commissioning tools. To view the logs from Applica, select Service Area -> Trend -> (tab) Logs for the periodic logs, or Service Area -> Trend -> (tab) Events for event logs:

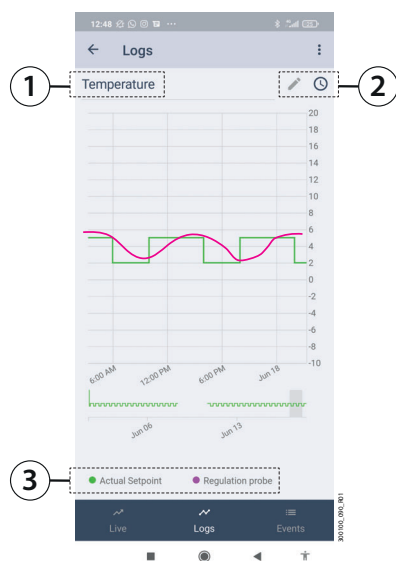


Fig. 10.a

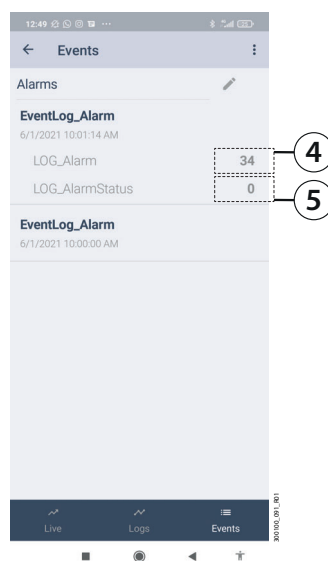


Fig. 10.b

| Ref. | Description                              |
|------|------------------------------------------|
| 1    | Preset                                   |
| 2    | Periodically logged variables            |
| 3    | Tools to modify the display              |
| 4    | Alarm status (0= not active; 1 = active) |
| 5    | Alarm code (See the Alarm table)         |

The log view is pre-set, however it can be changed using the editing tools. In addition, the pre-set views loaded on the device allow the main values to be filtered (temperature, HACCP alarms, blackouts, etc.). To download the logs, use the drop-down menu at the top right.

### 10.1 Periodic logs

The periodic logs record the main values at regular intervals, as shown in the table.

| Logged value                             | UOM   | Period |
|------------------------------------------|-------|--------|
| Control temperature                      | °C/°F | 5 min  |
| Current temperature set point.           | °C/°F | 1 h    |
| Current humidity                         | % rh  | 1 h    |
| Current humidity set point               | % rh  | 1 h    |
| Maximum temperature in the period        | °C/°F | 1 h    |
| Minimum temperature in the period        | °C/°F | 1 h    |
| Current evaporation temperature          | °C/°F | 1 h    |
| Current condensing temperature           | °C/°F | 1 h    |
| Compressor, minutes ON in the period     | min   | 1 h    |
| Compressor, starts in the period         | -     | 1 h    |
| Evaporator fan, minutes ON in the period | min   | 1 h    |
| Lights, minutes ON in the period         | min   | 1 h    |
| Defrost, minutes ON in the period        | min   | 1 h    |
| Low temperature alarm relative threshold | Δ °C  | 1 h    |
| Low temperature alarm relative threshold | Δ °C  | 1 h    |

Tab. 10.a

### 10.2 Event log

Event logs are recorded when specific conditions occur, and can be used to store certain related values, as shown in the table.

| Logged value | Event            | Other recorded values                                                             | Number of samples (*) | Limits        |
|--------------|------------------|-----------------------------------------------------------------------------------|-----------------------|---------------|
| Alarm        | Alarm activation | Number of the active alarm with highest priority.<br>Alarm status (active/ceased) | 100                   | max 255 alarm |
| Blackout     | Device ON        | Power failure duration in minutes                                                 | 100                   | 1000 hours    |
| HACCP alarms | HA or HF alarm   | Type HA or HF alarm                                                               | 50                    | -             |

Tab. 10.b

(\*) The samples are stored in a circular FIFO list (e.g. for the alarms, the 21st alarm overwrites the 1st alarm, and so on). The type of alarm recorded in the log can be identified using the alarm code (see the Alarm table).



**Caution:** changing the time set on the iJF controller by more than 140 minutes will clear the stored logs.

# 11. APPENDIX

## 11.1 ir33 and IJ parameter compatibility table

The table below shows the parameters from the Carel PJ and IR33 platforms that have changed name or function in the IJ platform. The parameters not listed in this chapter have retained the same name and the same function.

| ir33                  | IJ  | Description                                                                                                                                                                                                                                                                       | Default | Min      | Max    | UOM      |
|-----------------------|-----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|----------|--------|----------|
| AF                    | -   | Not present                                                                                                                                                                                                                                                                       | -       | -        | -      | -        |
| AP                    | -   | Not present                                                                                                                                                                                                                                                                       | -       | -        | -      | -        |
| Apd                   | -   | Not present                                                                                                                                                                                                                                                                       | -       | -        | -      | -        |
| H6                    | -   | Not present                                                                                                                                                                                                                                                                       | -       | -        | -      | -        |
| H9                    | -   | Not present                                                                                                                                                                                                                                                                       | -       | -        | -      | -        |
| /c1, /c2,             | /cA | Outlet temperature probe (Sm) calibration                                                                                                                                                                                                                                         | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
| /c3, /c4, /c5         | /cb | Defrost temperature probe (Sd) calibration                                                                                                                                                                                                                                        | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cc | Intake temperature probe (Sr) calibration                                                                                                                                                                                                                                         | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cF | Auxiliary evaporator defrost temperature probe (Sd2) calibration                                                                                                                                                                                                                  | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cg | Auxiliary temperature probe 1 calibration                                                                                                                                                                                                                                         | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cH | Auxiliary temperature probe 2 calibration                                                                                                                                                                                                                                         | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cl | Ambient temperature probe calibration                                                                                                                                                                                                                                             | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cM | Glass temperature probe calibration                                                                                                                                                                                                                                               | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /co | Condensing temperature probe calibration                                                                                                                                                                                                                                          | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cp | Humidity probe calibration                                                                                                                                                                                                                                                        | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cq | Frost protection temperature probe calibration                                                                                                                                                                                                                                    | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
|                       | /cr | Product temperature probe calibration                                                                                                                                                                                                                                             | 0       | -20/ -36 | 20/ 36 | Δ °C/ °F |
| /A2, /A3,<br>/A4, /A5 | /FA | Assign outlet temperature probe (Sm)<br>0 = Function disabled<br>1 = Probe S1<br>2 = Probe S2<br>3 = Probe S3<br>4 = Probe S4<br>5 = Reserved<br>6 = Probe S1H<br>7 = Probe S2H                                                                                                   | 1       | 0        | 7      | -        |
|                       | /Fb | Assign defrost temperature probe (Sd) - see /FA                                                                                                                                                                                                                                   | 0       | 0        | 7      | -        |
|                       | /Fc | Assign intake temperature probe (Sr) - see /FA                                                                                                                                                                                                                                    | 0       | 0        | 7      | -        |
|                       | /FF | Assign auxiliary evaporator defrost temperature probe (Sd2) - see /FA                                                                                                                                                                                                             | 0       | 0        | 7      | -        |
|                       | /FG | Assign auxiliary temperature probe 1 (Saux1) - see /FA                                                                                                                                                                                                                            | 0       | 0        | 7      | -        |
|                       | /FH | Assign auxiliary temperature probe 2 (Saux1) - see /FA                                                                                                                                                                                                                            | 0       | 0        | 7      | -        |
|                       | /FI | Assign ambient temperature probe (SA) - see /FA                                                                                                                                                                                                                                   | 0       | 0        | 7      | -        |
|                       | /FM | Assign glass temperature probe (Svt) - see /FA                                                                                                                                                                                                                                    | 0       | 0        | 7      | -        |
|                       | /Fo | Assign condensing temperature probe - see /FA                                                                                                                                                                                                                                     | 0       | 0        | 7      | -        |
|                       | /FP | Assign humidity probe (fixed on S5)                                                                                                                                                                                                                                               | 5       | 5        | 5      | -        |
|                       | /Fq | Assign frost protection temperature probe - see /FA                                                                                                                                                                                                                               | 0       | 0        | 7      | -        |
|                       | /FR | Assign product temperature probe - see /FA                                                                                                                                                                                                                                        | 0       | 0        | 7      | -        |
| H2                    | /nE | Enable user terminal navigation:<br>0 = enabled; 1 = disabled                                                                                                                                                                                                                     | 0       | 1        | 1      | -        |
| /P                    | /P1 | Configuration of probes S1, S2, S3, S4, B5<br>0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT.                                                                                                                                                                               | 2       | 0        | 4      | -        |
|                       | /P2 | Configuration of multifunction input S3/DI1:<br>0, 1, 2, 3, 4 = S3; 5 = DI1.                                                                                                                                                                                                      | 5       | 0        | 5      | -        |
| /tl                   | /t1 | Display on user terminal:<br>0 = Not configured<br>1 = value of S1<br>2 = value of S2<br>3 = value of S3<br>4 = value of S4<br>5 = value of S1H<br>6 to 8 = not available<br>9 = control probe<br>10 = virtual probe<br>11 to 14 = not available<br>15 = actual control set point | 9       | 0        | 15     | -        |
| /tE                   | /t2 | Display on remote display - see /t1                                                                                                                                                                                                                                               | 0       | 0        | 15     | -        |
| A8                    | A3  | Defrost terminated after maximum time signal:<br>0 = disabled; 1 = enabled                                                                                                                                                                                                        | 30      | 1        | 240    | min      |
| d8d                   | Add | High temp. alarm bypass time for door open                                                                                                                                                                                                                                        | -5.0    | -50.0    | 200.0  | °C/°F    |
| ALF                   | AF  | Frost protection alarm threshold                                                                                                                                                                                                                                                  | 1       | 0        | 15     | min      |
| AdF                   | Afd | Frost protection alarm delay time                                                                                                                                                                                                                                                 | 1       | 0        | 15     | min      |
| d9                    | c7  | Defrost priority over continuous cycle:<br>0 = continuous cycle has priority; 1 = defrost has priority                                                                                                                                                                            | 0       | 0        | 1      | -        |
| cc, cPd               | cc  | Continuous cycle running time (0 = disabled)                                                                                                                                                                                                                                      | 0       | 0        | 72     | h        |
| c7                    | cPt | Maximum pump down time (0 = pump down disabled)                                                                                                                                                                                                                                   | 0       | 0        | 900    | s        |
| d3                    | d15 | Start defrost threshold                                                                                                                                                                                                                                                           | 0       | 0        | 240    | min      |
| d12                   | d7  | Skip defrost: 0 = disabled; 1 = enabled                                                                                                                                                                                                                                           | 0       | 0        | 1      | -        |

| ir33       | iJ                        | Description                                                                                                                                                                                                                                               | Default                  | Min      | Max      | UOM           |
|------------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|----------|----------|---------------|
| A4, A5, A9 | DIA                       | Assign immediate external alarm digital input:<br>0 = Disabled; 1 = ID1; 2 = ID2; 3 = D1H; 4 = D2H.                                                                                                                                                       | 0                        | 0        | 4        | -             |
|            | Dib                       | Assign delayed external alarm digital input - see DIA                                                                                                                                                                                                     | 0                        | 0        | 4        | -             |
|            | Dic                       | Assign enable defrost digital input - see DIA                                                                                                                                                                                                             | 0                        | 0        | 4        | -             |
|            | DId                       | Assign start defrost digital input - see DIA                                                                                                                                                                                                              | 0                        | 0        | 4        | -             |
|            | DIE                       | Assign door switch with compressor OFF digital input - see DIA                                                                                                                                                                                            | 0                        | 0        | 4        | -             |
|            | DIF                       | Assign remote ON/OFF digital input - see DIA                                                                                                                                                                                                              | 0                        | 0        | 4        | -             |
|            | DIG                       | Assign curtain switch digital input - see DIA                                                                                                                                                                                                             | 0                        | 0        | 4        | -             |
|            | DIH                       | Assign start/stop continuous cycle digital input - see DIA                                                                                                                                                                                                | 0                        | 0        | 4        | -             |
|            | DIo                       | Assign working parameter set changeover digital input - see DIA                                                                                                                                                                                           | 0                        | 0        | 4        | -             |
|            | DIP                       | Assign door switch without compressor OFF digital input - see DIA                                                                                                                                                                                         | 0                        | 0        | 4        | -             |
|            | DIS                       | Assign generic function alarm digital input logic - see DIA                                                                                                                                                                                               | 0                        | 0        | 4        | -             |
|            | DIt                       | Assign low pressure switch digital input - see DIA                                                                                                                                                                                                        | 0                        | 0        | 4        | -             |
|            | DIU                       | Assign AUX output activation digital input - see DIA                                                                                                                                                                                                      | 0                        | 0        | 4        | -             |
| H1, H5     | DOA                       | Assign solenoid/compressor digital output<br>0 = not configured      4 = digital output 4 (NO4)<br>1 = digital output 1 (NO1)      5 = digital output 5 (NO5)<br>2 = digital output 2 (NO2)      6 = digital output 6 (NO6)<br>3 = digital output 3 (NO3) | 1 (small)<br>/ 5 (large) | 0        | 6        | -             |
|            | DOb                       | Assign alarm digital output - see DOA                                                                                                                                                                                                                     | 0 (small) /<br>2 (large) | 0        | 6        | -             |
|            | DOC                       | Assign AUX auxiliary digital output - see DOA                                                                                                                                                                                                             | 0 (small) /<br>1 (large) | 0        | 6        | -             |
|            | DOE                       | Assign light digital output - see DOA                                                                                                                                                                                                                     | 4 (small) /<br>3 (large) | 0        | 6        | -             |
|            | DOG                       | Assign defrost digital output - see DOA                                                                                                                                                                                                                   | 2 (small) /<br>6 (large) | 0        | 6        | -             |
|            | DOH                       | Assign auxiliary evaporator defrost digital output - see DOA                                                                                                                                                                                              | 0                        | 0        | 6        | -             |
|            | DOI                       | Assign evaporator fan digital output - see DOA                                                                                                                                                                                                            | 0                        | 0        | 6        | -             |
|            | DOj                       | Assign dehumidification digital output - see DOA                                                                                                                                                                                                          | 0                        | 0        | 6        | -             |
|            | DOK                       | Assign auxiliary compressor without rotation digital output - see DOA                                                                                                                                                                                     | 0                        | 0        | 6        | -             |
|            | DOn                       | Assign pump down valve digital output - see DOA                                                                                                                                                                                                           | 0                        | 0        | 6        | -             |
|            | DOP                       | Assign drain heater digital output - see DOA                                                                                                                                                                                                              | 0                        | 0        | 6        | -             |
|            | DOQ                       | Assign anti-sweat heater digital output - see DOA                                                                                                                                                                                                         | 0                        | 0        | 6        | -             |
|            | DOS                       | Assign generic On/Off function digital output - see DOA                                                                                                                                                                                                   | 0                        | 0        | 6        | -             |
|            | DOt                       | Assign condenser fan digital output - see DOA                                                                                                                                                                                                             | 0                        | 0        | 6        | -             |
|            | DOu                       | Assign humidification digital output - see DOA                                                                                                                                                                                                            | 0                        | 0        | 6        | -             |
|            | DOv                       | Assign reverse digital output with dead band control - see DOA                                                                                                                                                                                            | 0                        | 0        | 6        | -             |
|            | DOw                       | Assign auxiliary parallel compressor digital output - see DOA                                                                                                                                                                                             | 0                        | 0        | 6        | -             |
|            | DOx                       | Assign gasket heater digital output - see DOA                                                                                                                                                                                                             | 0                        | 0        | 6        | -             |
|            | DOy                       | Assign auxiliary compressor with rotation digital output - see DOA                                                                                                                                                                                        | 0                        | 0        | 6        | -             |
|            | DOz                       | Assign external dehumidifier digital output - see DOA                                                                                                                                                                                                     | 0                        | 0        | 6        | -             |
| F5         | F5d                       | Condenser fan activation differential                                                                                                                                                                                                                     | 5/ 9                     | 0.1/ 0.2 | 60/ 108  | °C/°F         |
| Ado        | H14                       | Time light stays on after closing the door                                                                                                                                                                                                                | 0                        | 0        | 240      | min           |
| H4         | Hb                        | Buzzer: 0 = disabled; 1 = enabled                                                                                                                                                                                                                         | 1                        | 0        | 1        | -             |
| HF         | HF1                       | Activation date and time of the first, second and third type HF alarm                                                                                                                                                                                     | ...                      | ...      | ...      | -             |
| Hdn        | IS                        | Configuration to be loaded (0 = no configuration selected)                                                                                                                                                                                                | 0                        | 0        | ...      | -             |
| Pw         | PDM                       | Manufacturer password (OEM)                                                                                                                                                                                                                               | 44                       | 0        | 999      | -             |
|            | PDS                       | Service password                                                                                                                                                                                                                                          | 22                       | 0        | 999      | -             |
|            | PDU                       | User password                                                                                                                                                                                                                                             | 0                        | 0        | 999      | -             |
| r3         | r30                       | Control mode:<br>0 = direct with defrost; 1 = direct; 2 = reverse                                                                                                                                                                                         | 0                        | 0        | 2        | -             |
| r5         | rM                        | Enable temperature monitoring:<br>0 = disabled; 1 = enabled                                                                                                                                                                                               | 0                        | 0        | 1        | -             |
| tof_d_     | tE1- d, ..., tE8- d       | End time band 1 to 8 - day, see (td1...8-d)                                                                                                                                                                                                               | 0                        | 0        | 11       | -             |
| tof_h_     | tE1- hh, ..., tE8- hh     | End time band 1 to 8 - hours                                                                                                                                                                                                                              | 0                        | 0        | 23       | hours         |
| tof_m_     | tE1- mm, ..., tE8- mm     | End time band 1 to 8 - minutes                                                                                                                                                                                                                            | 0                        | 0        | 59       | minutes       |
| toF        | tE1- time, ..., tE8- time | End time band 1 to 8 (Applica)                                                                                                                                                                                                                            | 0:00:00                  | 0:00:00  | 23:59:59 | -             |
| ton_d_     | tS1- d, ..., tS8- d       | Start time band 1 to 8 - day, see (td1...8-d)                                                                                                                                                                                                             | 0                        | 0        | 11       | -             |
| ton_h_     | tS1- hh, ..., tS8- hh     | Start time band 1 to 8 - hours                                                                                                                                                                                                                            | 0                        | 0        | 23       | hours         |
| ton_m_     | tS1- mm, ..., tS8- mm     | Start time band 1 to 8 - minutes                                                                                                                                                                                                                          | 0                        | 0        | 59       | minutes       |
| ton        | tS1- time, ..., tS8- time | Start time band 1 to 8 (Applica)                                                                                                                                                                                                                          | 0:00:00                  | 0:00:00  | 23:59:59 | -             |
| -          | cuF                       | Conversion factor from frequency (Hz) to compressor speed (rpm)                                                                                                                                                                                           | 30                       | 0        | 999      | rpm *1/<br>hz |

Tab. 11.a

## 11.2 Input/output configuration procedure

The inputs and outputs can be configured in the Applica app or configuration tool by setting the corresponding parameters.



Fig. 11.a

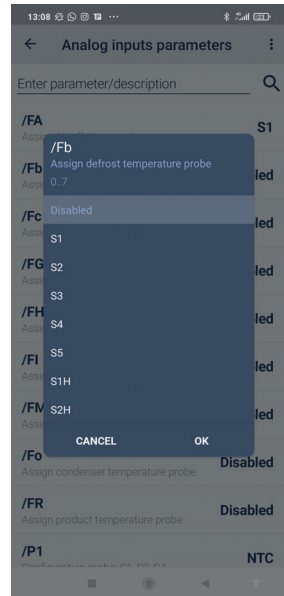


Fig. 11.b

### Procedure:

1. open Applica on the smartphone;
2. access the controller via NFC or Bluetooth, entering the profile credentials;
3. move the device closer to the iJF from to modify the input/output configuration on (NFC connection only);
4. access Service Area-> I/O;
5. select the Inputs or Outputs tab;
6. select the modification tool corresponding to the group of inputs/outputs to be modified;
7. select the parameter corresponding to the function to be added or modified (the example in the figure shows the defrost probe assignment) and set the input/output to be associated with the function; press OK to confirm;
9. select "Write" from the drop-down menu at the top right, move the device closer to the iJF and tap "Applica" (NFC connection only).

### Analogue inputs

| Code | Description                                                                                                                                                                     | Def | Min | Max | UOM | User | User terminal |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-----|-----|------|---------------|
| /P1  | Configuration of probes S1, S2, S3, S4, B5<br>0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT                                                                              | 2   | 0   | 4   | -   | M    | NO            |
| /P2  | Configuration of multifunction input S3/ DI1:<br>0, 1, 2, 3, 4 = S3; 5 = DI1                                                                                                    | 5   | 0   | 5   | -   | M    | NO            |
| /FA  | Assign outlet temperature probe (Sm)<br>0 = Function disabled<br>1 = Probe S1<br>2 = Probe S2<br>3 = Probe S3<br>4 = Probe S4<br>5 = Reserved<br>6 = Probe S1H<br>7 = Probe S2H | 1   | 0   | 7   | -   | M    | NO            |
| /Fb  | Assign defrost temperature probe (Sd) - see /FA                                                                                                                                 | 0   | 0   | 7   | -   | M    | NO            |
| /Fc  | Assign intake temperature probe (Sr) - see /FA                                                                                                                                  | 0   | 0   | 7   | -   | M    | NO            |

To set the type of probe, use parameter /P1.

### Digital inputs

| Code | Description                                                          | Def | Min | Max    | UOM | User | User terminal |
|------|----------------------------------------------------------------------|-----|-----|--------|-----|------|---------------|
| D1b  | Assign delayed external alarm digital input - see DIA                | 0   | 0   | 4      | -   | M    | NO            |
| D1c  | Assign enable defrost digital input - see DIA                        | 0   | 0   | 4      | -   | M    | NO            |
| D1d  | Assign start defrost digital input - see DIA                         | 0   | 0   | 4      | -   | M    | NO            |
| D1E  | Assign door switch with compressor OFF digital input - see DIA       |     |     |        |     |      |               |
| D1F  | Assign remote ON/OFF digital input - see DIA                         |     |     |        |     |      |               |
| D1G  | Assign curtain switch digital input - see DIA                        | 0   | 0   | 4      | -   | M    | NO            |
| D1H  | Assign start/stop continuous cycle digital input - see DIA           | 0   | 0   | 4      | -   | M    | NO            |
| D1o  | Assign working parameter set changeover digital input - see DIA      | 0   | 0   | 4      | -   | M    | NO            |
| D1P  | Assign door switch without compressor OFF digital input - see DIA    | 0   | 0   | 4      | -   | M    | NO            |
| D1S  | Assign generic function alarm digital input logic - see DIA          | 0   | 0   | 4      | -   | M    | NO            |
| D1t  | Assign low pressure switch digital input - see DIA                   | 0   | 0   | 4      | -   | M    | NO            |
| D1U  | Assign AUX output activation digital input - see DIA                 | 0   | 0   | 4      | -   | M    | NO            |
| rS1  | Working parameter set associated with open digital input - see D1o   | 1   | 0   | IS_max | -   | M    | NO            |
| rS2  | Working parameter set associated with closed digital input - see D1o | 2   | 0   | IS_max | -   | M    | NO            |

## 11.3 Setting the default parameters/loading the parameter sets

The working set contains the group of parameters used by the iJF controller during normal operation. This set is loaded whenever the iJF controller is started, and the parameters can be modified at any time from the terminal, supervisor, Applica app and configuration software. This set of parameters, customised by the user to control their refrigeration system, can be saved in a configuration using Applica. Subsequently the configuration can be retrieved and loaded onto the controller again using Applica.

iJF also stores a default parameter set in its memory; this set can never be overwritten, being stored in a non-modifiable memory area. The default configuration can be loaded to restore the system to factory conditions.

Various parameter configurations can also be loaded into the device's internal memory, and then selected as the working set as desired. A specific parameter can therefore be set to apply the different configurations directly from the terminal or in Applica. The configurations can be created, modified and applied using specific configuration tools distributed by Carel (Spark and Sparkly) or can be loaded during production phase (see "Preparing and using the configurations" for details).

### 11.3.1 Procedure for setting the default parameters/loading the parameter sets

| Par.   | Description                       | Def. | Min. | Max.   | UoM |
|--------|-----------------------------------|------|------|--------|-----|
| IS     | Working configuration             | 0    | 0    | IS_Max | -   |
| IS_max | Number of embedded configurations | 0    | 0    | 999    | -   |
| rSC    | Restore default values            | 0    | 0    | 1      | -   |

#### User terminal (see "User interface" for details)

Procedure:

1. unlock the keypad by holding the PROGRAM button for 3 s;
2. access the parameter setting menu by pressing the PROGRAM button;
3. use the UP and DOWN buttons to scroll the submenus until selecting "Ctl";
4. use the UP and DOWN buttons to scroll the parameters until selecting "rSC" to restore the Carel default values, or "IS" to load one of the parameter sets available on the controller;
5. to reset the parameters to the default values, after having selected parameter "rSC", press UP/DOWN to set the value 1 and confirm by pressing PROGRAM;
6. to load one of the parameter sets available on the controller, after selecting parameter "IS", press UP/DOWN to choose the value corresponding to the parameter set to be loaded as the working set, and confirm by pressing PROGRAM.

#### Applica

Procedure:

1. open Applica on the smartphone;
2. access the controller via NFC or Bluetooth, entering your profile credentials;
3. scroll to parameter "rSC" (if enabled in the access profile) to restore the Carel default values, or "IS" to load one of the parameter sets available on the controller;
4. set parameter "rSC" or "IS" and confirm.



**Notice:** the visibility of parameters "rSC" and "IS" depends on the access profile used and whether or not there are any preloaded configurations, respectively.

Applying a configuration means copying the set values of the configuration parameters to the working parameters. Any empty parameters (parameters without values set in that configuration) will remain unaffected. The copy procedure is started by changing the value of parameter IS.

Once the configuration has been applied, the value of any of the parameters can be modified without affecting the configuration loaded on the controller, which can thus be recalled at any time, firstly setting the corresponding parameter to 0 and then to the value associated with the desired configuration.



- Notice:**
- the parameters contained in a configuration cannot be modified in any way.
  - Any parameters that are not included in the configuration will remain unchanged, even if the configuration used is changed.
  - Recalling the factory parameters resets the settings without however changing the configurations.

## 11.4 Copy configuration parameters

To simplify operations in the field, Applica includes a "Clone" feature to acquire the configuration from one iJF and replicate it on other controllers.

Procedure:

1. open Applica on the smartphone;
2. access the controller via NFC or Bluetooth, entering the profile credentials;
3. follow the path "Configurations/Clone";
4. move the smartphone closer to the iJF controller to acquire the configuration from (NFC connection only);
5. following the acknowledgement message, move the smartphone closer to the iJF controller to apply the same configuration to (NFC connection only);
6. wait for the cloning confirmation message to be shown.

**Notice:** cloning copies all of the parameters, even those not visible to the user based on the access profile. On the other hand, to copy only the parameters that are visible to the user, use the "Create configuration" option, accessible from Service Area -> Setup -> Parameter list.

## 11.5 Preparing and using the configurations

A configuration is a set of code-value pairs that can contain all, some, or just one parameter.

Example: configuration "1":

rd = 3  
St = 2.5  
dl = 10  
d0 = 1

**Notice:** it is strongly recommended for all configurations to contain the same parameters, to avoid any parameter setting errors that may cause alarms or malfunctions.

The following procedure describes how to create the configurations, load them onto the controller and recall them using the tools described under "Configuration tools".

### 11.5.1 Creating configurations

Spark is the tool used to create configurations.

Procedure:

1. open Spark;
2. open the workspace provided by Carel (unique for each software version)
3. select the "Configurations" tab;
4. select "New configuration" and enter the configuration name, which must be a progressive number;
5. in the parameter list, enter the values corresponding to the parameters to be included in the configuration in the "Configuration value" column.

**Notice:** the configuration name must be a progressive number, with the following format: 1, 2, 3 ... n, other names or non-consecutive values are not allowed.

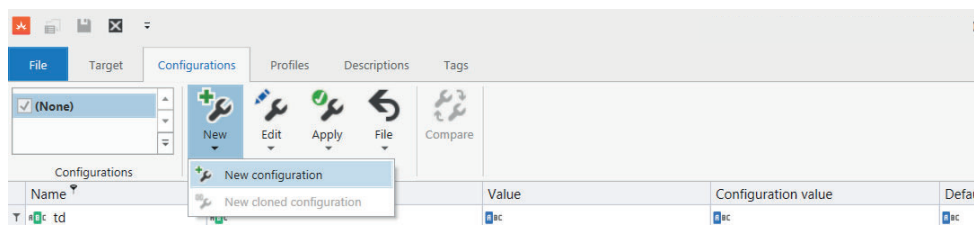


Fig. 11.c

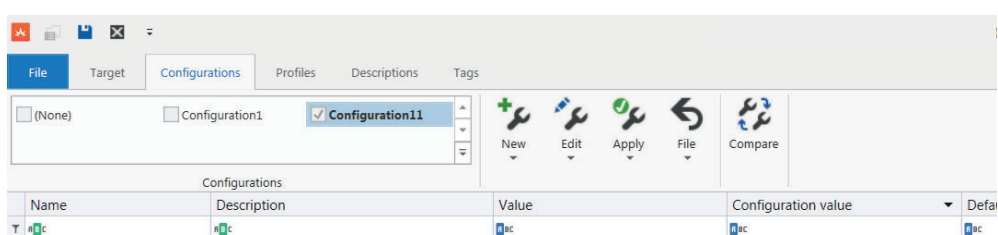


Fig. 11.d

### Installing the configurations

Sparkly is the tool used to install configurations on iJF.

Procedure:

1. create a folder on the PC or laptop (C:\Temp);
2. create configurations using Spark and save them in the folder created previously;
3. save the .pack file containing the iJF software version supplied by Carel in the same folder (e.g. HQ000IJF000B0.pack);
4. run Sparkly and write the following command: `pack- file embed - - src "C:\Temp\HQ000IJF000B0.pack" - - configurations "C:\Temp\1.stconfiguration""C:\Temp\2.stconfiguration""C:\Temp\n.stconfiguration"`
5. Press "Enter".



**Notice:** the configurations must be named with progressive numbers (1.stconfiguration, 2.stconfiguration, etc.). All of the configurations must be entered, no skipped or missing numbers are allowed.

The new .pack file containing the configurations will be generated in the folder and is ready to be installed on the controller.

### "Auto-start" configuration

When the .pack file containing the configurations has been created, the configuration that iJF will use at power-on (auto-start) can be selected, rather than using parameter IS (see "Selecting a configuration") by simply adding the configuration name to the end of the string.

**Example:** the command `pack- file embed - - src "C:\Temp\HQ000IJF000B0_1_3_1.pack" - - configurations "C:\Temp\1.stconfiguration""C:\Temp\2.stconfiguration" - - auto- start "2"` will create a .pack file with the second configuration as auto-start.

### Installing configurations via BMS using the CVSTDUMOR0 converter

To install the new .pack file containing the configurations on the iJF controller, run Sparkly and write the following command: `app download - - src "HQ000IJF000B0.pack" - - connection Serial,COM4,115200N2,1 - - working directory "C:\Temp"`, where COMx is the COM port the converter is connected to, and then press "Enter". Where:

- HQ000IJF000B0: is the name of the .pack file containing the configurations; if modified, it must be replaced by the name of the new .pack file generated using Sparkly;
- COM4: this must be replaced with the COM port used for connection to iJF;
- 115200: the serial communication speed must correspond to the value of parameter H10 on iJF; recommended value at 115200 bps (H10 = 7) for faster loading;
- C:\Temp: is the folder containing the files described above;
- 1: must be replaced with the device's serial address (parameter H0, factory set to 1)

### Installing configurations via digital input ID2 using the BXOPZIOWD0000 converter

To install the new .pack file containing the configurations on the iJF controller, run Sparkly and write the following command to enable digital input ID2 as a serial port on iJF: `device enable-serial-on-ID --port COMx --interval 30` and then power on the controller.

From this point on the commands are the same as those used via BMS.



**Notice:** the serial communication speed for ID2 is fixed at 57600 bps, regardless of the value set for H10.

## 12. RELEASE NOTES

The software version is shown for a few seconds when the controllers with user interface are switched on (first two digits only), via the BMS variable or Applica app.

The correspondence between the software version and the manual version is shown below.

| Software version | Manual version | Description     |
|------------------|----------------|-----------------|
| 1.2.2            | 1.2            | First release   |
| 1.3.1            | 20-09-2021     |                 |
| 1.5.0            | 1.3            | Typos corrected |
|                  | 29-04-2022     |                 |





**CAREL INDUSTRIES - Headquarters**

Via dell'Industria, 11 - 35020 Brugine - Padova (Italy)  
Tel. (+39) 049.9716611 - Fax (+39) 049.9716600  
e-mail: [carel@carel.com](mailto:carel@carel.com) - [www.carel.com](http://www.carel.com)

iJF +0300100EN rel. 1.3 - 29.04.2022